

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Vixic](#) /
- › [Vixic D480BT Label Maker Instruction Manual](#)

## Vixic D480BT

# Vixic D480BT Label Maker Instruction Manual

## INTRODUCTION

---

This manual provides detailed instructions for the Vixic D480BT Label Maker. This multifunctional device features a built-in QWERTY keyboard, Bluetooth connectivity for smartphones via the "Print Master" app, and PC connectivity via USB or Bluetooth using the "Labelife" software. It supports label widths up to 18mm (3/4 inch) and offers five lines of content printing, a backlit LCD screen, and a built-in cutter. The device is powered by a 1200mAh rechargeable battery for portable use.

## WHAT'S IN THE BOX

---

Please verify that all items listed below are included in your package:

- 1 x Vixic 480BT Label Maker
- 1 x User Manual
- 1 x USB Type-C Cable
- 1 x Sample Laminated Label Tape 18mm x 4m (pre-installed in the label maker)

# Packing List

- 1 x Vixic 480BT Label Maker
- 1 x User Manual
- 1 x USB Type-C Cable
- 1 x Sample Laminated Label Tape 18mm x 4m (inside the label maker)



Image: Contents of the Vixic D480BT Label Maker package.

## SETUP

### 1. Charging the Device

The Vixic D480BT Label Maker is equipped with a 1200mAh rechargeable battery and uses a Type-C charging port. Before initial use, ensure the device is fully charged. The power indicator will stop flashing once fully charged.

Video: Demonstrates connecting the Type-C charging cable and observing the charging indicator until the battery is full.

### 2. Inserting the Tape Cassette

To insert or replace the label tape, open the tape compartment cover. Ensure the tape is properly aligned within the guides and that the toothed wheel is tightened. Pull approximately 1 inch of tape out through the paper outlet before closing the cover.

Video: Shows the process of opening the label maker, inserting a tape cassette, rotating the toothed wheel, and pulling the tape through the guides.

## OPERATING INSTRUCTIONS

---

### 1. Basic Operation

To begin, press the power button to turn on the device. Use the QWERTY keyboard to enter your desired text or numbers. You can select a decorative frame using the 'Frame' button, adjust font settings with 'Font', and change margin modes. Once your label is ready, press the 'Print' button. The built-in cutter will trim the label automatically.

Video: Demonstrates powering on the device, typing text, selecting a frame, and printing a basic label with automatic cutting.

### 2. Barcode Printing

The label maker supports barcode printing. Navigate to the barcode settings, select the desired barcode type (e.g., EAN8), and input the barcode data. Confirm your selection and press 'Print' to generate the barcode label.

Video: Illustrates how to access barcode settings, select a barcode type, input data, and print a barcode label.

### 3. Save and Open Files

You can save your created label designs for future use. After inputting text, navigate to the 'File' option, select 'Save', and choose a location. To open a saved file, select 'Open' from the 'File' menu and choose the desired label.

Video: Demonstrates saving a label design and opening a previously saved file for printing.

### 4. Multi-copy Printing

To print multiple copies of the same label, input your text, then select the number of copies (up to 9). Press 'Print'. You can choose to cut each label individually after printing or print all copies and then cut them all at once. For consecutively printing up to 20 different labels, use the multi-copy editing function by entering each label's text and then printing.

Video: Shows how to print multiple copies of the same label, manage cutting options, and use the multi-copy editing function for different labels.

### 5. Delete Text and Format

To delete characters one by one, use the backspace key. To clear all text or text and format, press the 'Clear' button and select the appropriate option.

Video: Demonstrates deleting individual characters and clearing all text or text and format.

### 6. Print from Your Computer

The Vixic D480BT can connect to your computer via USB or Bluetooth. For USB connection, simply plug the device into your computer. For Bluetooth, open the Bluetooth function on both your computer and the label maker. Visit [labelife.cc](http://labelife.cc) to download the necessary software and drivers. Once connected, you can create and print labels using the Labelife editor.

Video: Illustrates connecting the label maker to a computer via USB and Bluetooth, and initiating label creation through the Labelife software.

## 7. Print from Your Mobile Device

Download the "Print Master" application from your smartphone's app store. Turn on the label maker and enable Bluetooth on your mobile device. Connect to the label maker via Bluetooth within the "Print Master" app. Once connected, you can start editing and printing labels directly from your phone.

Video: Demonstrates connecting the label maker to a mobile device via Bluetooth using the "Print Master" app and printing a label.

## MAINTENANCE

---

### 1. Clean the Print Head

Regular cleaning of the print head ensures optimal print quality. Open the tape compartment cover. Use a cotton swab dipped in a small amount of alcohol to gently wipe the print head. Allow 2-3 minutes for the components to dry completely before closing the cover and turning the label printer back on.

Video: Illustrates the process of cleaning the print head with a cotton swab and alcohol.

## TROUBLESHOOTING

---

- **No Power/Device Not Turning On:** Ensure the device is fully charged using the provided Type-C cable. If the issue persists, try resetting the printer.
- **Poor Print Quality:** Clean the print head as described in the Maintenance section. Ensure the label tape is correctly installed and not damaged. Check if the tape is genuine Vixic tape or a compatible alternative.
- **Tape Jams:** Open the tape compartment and carefully remove any jammed tape. Ensure the tape cassette is properly seated and the tape is pulled through the guides before closing the cover.
- **Connectivity Issues (Bluetooth/PC):** For Bluetooth, ensure Bluetooth is enabled on both the label maker and your device (smartphone/PC) and that they are paired. For PC connection, verify the USB cable is securely connected and the "Labelife" software and drivers are installed.
- **Labels Not Cutting Properly:** Ensure the built-in cutter is clear of debris. If the issue persists, the cutter may need cleaning or servicing.
- **Reset Printer:** If you encounter persistent issues, you can reset the printer to its factory settings. Enter the menu page, then press '1', 'M', and 'Shift' in sequence. The reset is successful when the device confirms.

Video: Demonstrates how to reset the Vixic D480BT Label Maker to factory settings.

## SPECIFICATIONS

---

Feature	Specification
Model Number	D480BT
Brand	Vixic
Connectivity Technology	Bluetooth, USB-C
Printing Technology	Thermal
Special Features	Backlight, Bluetooth Connected, PC Connected, QWERTY Keyboard, Type-C Rechargeable
Printer Output	Monochrome
Maximum Media Size	3/4 inch (18 mm)
Product Dimensions	8.74 x 7.28 x 3.55 inches
Item Weight	2.29 pounds
Batteries	1 Lithium Ion battery required
Compatible Devices	Laptops, PC, Smartphones, Tablets
Control Method	App, QWERTY Keyboard

## WARRANTY AND SUPPORT

---

For warranty information, technical support, or any product-related inquiries, please refer to the official Vixic website or contact Vixic customer service directly. Contact details are typically provided in the packaging or on the manufacturer's website.