

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [ANPABO](#) /

> [ANPABO 24V 4x4 Ride On Toy Instruction Manual \(Model: HC-305\)](#)

ANPABO HC-305

ANPABO 24V 4x4 Ride On Toy Instruction Manual (Model: HC-305)

Your Guide to Safe and Enjoyable Operation

1. PRODUCT OVERVIEW

The ANPABO 24V 4x4 Ride On Toy is designed for children aged 3-12, offering an exciting and safe driving experience. This robust vehicle features a durable metal frame, powerful motors, and advanced suspension for various terrains.

- **24V 4WD System:** Equipped with a genuine 24V battery and 4x200W drive motors, providing stable power and excellent performance with 2-speed gears and switchable 2WD/4WD options.
- **Adjustable Seating:** A spacious 15.8"x13.8" (LxW) seat with 3 adjustable positions and a 3.14" range to accommodate growing children. Features a padded seat for comfort.
- **Off-Road Capability:** Built with a sturdy metal frame, 4 large spring suspensions, and 14-inch wear-resistant wheels for superior traction and comfortable riding on diverse terrains, including gravel and small mounds.
- **Entertainment Features:** Includes cool bright headlights and a music system with Bluetooth and USB interfaces for playing favorite tunes.
- **Parental Control:** Comes with a 2.4G remote control for parents to manage direction and activate an emergency 'P' button for safety.
- **Easy Portability:** Features a front handle for convenient towing if the battery runs out.

2. SAFETY INFORMATION

Please read and understand all safety warnings and instructions before operating the ANPABO 24V 4x4 Ride On Toy. Failure to do so may result in serious injury.

- Always supervise children during operation.
- Ensure the child wears appropriate safety gear, including a helmet.
- Do not operate near streets, motor vehicles, steep inclines, swimming pools, or other bodies of water.
- Only use on flat, dry surfaces. Avoid sand, loose dirt, or wet areas.
- The maximum load capacity is 130 lbs. Do not exceed this limit.
- The remote control should be used by an adult only.
- Ensure all connections are secure before each use.

3. PACKAGE CONTENTS

Verify that all components are present upon unpacking:

- ANPABO 24V 4x4 Ride On Toy (main body)
- Wheels (4x)
- Adjustable Seat
- Steering Wheel
- Parental Remote Control (requires 2x 1.5V AAA batteries, not included)
- Charger
- Assembly Hardware and Tools
- Instruction Manual

4. SETUP AND ASSEMBLY

Follow these steps for proper assembly. For a visual guide, please refer to the installation video below.

Your browser does not support the video tag.

Video 1: Detailed Installation Guide for the ANPABO 24V Ride On Toy. This video provides step-by-step instructions for assembling the vehicle, including attaching wheels, connecting wiring, and securing the seat.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Check against the package contents list.
2. **Install Front Axle and Suspension:** Attach the front axle and suspension components to the main body using the provided hardware. Ensure all screws are tightened securely.
3. **Install Rear Axle and Suspension:** Secure the rear axle and suspension to the main body. Connect any necessary wiring for the rear motors.
4. **Attach Wheels:** Slide each wheel onto its respective axle. Secure with washers and nuts, then attach the hubcaps.
5. **Connect Battery:** Locate the battery compartment (usually under the seat). Connect the battery terminals as indicated in the manual (red to red, black to black).
6. **Install Steering Wheel:** Connect the steering wheel's wiring to the steering column's wiring. Slide the steering wheel onto the column and secure it with the provided screw.
7. **Attach Seat:** Place the adjustable seat onto its mounting points and secure it. Ensure it clicks into place or is screwed down firmly.
8. **Initial Charge:** Before first use, fully charge the battery for 8-12 hours. Refer to the charging port location and indicator.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the controls and features for a safe and enjoyable ride.

MANUAL & REMOTE CONTROL MODE



Image 1: Illustrates the manual driving mode by the child and the remote control mode by the parent, highlighting dual control options.

5.1 Starting the Vehicle

1. Turn the main power switch to the 'ON' position.
2. Select desired speed mode (low/high) using the speed switch.
3. Select driving mode (2WD/4WD) using the drive mode switch.
4. Press the foot pedal to accelerate. Release to brake.

5.2 Using the Parental Remote Control

The 2.4G remote control allows parents to override child control for safety or to assist younger drivers.

- **Pairing:** Follow the manual's instructions to pair the remote with the vehicle.
- **Directional Control:** Use the joystick or directional buttons to steer the vehicle.
- **Speed Control:** Adjust the speed settings directly from the remote.
- **Emergency Stop:** Press the 'P' button on the remote to immediately stop the vehicle.

5.3 Music and Entertainment

The vehicle features a built-in music player.

- **Pre-loaded Music:** Press the music buttons on the dashboard to play pre-loaded tunes.
- **Bluetooth/USB:** Connect your mobile device via Bluetooth or insert a USB drive to play custom music.



Image 2: Shows a child enjoying the ride-on toy while music is played, illustrating the entertainment features and connectivity options.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your ride-on toy.

- **Charging:** Always charge the battery after each use. A battery indicator on the music board will show the current charge level. Turn the power switch to the OFF position before charging.
- **Battery Care:** Do not overcharge the battery. If storing for extended periods, charge the battery every 3 months to maintain its life.
- **Cleaning:** Wipe the vehicle with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Avoid spraying water directly onto electrical components.
- **Storage:** Store the vehicle in a dry, cool place away from direct sunlight and moisture.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

- **Vehicle Not Starting:**
 - Check if the main power switch is ON.
 - Ensure the battery is fully charged and properly connected.
 - Verify that the foot pedal is fully depressed.
- **Low Power/Slow Speed:**
 - Battery may be low; recharge fully.

- Operating on rough terrain or uphill may reduce speed.
- Check the weight load; ensure it does not exceed 130 lbs.

- **Remote Control Not Working:**

- Ensure remote control batteries are fresh and correctly inserted.
- Re-pair the remote control with the vehicle according to the manual.

- **Unusual Noises:**

- Inspect wheels and axles for debris or loose parts.
- If noises persist, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model	HC-305
Product Dimensions	48.5 x 31.1 x 28.5 inches
Item Weight	70.6 pounds
Battery	1 Nonstandard Battery (included)
Motors	4x200W Drive Motors
Speed Range	3.1-5 mph
Max Load Capacity	130 lbs
Recommended Age	36 months - 8 years
Manufacturer	ANPABO