

Mycket fcd38451-4bd5-4d9f-878a-d20e1d3ef03b

Mycket Digital DAB/DAB+ Radio User Manual

Model: fcd38451-4bd5-4d9f-878a-d20e1d3ef03b

INTRODUCTION

Thank you for choosing the Mycket Digital DAB/DAB+ Radio. This versatile device combines a retro FM radio, a powerful Bluetooth speaker, and a rechargeable music player with AUX and U disk support. Designed for both home and portable use, it offers superior sound quality and a wide range of features, including 80 preset stations, an LED display, and a sleep timer. This manual provides essential information for setting up, operating, and maintaining your radio to ensure optimal performance and longevity.



Figure 1: Front view of the Mycket Digital DAB/DAB+ Radio, showcasing its wood finish, display screen, and control buttons.

SETUP

Unpacking and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in the "Included Components" section are present and undamaged. Retain the packaging for future storage or transport.

Powering the Device

The Mycket radio can be powered via two methods:

- **Mains Power:** Connect the provided USB Type-C cable to the radio's charging port and plug the other end into a compatible USB power adapter (not included) or a USB port.
- **Battery Power:** The radio features a built-in 2000 mAh Lithium-ion rechargeable battery. A full charge provides up to 10 hours of listening time. Ensure the battery is fully charged before initial portable use.

Mains Powered



Figure 2: The radio can be powered via mains, suitable for extended listening at home.

Antenna Positioning

For optimal radio signal reception (DAB/DAB+ and FM), extend the integrated telescopic antenna fully. Adjust its position to achieve the clearest sound. The radio is equipped with an ultra-long, highly sensitive antenna for improved reception.

OPERATING INSTRUCTIONS

Turning On/Off

Press and hold the **Power** button (usually marked with a power symbol) to turn the radio on or off.

Mode Selection

Press the **Mode** button to cycle through available modes: DAB/DAB+ Radio, FM Radio, Bluetooth, AUX Input, and U Disk Playback.

Radio Operation (DAB/DAB+ and FM)

- **Automatic Scan:** In DAB or FM mode, press the **Scan** or **Auto Scan** button (refer to specific button labels on your device) to automatically search for and store available stations. The radio can store up to 80 preset stations (40 DAB, 40 FM).
- **Manual Tuning:** Use the **Tune** or **Select/Enter** knob/buttons to manually adjust the frequency.
- **Preset Stations:** Use the **Preset** button or navigation buttons to recall saved stations.
- **LED Display:** The integrated LED screen displays station information, time, and other relevant data, making station selection and navigation clear and easy.



Figure 3: The portable radio with its key features highlighted, including 80 preset stations and an LED screen.

Bluetooth Connectivity

In Bluetooth mode, the radio will enter pairing mode. Enable Bluetooth on your smartphone, tablet, or other compatible device and select "Mycket Radio" (or similar) from the list of available devices to connect. Once paired, you can stream audio wirelessly to the radio.

AUX Input

Connect an external audio device (e.g., MP3 player, CD player) to the radio's AUX-in port using a 3.5mm audio cable (not included). Switch the radio to AUX mode to play audio from the connected device.

U Disk Playback

Insert a USB flash drive (U disk) containing audio files into the radio's USB port. Switch the radio to U Disk mode to play music directly from the drive. The radio supports various audio formats.



Figure 4: Demonstrating USB Disk Playback functionality, allowing users to enjoy music from a USB stick.

Sleep Timer

The sleep timer allows you to set a duration after which the radio will automatically turn off. This feature is useful for falling asleep to music or radio without worrying about turning off the device manually. Refer to your device's specific button or menu options for setting the sleep timer.

MAINTENANCE

Cleaning

To clean the radio, gently wipe the exterior with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth. Do not use abrasive cleaners, solvents, or strong chemicals, as these may damage the wood finish or electronic components.

Storage

When not in use for extended periods, store the radio in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery is partially charged (around 50%) before long-term storage to preserve battery health.

Battery Care

To maximize the lifespan of the built-in Lithium-ion battery:

- Avoid fully discharging the battery frequently.
- Avoid leaving the radio connected to power for prolonged periods after it is fully charged.
- Charge the battery at room temperature.

TROUBLESHOOTING

If you encounter any issues with your Mycket Digital Radio, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Power / Does not turn on	Battery depleted; Power cable not connected properly; Power adapter faulty.	Charge the battery; Ensure USB Type-C cable is securely connected; Try a different USB power adapter.
Poor Radio Reception	Antenna not extended or positioned correctly; Weak signal area; Interference.	Fully extend and adjust the telescopic antenna; Move the radio to a location with better signal; Avoid placing near other electronic devices.
Bluetooth Pairing Failure	Radio not in Bluetooth mode; Device Bluetooth off; Device too far; Already paired with another device.	Ensure radio is in Bluetooth mode; Turn on Bluetooth on your device; Move device closer to radio; Disconnect from other Bluetooth devices.
No Sound from AUX/U Disk	Incorrect mode selected; Cable not connected properly; U disk not formatted correctly or no supported files.	Switch to AUX or U Disk mode; Check cable connections; Ensure U disk is FAT32 formatted and contains compatible audio files.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Mycket

Feature	Detail
Model Number	fcd38451-4bd5-4d9f-878a-d20e1d3ef03b
Color	Wood Finish
Connectivity Technology	Bluetooth, DAB, USB, FM, DAB+, AUX
Special Features	Built-in Clock, Portable, Integrated Antenna, Rechargeable
Compatible Devices	Tablet, Smartphone, USB devices
Battery Type	1 Lithium-ion (included)
Battery Life	Up to 10 hours (on a single charge)
Power Source	Battery Powered, Electric Cable (USB Type-C)
Supported Radio Bands	FM, DAB, DAB+
Preset Stations	80 (40 DAB, 40 FM)
Speaker Output	5W (integrated) with Bass Reflex subwoofer
Product Dimensions	20L x 15W x 12H centimeters
Included Components	1 DAB radio, 1 USB power cable, 1 user manual

WARRANTY AND SUPPORT

Mycket is committed to providing high-quality products and excellent customer service. Your Mycket Digital DAB/DAB+ Radio comes with a **12-month warranty** from the date of purchase, covering manufacturing defects.

For any inquiries, technical assistance, or warranty claims, please contact our customer support team. We offer **24/7 customer support** to ensure your satisfaction.

Please retain your proof of purchase for warranty validation.



Figure 5: Warranty and Support Information.