

Beko RBIM19200AD

Beko RBIM19200AD Built-in Electric Oven Instruction Manual

Model: RBIM19200AD

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Beko RBIM19200AD built-in electric oven. Please read these instructions carefully before installation, use, and maintenance. Keep this manual for future reference.

The Beko RBIM19200AD is a 72-liter electric oven featuring AeroPerfect technology for even heat distribution, Halogen Illumination for clear visibility, and a Durable Oven Door designed to support heavy dishes.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, burns, or injury. This appliance is intended for domestic use only.

- Ensure the appliance is properly earthed.
- Do not allow children to operate the oven unsupervised.
- The oven becomes hot during use. Avoid touching heating elements.
- Always use oven mitts when handling hot dishes.
- Do not use abrasive cleaners or sharp metal scrapers to clean the oven door glass.
- Disconnect the appliance from the power supply before cleaning or maintenance.

3. SETUP AND INSTALLATION

The Beko RBIM19200AD is a built-in electric oven. Proper installation is crucial for safe and efficient operation. It is highly recommended that installation be performed by a qualified technician.

3.1 Unpacking

- Carefully remove all packaging materials.
- Check the appliance for any signs of damage. If damaged, do not install or use it, and contact your retailer.

- Keep packaging materials out of reach of children.

3.2 Electrical Connection

- Ensure the mains voltage corresponds to the rating plate on the appliance.
- The appliance must be correctly earthed.
- Do not use adapters, multiple sockets, or extension cables.

3.3 First Use

- Before first use, clean the interior of the oven with a damp cloth and mild detergent.
- Heat the empty oven at maximum temperature for approximately 30 minutes to burn off any manufacturing residues. Ensure good ventilation during this process.

4. OPERATING INSTRUCTIONS

Your Beko RBIM19200AD oven is equipped with intuitive controls for various cooking functions.



Figure 1: Oven Control Panel. This image shows a close-up of the oven's control knobs, including the function selector, temperature control, and the central analog clock.

4.1 Control Panel Overview

The oven features three main controls:

- **Function Selector Knob (Left):** Used to choose the desired cooking function (e.g., convection, grill, defrost, bottom heating).
- **Temperature Control Knob (Right):** Used to set the oven temperature in degrees Celsius, ranging from 50°C to 250°C.
- **Analog Clock (Center):** Displays the time and may include basic timer functions.

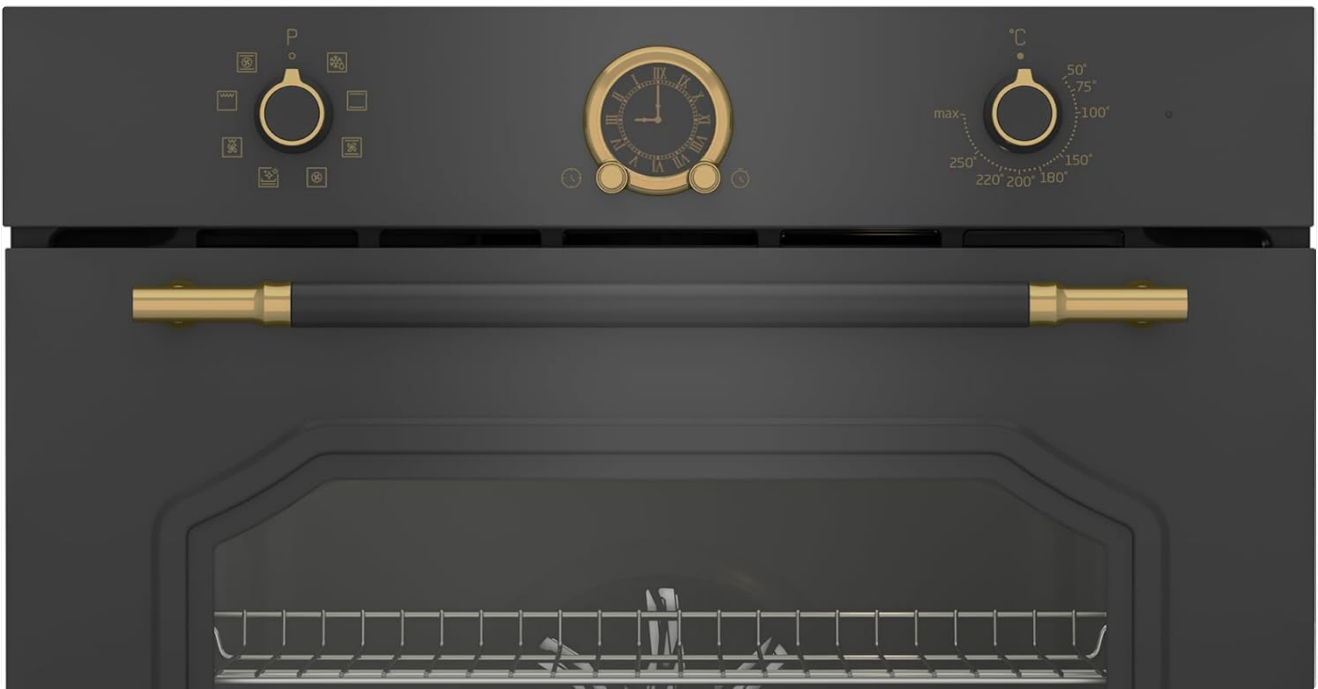


Figure 2: Front View of the Oven. This image displays the full front of the oven, highlighting the elegant anthracite finish, gold-colored handle, and the control panel.

4.2 Setting a Cooking Program

1. Turn the **Function Selector Knob** to the desired cooking mode (e.g., Convection, Grill, Bottom Heating).
2. Turn the **Temperature Control Knob** to set the desired cooking temperature.
3. The oven will begin to heat up. The indicator light will turn off once the set temperature is reached.
4. To stop cooking, turn both knobs to the "Off" position.

4.3 Special Features

- **AeroPerfect Technology:** This innovative ventilation system ensures uniform hot air distribution throughout the oven cavity, minimizing temperature fluctuations for consistent cooking results.
- **Halogen Illumination:** The internal halogen light provides a clear view of your food without needing to open the oven door, preserving heat and ensuring precise monitoring.
- **Durable Oven Door:** The oven door is designed to support up to 22.5 kg, allowing you to safely rest heavy dishes on the open door during transfer.
- **Defrost Function:** Use this function to gently thaw frozen foods.



Figure 3: Oven Interior. This image shows the oven with its door fully open, revealing the spacious 72-liter interior, multiple rack positions, and included baking trays.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

5.1 General Cleaning

- Always ensure the oven is cool and disconnected from the power supply before cleaning.
- Clean the interior with a damp cloth and a mild, non-abrasive detergent. Avoid harsh chemicals or scouring pads.
- For stubborn stains, use a specialized oven cleaner, following the product's instructions carefully.
- Clean the exterior surfaces with a soft, damp cloth.
- The oven racks and trays can be removed and washed in warm soapy water.

5.2 Oven Door Cleaning

The oven door glass can be cleaned with a soft cloth and glass cleaner. Do not use abrasive materials that could scratch the glass.

5.3 Replacing the Oven Lamp

Ensure the oven is cool and unplugged. Unscrew the protective glass cover, replace the old bulb with a new heat-resistant oven bulb (E14, 25W, 300°C), and reattach the cover.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; oven settings incorrect.	Check power connection and circuit breaker. Ensure function and temperature knobs are set correctly.
Uneven cooking results.	Incorrect rack position; overloaded oven; door not fully closed.	Refer to cooking guidelines for rack positions. Avoid overcrowding the oven. Ensure door is securely closed.
Oven light not working.	Bulb is faulty or loose.	Replace the oven lamp as described in the Maintenance section.
Excessive smoke during cooking.	Food spills or grease buildup.	Clean the oven interior thoroughly. Use baking trays to catch drips.

If the problem persists after trying these solutions, please contact Beko customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model	RBIM19200AD
Brand	Beko
Type	Built-in Electric Oven
Total Oven Capacity	72 Liters
Total Oven Power	2600 W
Heating Method	Convection
Cooking Functions	Convection, Grill, Defrost, Bottom Heating
Temperature Range	50°C - 250°C
Energy Efficiency Class	A
Energy Consumption (Conventional)	0.95 kWh/cycle

Feature	Specification
Energy Consumption (Fan-forced)	0.81 kWh/cycle
Color	Anthracite
Door Opening Direction	Right

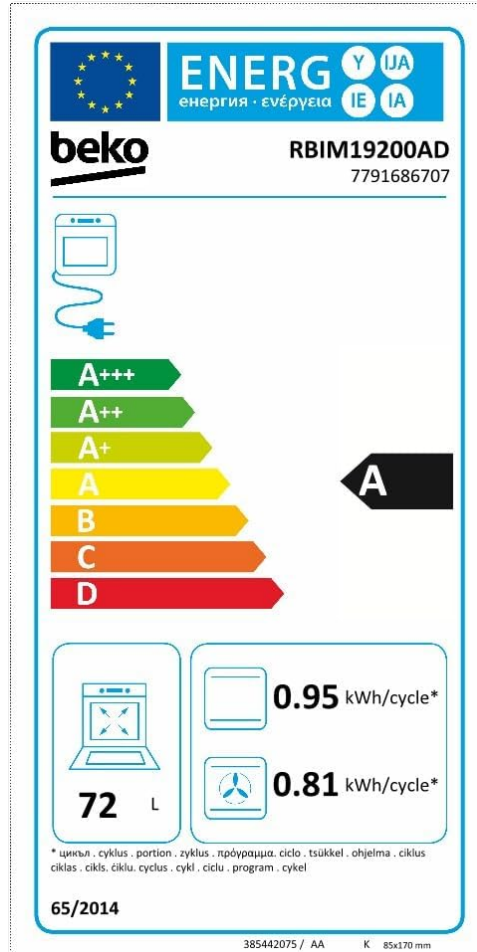


Figure 4: Energy Label. This label indicates the oven's energy efficiency class (A) and energy consumption per cycle for both conventional and fan-forced modes.

8. WARRANTY AND CUSTOMER SUPPORT

8.1 Product Warranty

Your Beko RBIM19200AD oven comes with a warranty period of **2 years for private users** and **1 year for businesses**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions.

8.2 Customer Support

For technical assistance, spare parts, or warranty service, please contact Beko customer support. You can find contact information on the official Beko website or through your local retailer.

For more information, visit the official Beko store: [Beko Store on Amazon](#).

