

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bewinner](#) /

› [Bewinner Mini Body Camera \(Model Bewinnerch78fqnx15\) User Manual](#)

## Bewinner Bewinnerch78fqnx15

# Bewinner Mini Body Camera User Manual

Model: Bewinnerch78fqnx15

## 1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Bewinner Mini Body Camera. Please read this manual thoroughly before using the device to ensure proper function and longevity.

## 2. PRODUCT OVERVIEW

The Bewinner Mini Body Camera is a portable video recorder designed for various applications, featuring a compact design and essential recording functionalities.

### Key Features:

- **1080P Video Recording:** Captures high-definition video.
- **1.54-inch Full Color Display:** Allows real-time viewing of recordings.
- **180-Degree Rotating Lens:** Provides flexible recording angles.
- **Long Battery Life:** Equipped with a 1000mAh battery, offering up to 7 hours of continuous video recording.
- **Infrared Night Vision:** Built-in infrared lights enhance clarity in low-light conditions.
- **Motion Detection:** Automatically initiates recording upon detecting movement.
- **Standard 1/4 Inch Screw Port:** Compatible with various video brackets for versatile mounting.



Figure 2.1: Front and side view of the Bewinner Mini Body Camera.

# MINI BODY CAMERA

1080P HD

*Just be your own personal bodyguard*



Figure 2.2: The camera features a 180-degree rotating lens for flexible recording angles.

## 3. PACKAGE CONTENTS

Please check the package for the following items:

- Bewinner Mini Body Camera
- USB Charging Cable
- User Manual (this document)





Figure 3.1: The camera and included USB charging cable.

## 4. SETUP

---

### 4.1 Charging the Battery

1. Connect the provided USB charging cable to the camera's charging port.
2. Connect the other end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the indicator light may change color or turn off.
4. A full charge typically takes approximately 2-3 hours.



Figure 4.1: The camera is equipped with a 1000mAh battery for extended use.

## 4.2 Inserting a MicroSD Card

A MicroSD card (not included) is required to store recordings. The camera supports cards up to a certain capacity (please refer to specifications for maximum supported size).

1. Locate the MicroSD card slot on the side of the camera.
2. Gently insert the MicroSD card into the slot with the gold contacts facing the correct direction (usually towards the screen or as indicated by a diagram near the slot) until it clicks into place.
3. To remove, gently push the card in until it clicks, then release, and it will spring out.

## 4.3 Powering On/Off

- **To Power On:** Press and hold the Power button for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the Power button again until the screen turns off.

# 5. OPERATION

---

## 5.1 Basic Video Recording

1. Ensure the camera is powered on and a MicroSD card is inserted.
2. Press the Video Record button (usually indicated by a camera icon or 'REC') to start recording. A recording indicator (e.g., a flashing red dot) will appear on the screen.
3. Press the Video Record button again to stop recording. The video file will be saved to the MicroSD card.

## 5.2 Taking Photos

1. Ensure the camera is powered on and in photo mode (if applicable, switch modes using the Mode button).
2. Press the Photo Capture button (often the same as the Video Record button, or a separate shutter button) to take a picture.

## 5.3 Activating Night Vision

The camera features infrared night vision for recording in low-light conditions.

- Night vision may activate automatically in dark environments.
- Refer to the on-screen menu or specific buttons for manual activation/deactivation of night vision, if

available.



Figure 5.1: Example of night vision functionality, enhancing visibility in dark environments.

## 5.4 Motion Detection

When enabled, motion detection allows the camera to start recording automatically when movement is detected within its field of view.

- Access the camera's settings menu to enable or disable motion detection.
- Adjust sensitivity settings if available, to prevent unwanted recordings.

## 5.5 Lens Rotation

The camera's lens can be rotated 180 degrees to adjust the recording angle without repositioning the entire device.

- Gently rotate the lens assembly to the desired position.
- Ensure the lens is securely positioned before recording.

# 6. MAINTENANCE

---

## 6.1 Cleaning

- Use a soft, dry cloth to clean the camera body.
- For the lens and screen, use a microfiber cloth specifically designed for optics. Avoid abrasive materials or harsh chemicals.

## 6.2 Battery Care

- Avoid fully discharging the battery frequently.
- Store the camera with a partial charge (around 50%) if not used for extended periods.
- Do not expose the camera to extreme temperatures.

## 6.3 Storage

- Store the camera in a cool, dry place away from direct sunlight and moisture.
- Keep out of reach of children.

# 7. TROUBLESHOOTING

---

If you encounter issues with your Bewinner Mini Body Camera, refer to the following common problems and solutions:

## 7.1 Camera Not Turning On or Charging

- **Check Battery:** Ensure the battery is charged. Connect the camera to a power source and observe the charging indicator.
- **USB Cable/Adapter:** Try a different USB cable or power adapter to rule out faulty accessories.
- **Reset:** Locate the reset pinhole (if available) and use a thin object (like a paperclip) to press the reset button.

## 7.2 Recording Issues (No Recording, Poor Quality)

- **MicroSD Card:** Ensure a MicroSD card is properly inserted and has sufficient free space. The card should be formatted to FAT32.
- **Card Compatibility:** Use a high-speed MicroSD card (Class 10 or higher) from a reputable brand.
- **Formatting:** Format the MicroSD card using the camera's menu (if available) or a computer. Note that formatting will erase all data.
- **Lens Cleanliness:** Clean the camera lens to ensure clear video capture.

## 7.3 Night Vision Performance

- **Ambient Light:** Night vision works best in complete darkness. Performance may be reduced in areas with some ambient light.
- **Range:** Be aware of the specified night vision range (e.g., 2 meters). Objects beyond this range may not be clearly visible.

## 7.4 File Format Errors

- **Player Compatibility:** Ensure your media player supports AVI format. Try playing files on different media players or devices.
- **Card Integrity:** A corrupted MicroSD card can lead to file errors. Try formatting the card or using a new one.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Bewinner
Model Name	Bewinnerch78fqnx15
Video Capture Resolution	1080p, 720p
Effective Still Resolution	2 MP
Display Size	1.54 inches
Lens Rotation	180 degrees
Battery Capacity	1000mAh
Continuous Video Recording	Up to 7 hours

Feature	Detail
Night Vision	Infrared, 2 Meters Range
Motion Detection	Yes
Connectivity Technology	USB
Video Capture Format	AVI
Storage	MicroSD card (not included)
Material	Plastic
Item Weight	5.6 ounces
Dimensions	4.92 x 3.15 x 2.28 inches (Package)
International Protection Rating	IP54

## 9. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation provided with your purchase or contact Bewinner customer service directly. Keep your proof of purchase for warranty claims.