



Manuals.plus /

› DASH /

› DASH Ghost Mini Waffle Maker Instruction Manual DMWGH001MP

DASH DMWGH001MP

DASH Ghost Mini Waffle Maker Instruction Manual

MODEL: DMWGH001MP

Brand: DASH

1. Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This product contains PTFE for its non-stick properties. For more information about chemicals in this product, visit bydash.com/nonstick.

2. Parts & Features

The DASH Ghost Mini Waffle Maker is designed for ease of use and compact storage. Key components include:

- **Upper and Lower Cooking Plates:** Feature non-stick surfaces for easy food release and cleaning. The lower plate includes a ghost design for themed waffles.
- **Power/Preheat Indicator Light:** Illuminates when the appliance is plugged in and heating. It will turn off when the desired temperature is reached.
- **Compact Design:** Ideal for small kitchens, dorms, or quick meals.



Image: The DASH Ghost Mini Waffle Maker in a closed position, showcasing its compact design and purple exterior. The 'HOT SURFACE' warning and 'DASH' logo are visible on the top lid. The appliance is resting on a dark speckled countertop.

3. Setup

Before first use, follow these steps:

1. Remove all packaging materials and stickers from the waffle maker.
2. Wipe the cooking plates with a damp cloth and dry thoroughly. This removes any manufacturing residue.
3. Place the waffle maker on a stable, heat-resistant surface.

4. Operating Instructions

Follow these steps to prepare your ghost-shaped waffles:

- 1. Preheat:** Plug the waffle maker into an electrical outlet. The Power/Preheat Indicator Light will illuminate, signaling that the appliance is heating. The light will turn off once the waffle maker has reached its optimal cooking temperature.
- 2. Add Batter:** Carefully open the lid. Pour approximately 1/4 cup of waffle batter onto the center of the lower cooking plate, which features the ghost design. Ensure the batter spreads evenly.
- 3. Cook:** Close the lid. Cook for 3-5 minutes, or until the waffle is golden brown and cooked to your desired crispness. Cooking time may vary based on batter type and desired texture.
- 4. Remove Waffle:** Once cooked, carefully open the lid. Use a heat-resistant, non-metallic utensil (such as a silicone spatula or wooden tongs) to gently lift the ghost-shaped waffle from the cooking plate. Avoid using metal utensils, as they can damage the non-stick coating.
- 5. Repeat:** Close the lid to allow the waffle maker to reheat for a few moments before adding more batter for subsequent waffles.

5. Cleaning & Maintenance

Proper cleaning and maintenance will extend the life of your waffle maker:

- 1. Cool Down:** Always unplug the waffle maker from the power outlet and allow it to cool completely before cleaning.
- 2. Wipe Plates:** Once cool, wipe the cooking plates with a damp, soft cloth or sponge. For stubborn residue, a small amount of cooking oil can be applied to the residue, allowed to sit for a few minutes, and then wiped clean.
- 3. Exterior Cleaning:** Wipe the exterior of the waffle maker with a damp cloth.
- 4. Do Not Immerse:** Never immerse the waffle maker in water or any other liquid.
- 5. Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the non-stick coating and exterior finish.
- 6. Storage:** Store the clean, dry waffle maker in a cool, dry place. The compact design allows for upright storage to save space.

6. Troubleshooting

Problem	Possible Cause	Solution
Waffles stick to the cooking plates.	Plates not properly cleaned; insufficient preheating; batter too thick or thin.	Ensure plates are clean and dry before use. Allow the waffle maker to fully preheat until the indicator light turns off. Adjust batter consistency as needed.
Waffles are not cooking evenly.	Insufficient preheating; uneven batter distribution.	Allow the waffle maker to fully preheat. Ensure batter is poured evenly across the lower plate.
Indicator light does not turn on.	Appliance not plugged in; power outlet issue.	Check that the waffle maker is securely plugged into a working electrical outlet. Test the outlet with another appliance.

7. Specifications

-
- **Model:** DMWGH001MP
 - **Wattage:** 350 Watts
 - **Voltage:** 230 Volts
 - **Item Weight:** 1.3 Pounds
 - **Material:** Aluminum (cooking plates), Plastic (exterior)
 - **Color:** Orange (exterior, as per product listing)
 - **Special Feature:** Non-Stick Coating, Ghost Design
 - **Included Components:** Waffle Maker, Recipe Guide, Hot Surface Detector

8. Warranty & Support

Manufacturer's Warranty: This DASH Ghost Mini Waffle Maker comes with a 1-year manufacturer warranty. An extended 2-year warranty is available upon registration to the Feel Good Rewards program.

Customer Support: For assistance with your product, US-based Customer Support is available. Please refer to the contact information provided in your product packaging or visit the official DASH website for details.