#### Walker Edison HAMMF3FBL

# User Manual: Walker Edison Modern Rattan Flip-Down-Door Wall-Mounted Floating Stand

Model: HAMMF3FBL | Brand: Walker Edison

#### 1. Introduction

Thank you for choosing the Walker Edison Modern Rattan Flip-Down-Door Wall-Mounted Floating Stand. This manual provides essential information for the safe assembly, installation, operation, and maintenance of your new furniture. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

#### **Important Safety Information**

- Always assemble the product on a soft, clean surface to prevent scratches.
- Ensure all parts and hardware are present before assembly. Do not proceed if any parts are missing or damaged.
- Do not overtighten screws, as this may damage the material.
- This unit is designed to be wall-mounted. Improper installation can lead to injury or damage. Seek professional assistance if you are unsure about wall-mounting procedures.
- The top surface supports up to 60 lbs. and the open shelf supports up to 10 lbs. Do not exceed these weight limits.
- · Keep small parts away from children during assembly.

#### 2. PACKAGE CONTENTS

Before assembly, verify that all components listed below are present in your package. Refer to the included Assembly Instructions and Hardware Packet for detailed part identification.

- Main body panels (top, bottom, sides, back)
- Flip-down door panels with rattan inserts
- · Center shelf panel
- Hardware packet (screws, dowels, cam locks, hinges, wall-mounting brackets, anchors)
- · Assembly Instructions



Image: Front view of the assembled floating TV stand, showcasing the black finish and rattan flip-down doors.

#### 3. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have two people for assembly and installation.

- 1. **Unpack and Identify Parts:** Lay out all panels and hardware on a clean, soft surface. Compare each piece to the parts list in your separate Assembly Instructions to ensure everything is accounted for.
- 2. **Assemble the Main Frame:** Attach the side panels to the bottom panel using the designated hardware (e.g., dowels and cam locks). Ensure all connections are secure.
- 3. **Install Center Shelf:** Insert the center shelf panel into its designated slots or attach with hardware, creating the open storage compartment.
- 4. **Attach Top Panel:** Secure the top panel to the assembled frame using the appropriate hardware.
- 5. **Prepare Flip-Down Doors:** Attach hinges to the flip-down door panels. Ensure the hinges are oriented correctly for the flip-down mechanism.
- 6. **Install Doors:** Mount the prepared flip-down doors to the main unit. Adjust hinges as necessary to ensure smooth operation and proper alignment.
- 7. **Install Back Panel:** Secure the back panel to the unit. Ensure the cord management ports are correctly positioned.
- 8. **Inspect Joints:** After assembly, inspect all joints and connections to ensure they are tight and flush, contributing to the unit's overall stability.



Image: The floating stand with its flip-down doors open, revealing the interior storage compartments and cutouts for cable management.



Image: A detailed view of a corner joint and the woven rattan texture on one of the flip-down doors, illustrating construction and material quality.

## 4. WALL-MOUNTING INSTALLATION

This stand is designed for wall-mounting. Proper installation is crucial for safety and stability. Consult a professional if you are unsure about your wall type or mounting procedures.

## **Required Tools (Not Included):**

- Stud finder
- Drill with appropriate drill bits
- Level
- · Measuring tape

#### **Installation Steps:**

- 1. **Determine Mounting Location:** Choose a wall location that can support the weight of the stand and its contents. Use a stud finder to locate wall studs for secure mounting.
- 2. **Mark Pilot Holes:** Hold the stand against the wall at the desired height and use a level to ensure it is straight. Mark the positions for the wall-mounting brackets' pilot holes.
- 3. **Drill Pilot Holes:** Drill pilot holes at the marked locations. Use appropriate drill bits for your wall type (e.g., wood studs, drywall with anchors).
- 4. **Attach Mounting Brackets:** Secure the wall-mounting brackets to the wall using the provided hardware (screws and anchors if necessary). Ensure they are firmly attached.
- 5. **Mount the Stand:** Carefully lift the assembled stand and align it with the wall-mounting brackets. Secure the stand to the brackets according to the specific instructions in your hardware packet. Ensure the stand is level and stable.



Image: The floating TV stand installed on a wall in a living room, positioned below a wall-mounted television, demonstrating its intended use.

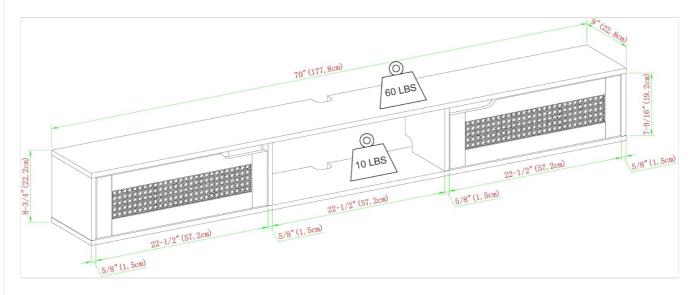


Image: Technical drawing illustrating the dimensions of the floating stand and its maximum weight capacities for the top surface (60 lbs) and the open center shelf (10 lbs).

#### 5. OPERATING INSTRUCTIONS

#### **Using the Flip-Down Doors:**

The stand features two flip-down doors with rattan inserts. To open, gently pull the top edge of the door downwards. The doors are designed to open smoothly, providing access to the enclosed storage compartments. To close, push the door upwards until it securely latches.

#### **Utilizing the Open Shelf:**

The central open shelf is ideal for housing media devices such as soundbars, streaming boxes, or gaming consoles. Ensure that any devices placed here do not exceed the 10 lbs weight limit for this shelf.

#### **Cord Management:**

The stand includes cord management ports located on the back panel and within the open shelf area. Route power cords and audio/video cables through these ports to maintain a tidy and organized appearance, preventing tangles and reducing clutter.

#### 6. MAINTENANCE

#### Cleaning:

To clean the stand, simply wipe with a dry, soft cloth. Avoid using abrasive cleaners, harsh chemicals, or excessive moisture, as these can damage the finish and rattan material. For stubborn marks, a slightly damp cloth followed immediately by a dry cloth may be used.

#### **General Care:**

- Periodically check all hardware connections to ensure they remain tight. Retighten if necessary, but do not overtighten.
- Avoid exposing the stand to direct sunlight or extreme temperature changes, which can cause warping or fading.
- Do not place hot items directly on the surface without protective padding.



Image: A detailed view of the black wood grain texture, highlighting the material finish of the stand.

## 7. TROUBLESHOOTING

If you encounter any issues with your floating stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stand is wobbly after assembly.	Loose hardware connections.	Check and tighten all screws and cam locks. Ensure all panels are fully seated.
Doors do not close properly or are misaligned.	Hinges are not adjusted correctly or are loose.	Adjust the hinge screws to align the doors. Ensure hinges are securely attached to both the door and the main unit.
Stand feels unstable on the wall.	Improper wall mounting or insufficient anchors.	Verify that the mounting brackets are securely fastened to wall studs. If mounting into drywall, ensure appropriate heavy-duty anchors were used and installed correctly. Re-evaluate the wall's capacity to hold the weight.
Missing parts or damaged components.	Manufacturing defect or shipping damage.	Do not proceed with assembly. Contact Walker Edison customer support for replacement parts.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	HAMMF3FBL
Brand	Walker Edison
Material	Engineered Wood
Color	Black
Product Length	70 Inch (177.8 cm)
Overall Packaged Dimensions (L x W x H)	77.17 x 18.11 x 5.12 inches
Item Weight	36 pounds
Number of Shelves	1 (open shelf)
Special Feature	Adjustable Shelf
Maximum Recommended Load (Top Surface)	60 Pounds
Maximum Recommended Load (Open Shelf)	10 Pounds

Feature	Detail
Product Care Instructions	Wipe with Dry Cloth
UPC	840298398270

#### 9. WARRANTY AND SUPPORT

Walker Edison products are designed for quality and durability. For specific warranty information, please refer to the documentation included with your purchase or visit the official Walker Edison website. If you require assistance with assembly, missing parts, or have any questions regarding your product, please contact Walker Edison customer support directly.

**Contact Information:** Please refer to your purchase receipt or the manufacturer's website for the most current customer support contact details.

© 2025 Walker Edison. All rights reserved.

#### **Related Documents**



#### Walker Edison W584DHDHB Assembly Instructions | Furniture Setup Guide

Detailed assembly instructions for the Walker Edison W584DHDHB furniture item. Learn how to assemble your new cabinet with clear steps, parts list, and hardware guide. Includes general assembly tips for this Dark Walnut Classic Glass Door Universal TV Stand.



#### Walker Edison Bronx 6-Drawer Dresser Assembly Guide

Comprehensive assembly guide for the Walker Edison Bronx 6-Drawer Dresser, featuring estimated assembly time, required tools, safety warnings, detailed step-by-step instructions, and parts lists for a successful setup.



#### Walker Edison W70SBD TV Stand Assembly Instructions

Detailed assembly instructions for the Walker Edison W70SBD TV Stand, including parts list, hardware list, and step-by-step guidance for building your furniture.



#### Walker Edison W60FPXDHB Assembly Instructions

Comprehensive assembly guide for the Walker Edison W60FPXDHB TV stand with fireplace. Includes parts list, hardware, and step-by-step instructions in multiple languages.