



Manuals.plus /

- › SKMEI /
- › SKMEI Men Watch Model 2004 User Manual

SKMEI 2004

SKMEI Men Watch Model 2004 User Manual

Model: 2004 | Brand: SKMEI

INTRODUCTION

This user manual provides comprehensive instructions for the SKMEI Men Watch, Model 2004. Please read this manual carefully before using your watch to ensure proper operation, maintenance, and to maximize its lifespan. Keep this manual for future reference.



Figure 1: SKMEI Men Watch Model 2004 (Rose Gold Black)

PRODUCT OVERVIEW

Key Features

- **Display:** Single digital display.
- **Functions:** Time (dual time), Date, Day of the week, Alarm, EL Light.
- **Water Resistance:** 30 meters (3ATM), suitable for daily splashes and light rain. Not suitable for swimming or diving.
- **Material:** Zinc alloy case, glass crystal, stainless steel buckle.
- **Movement:** Reliable Quartz movement for accurate timekeeping.
- **Comfort:** Lightweight design with an adjustable band for a secure and comfortable fit.

Key Features

Display

Digital

Dial Shape

Round

Features

2 Time, Date, Week, Alarm, EL Light

Strap Material

Stainless Steel

Water Resistance

30 m



Figure 2: Key Features of SKMEI Model 2004

Components

The SKMEI Model 2004 watch consists of the following main components:

1. **Digital Display:** Shows time, date, day, and other indicators.
2. **Mode Button (Left-Bottom):** Used to cycle through different modes (Time, Alarm, Stopwatch, Dual Time).
3. **Light Button (Left-Top):** Activates the EL backlight for visibility in low light conditions.
4. **Start/Set Button (Right-Top):** Used to start/stop functions or adjust settings in setting mode.
5. **Reset/Adjust Button (Right-Bottom):** Used to reset functions or move to the next setting option.
6. **Watch Case:** Houses the internal components.
7. **Watch Band:** Adjustable metal strap for securing the watch to the wrist.
8. **Case Back:** Rear cover indicating model number (2004), water resistance (3ATM), and battery type (CR2032).



Figure 3: Watch Case Back with Model and Battery Information

SETUP

Initial Inspection

Upon unboxing, inspect the watch for any visible damage. Ensure all buttons are functioning correctly by pressing them gently. The watch should display the time immediately.



Figure 4: Product Packaging

Adjusting the Watch Band

The metal strap of your SKMEI watch is adjustable to fit various wrist sizes. A small tool is typically provided to assist with this adjustment. If you are unsure, it is recommended to seek assistance from a professional jeweler or watch repair service to avoid damaging the band.

- Locate the small arrows on the inside of the band links. These indicate the direction to push the pin out.
- Use the provided tool or a small, pointed object to push the pin in the direction of the arrow.
- Remove the desired number of links to achieve a comfortable fit.
- Reinsert the pin in the opposite direction to secure the band.



Figure 5: Watch Dimensions for Band Adjustment Reference

OPERATING INSTRUCTIONS

Setting Time and Date

1. From the normal time display, press the **Mode** button (left-bottom) repeatedly until the seconds start flashing. This indicates you are in time setting mode.
2. Press the **Reset/Adjust** button (right-bottom) to cycle through the settings: seconds, hour, minute, month, date, day of the week.
3. Use the **Start/Set** button (right-top) to adjust the flashing value.
4. Once all settings are correct, press the **Mode** button (left-bottom) to exit the setting mode and return to the normal time display.

Setting the Alarm

1. From the normal time display, press the **Mode** button (left-bottom) until "AL" (Alarm) appears on the display.
2. Press the **Start/Set** button (right-top) to activate or deactivate the alarm.

3. To set the alarm time, press the **Reset/Adjust** button (right-bottom) to make the hour digits flash.
4. Use the **Start/Set** button (right-top) to adjust the hour.
5. Press the **Reset/Adjust** button (right-bottom) again to make the minute digits flash.
6. Use the **Start/Set** button (right-top) to adjust the minutes.
7. Press the **Mode** button (left-bottom) to exit the alarm setting mode.

Using the EL Backlight

To illuminate the display in dark conditions, press the **Light** button (left-top). The backlight will remain on for a few seconds.



Figure 6: Watch Display with EL Backlight Activated

Water Resistance Guidelines (30M / 3ATM)

Your SKMEI Model 2004 watch is rated for 30 meters (3ATM) water resistance. This means it is protected against accidental splashes, rain, and handwashing. It is *not* designed for:

- Swimming
- Showering or bathing

- Diving or snorkeling
- Any activity involving prolonged water immersion

Avoid pressing buttons while the watch is wet or submerged, as this can compromise the water seal.

MAINTENANCE

Cleaning Your Watch

Regular cleaning helps maintain the appearance and longevity of your watch. Use a soft, dry cloth to wipe the watch case and band. For stubborn dirt, a slightly damp cloth can be used, but ensure no water enters the watch. Avoid using harsh chemicals or abrasive materials.

Battery Replacement

The SKMEI Model 2004 uses a CR2032 button cell battery. When the display becomes dim or the watch stops functioning, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is properly re-installed.

Storage

When not in use, store your watch in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. Keeping it in its original packaging or a watch box can protect it from dust and scratches.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery (CR2032).
Time is incorrect.	Time not set properly or accidental button press.	Refer to "Setting Time and Date" section to reset the time.
Buttons are unresponsive.	Watch may be in a locked mode or internal issue.	Try pressing all buttons firmly. If issue persists, a battery reset (removing and reinserting battery) might be needed by a technician.
Condensation inside the watch.	Exposure to extreme temperature changes or compromised water seal.	Immediately take the watch to a professional for inspection and repair to prevent internal damage.

SPECIFICATIONS

Model Number: 2004

Product Dimensions: 20 x 3.6 x 0.82 cm

Item Weight: 61.9 g

Case Diameter: 3.6 Centimetres

Case Thickness: 0.82 Centimetres (approx)

Band Material Type: Zinc (often refers to the case material, while the band is stainless steel as per features)

Band Color: Rose Gold Black (for this specific variant)

Watch Movement Type: Quartz

Water Resistance Depth: 30 Meters (3ATM)

Battery Type: CR2032

Country of Origin: India

Manufacturer: SKMEI

WARRANTY AND SUPPORT

Warranty Information

Your SKMEI watch comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage details and duration. The warranty typically covers manufacturing defects but does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

Customer Support

For any questions, technical assistance, or warranty claims, please contact SKMEI customer support through the official channels provided on the manufacturer's website or the retailer from whom you purchased the watch. Ensure you have your purchase receipt and watch model number (2004) ready when contacting support.