

Manuals.plus /

› NUOKE /

› NUOKE Pink RC Stunt Car Instruction Manual

NUOKE 9368

NUOKE Pink RC Stunt Car Instruction Manual

Model: 9368
Brand: NUOKE

INTRODUCTION

Thank you for purchasing the NUOKE Pink RC Stunt Car. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new remote control car. Please read this manual thoroughly before use to ensure optimal performance and longevity of the product. This remote control car is designed for dynamic play, featuring double-sided driving, 360-degree rotation, and robust performance across various terrains. It is equipped with a 2.4Ghz anti-interference control system for seamless multi-player fun.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x NUOKE RC Stunt Car (Pink)
- 1 x Remote Control
- 2 x Rechargeable Lithium Batteries (3.7V 500mAh)
- 1 x USB Charging Cable
- 1 x Screwdriver
- 1 x User Manual (this document)



Image: The complete package contents of the NUOKE RC Stunt Car, showing the pink car, its remote control, two rechargeable batteries, a USB charging cable, and a small screwdriver.

SETUP GUIDE

1. Battery Installation (RC Car)

1. Locate the battery compartment on the underside of the RC car.
2. Use the included screwdriver to open the battery cover.
3. Connect one of the rechargeable lithium batteries to the car's battery connector, ensuring the correct polarity.
4. Carefully place the battery inside the compartment.
5. Close the battery cover and secure it with the screwdriver.



Image: A visual guide demonstrating the three steps for battery installation: unscrewing the cover, connecting the battery, and closing the cover.

2. Battery Charging

The RC car comes with two rechargeable lithium batteries. Ensure they are fully charged before first use for optimal playtime.

1. Connect the USB charging cable to the battery.
2. Plug the other end of the USB charging cable into a standard USB power adapter (not included), computer USB port, or power bank.
3. The indicator light on the USB cable will show the charging status (e.g., red for charging, off or green for fully charged).
4. A full charge typically takes approximately 60-90 minutes and provides 25-30 minutes of playtime per battery.



Image: A diagram illustrating the battery charging process, showing the battery connected to a USB cable, which is then plugged into a laptop, with indicators for low power and full power.

3. Remote Control Battery Installation

The remote control requires 2 AA batteries (included). Ensure correct polarity when inserting.

1. Open the battery compartment on the back of the remote control.

2. Insert 2 AA batteries, matching the positive (+) and negative (-) terminals.
3. Close the battery compartment cover securely.

OPERATING INSTRUCTIONS

1. Pairing the Remote Control

The car and remote control are pre-paired. If pairing is lost:

1. Ensure the car battery is charged and installed, and the car's power switch is ON.
2. Turn on the remote control.
3. The indicator light on the remote control will flash and then become solid, indicating successful pairing.

2. Basic Controls



Image: The pink RC stunt car and its remote control, highlighting key features such as 4WD, 360-degree rotation, 15KM/H speed, anti-crash tires, flashing lights, and dual motors.

- **Forward/Backward:** Use the left joystick to move the car forward or backward.
- **Turn Left/Right:** Use the right joystick to steer the car left or right.
- **360° Rotation:** Push both joysticks in opposite directions simultaneously to perform a 360-degree spin.
- **Double-Sided Driving:** The car is designed to drive on both sides. If it flips over, it can continue driving without needing to be righted.



Image: The RC car performing double-sided driving and 360-degree rotations, showcasing its stunt capabilities.

3. Driving Environment

The NUOKE RC Stunt Car is equipped with 4WD and powerful motors, allowing it to operate on various terrains:

- Carpet
- Wooden floors
- Grassland
- Sandy beaches
- Gravel roads
- Other indoor and outdoor surfaces

The car also features 2 LED headlights for play in low-light conditions.

SMALL CAR, STRONG POWER

5.5 * 5.1 * 2.4 inch



Image: The RC car demonstrating its ability to traverse different surfaces, including grass, gravel, and sand, highlighting its all-terrain capability.

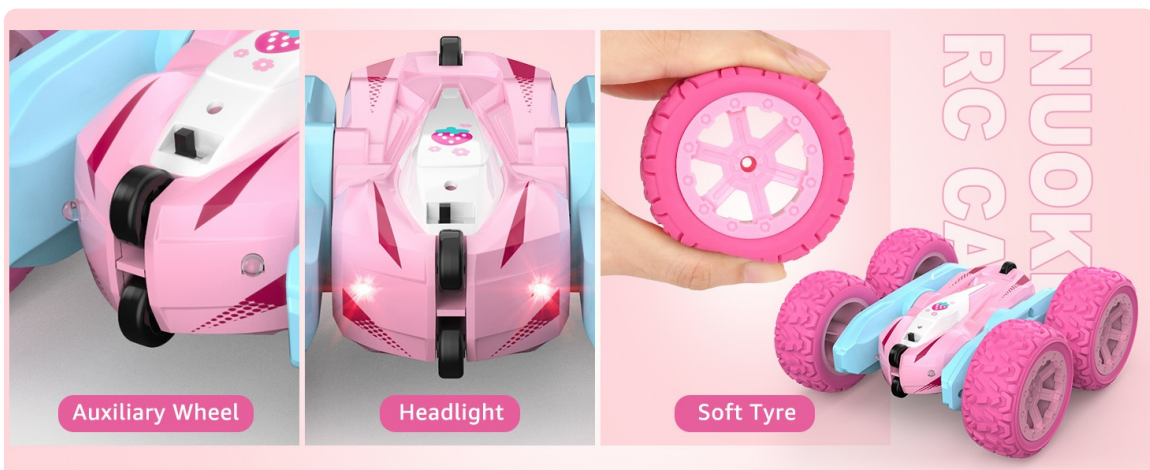


Image: Children enjoying the RC car in various settings, including a living room, bedroom, and yard, illustrating its versatility for indoor and outdoor play.

4. Anti-Interference Control

The 2.4Ghz anti-interference frequency allows multiple RC cars to be played simultaneously without signal interference. This enables exciting races and group play with friends and family.

2.4GHZ ANTI-INTERFERENCE DESIGN

Kid can enjoy racing experience with friends



Image: Two children, a girl with a pink RC car and a boy with a blue RC car, playing together, illustrating the 2.4Ghz anti-interference feature that allows multiple cars to operate simultaneously.

CARE AND MAINTENANCE

- **Battery Storage:** If the toy is not used for a long period of time, always remove the batteries from both the car and the remote control to prevent leakage and damage.
- **Cleaning:** Wipe the toy clean with a clean, damp cloth for storage. Do not submerge the car in water.
- **Avoid Sunlight:** Avoid exposing the toy to direct sunlight for extended periods, as this can cause material deterioration and color fading.
- **Avoid Moisture:** Avoid getting the toy wet, as this could damage the electronic components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Car does not move or respond.	<p>Car battery is low or not installed correctly.</p> <p>Remote control batteries are low or not installed correctly.</p> <p>Car or remote control is not turned on.</p> <p>Car and remote control are not paired.</p>	<p>Charge and correctly install the car battery.</p> <p>Replace or correctly install remote control batteries.</p> <p>Ensure both car and remote control power switches are ON.</p> <p>Re-pair the car and remote control (see "Pairing the Remote Control" section).</p>
Short playtime.	<p>Battery not fully charged.</p> <p>Old or worn-out battery.</p>	<p>Ensure battery is fully charged before use.</p> <p>Consider replacing the battery if it's old and capacity has diminished.</p>
Poor control range or interference.	<p>Too many other 2.4Ghz devices nearby.</p> <p>Obstacles blocking signal.</p>	<p>Move to an area with less wireless interference.</p> <p>Ensure a clear line of sight between the remote and the car.</p>

SPECIFICATIONS

Feature	Detail
Model Number	9368
Product Dimensions	5.5 x 5.1 x 2.4 inches (approximate, based on image)
Item Weight	14.4 ounces
Battery (Car)	2 x 3.7V 500mAh Rechargeable Lithium Batteries
Battery (Remote)	2 x AA batteries (included)
Playtime	25-30 minutes per battery (approx.)
Charging Time	60-90 minutes (approx.)
Control Frequency	2.4Ghz
Max Speed	Up to 15 km/h
Recommended Age	36 months - 8 years



Image: A diagram illustrating the dimensions of the RC car, showing its length and width.

WARRANTY AND SUPPORT

NUOKE is committed to bringing real fun to children and ensuring customer satisfaction. For any questions, concerns, or support needs regarding your NUOKE RC Stunt Car, please contact our customer service team.

Contact Information:

- Email: NUOKE-US@outlook.com
- For more information, visit the official NUOKE store on Amazon: [NUOKE Amazon Store](#)

Please retain your purchase receipt for warranty purposes. Specific warranty details may vary; please refer to the product packaging or contact customer support for precise terms.



Image: NUOKE customer service contact details, including an email address.