

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KASYDoFF](#) /
- › [KASYDoFF Portable Clothes Dryer \(Model V5\) Instruction Manual](#)

KASYDoFF V5

KASYDoFF Portable Clothes Dryer (Model V5) Instruction Manual

Model: V5 | Brand: KASYDoFF

1. INTRODUCTION

Thank you for choosing the KASYDoFF Portable Clothes Dryer, Model V5. This manual provides essential information for the safe and efficient operation of your new appliance. Please read it thoroughly before use and retain it for future reference.



Image 1.1: The KASYDoFF Portable Clothes Dryer (Model V5) shown assembled, alongside a separate clothes drying rack. The dryer features a blue fabric cover with dandelion patterns.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, observe the following precautions:

- Read all instructions before using the appliance.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the drum is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this

manual.

- Always unplug the appliance from the power supply before cleaning or performing any maintenance.
- Ensure proper ventilation around the dryer to prevent overheating.
- Do not overload the dryer. Adhere to the maximum capacity of 28 pounds.
- Keep flammable materials away from the dryer during operation.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon opening the package:

- Heater Unit (x1)
- Cloth Cover (x1)
- Support Frame (x2)
- Stainless Steel Pipes (x3)
- Storage Bag (x1)


Electric Clothes Dryer Accessories



Heater*1



 Cloth Cover*1

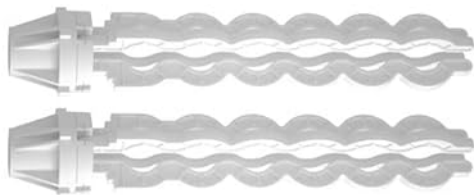

Support Frame*2



Storage Bag*1



Stainless Steel Pipe*3

Power	110V-120V/1000W	Size	46*19.7*19.7 In
Weight	3.7 Lb	Materials	Waterproof Fabric+ Stainless Steel

Image 3.1: An illustration of the individual components included with the KASYDoFF Portable Clothes Dryer, including the heater, fabric cover, frame parts, and storage bag.

4. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your portable clothes dryer:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble the Base:** Connect the stainless steel pipes to form the base structure. Ensure they are securely fitted into the designated slots on the support frames.
3. **Install the Heater Unit:** Place the heater unit at the bottom center of the assembled base. Ensure it is stable and has clear airflow.
4. **Attach the Cloth Cover:** Drape the cloth cover over the assembled frame, ensuring the zipper aligns correctly for easy access. The cover should fully enclose the drying area.
5. **Secure the Top:** Ensure the top of the cloth cover is securely fastened to the frame, creating a sealed drying environment.



Image 4.1: The assembled portable dryer, illustrating its compact design and highlighting features such as 1000W power, 1-6 hour timer, and capacity per bracket.

5. OPERATING INSTRUCTIONS

Using your KASYDoFF Portable Clothes Dryer is straightforward:

1. **Prepare Clothes:** Ensure clothes are thoroughly wrung out to remove excess water before placing them in the

dryer.

2. **Load Clothes:** Hang clothes on hangers inside the dryer. Do not overload. The dryer can hold up to 28 pounds of laundry. Distribute items evenly to allow for proper airflow.
3. **Close the Cover:** Zip up the cloth cover completely to create a sealed drying environment.
4. **Plug In:** Connect the dryer to a standard 110-120V AC power outlet.
5. **Set Timer:** Use the one-touch control to set the desired drying time, ranging from 1 to 6 hours. The optimal drying time will vary based on fabric type, load size, and moisture content.
6. **Start Drying:** The dryer will begin operation. The 1000W heater will generate warm air to dry your clothes.
7. **Completion:** The dryer will automatically shut off once the set time has elapsed. Unplug the unit and carefully remove your dry clothes.

Drying Time Guidelines (Approximate):

- Small items (socks, underwear): 30 minutes - 1 hour
- Light clothing (shirts, blouses): 1 - 2 hours
- Heavier clothing (jeans, towels): 2 - 4 hours
- Very heavy loads or thick fabrics may require longer drying times.



Image 5.1: The portable dryer depicted in diverse settings such as apartments, hotels, dormitories, and RVs, highlighting its adaptability for various living spaces.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dryer:


- **Cleaning the Heater Unit:** Periodically wipe the heater unit with a dry cloth to remove any dust or lint accumulation. Ensure the unit is unplugged and cool before cleaning.
- **Cleaning the Cloth Cover:** The fabric cover can be wiped clean with a damp cloth. For deeper cleaning, it may be hand-washed with mild detergent and air-dried. Ensure it is completely dry before reassembling.
- **Storage:** When not in use, the dryer can be disassembled and stored in the provided storage bag. This compact design makes it ideal for small spaces or travel.




Water-proofed Fabric



Heavy Steel Pipes

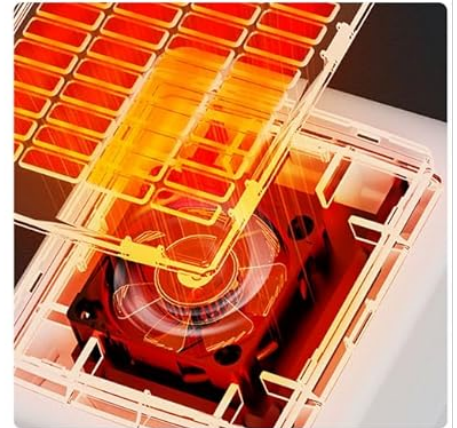

Smart Heater

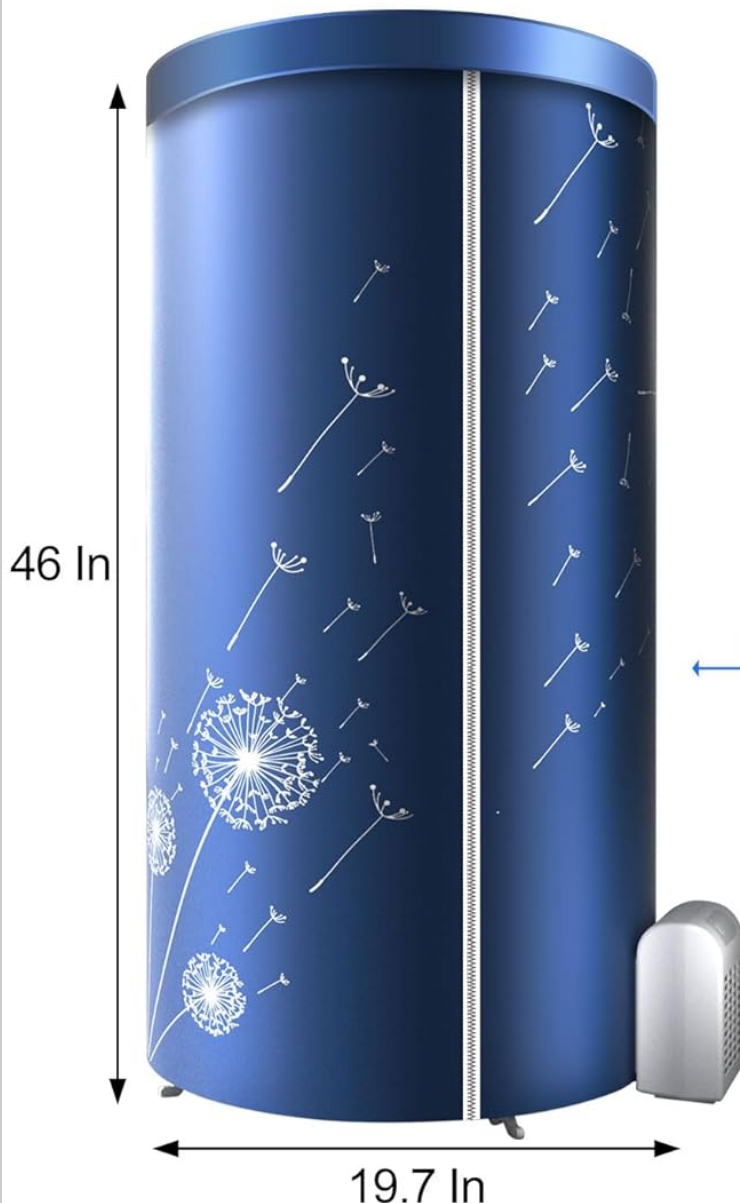 

Storage

Image 6.1: The portable dryer's dimensions are displayed, along with an image of its storage bag, emphasizing its space-saving and travel-

7. TROUBLESHOOTING

Refer to this section for solutions to common issues:

Problem	Possible Cause	Solution
Dryer does not turn on.	Not plugged in; power outlet issue; timer not set.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Set the timer.
Clothes are not drying completely.	Overloaded; insufficient drying time; clothes too wet; poor airflow.	Reduce load size. Increase drying time. Wring clothes thoroughly before drying. Ensure the cover is fully zipped and clothes are spaced out.
Dryer is wobbly or unstable.	Improper assembly; uneven surface.	Recheck assembly of the support frame and pipes. Place the dryer on a flat, stable surface.
Unusual odor during operation.	New product odor; lint/dust on heater.	Initial use may produce a slight odor, which should dissipate. Clean the heater unit as per maintenance instructions. Ensure no foreign objects are inside.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model	V5
Brand	KASYDoFF
Power	1000W
Voltage	110-120V (AC)
Timer Range	1 - 6 hours
Capacity	Up to 28 pounds
Dimensions (H x D x W)	46" x 19.7" x 19.7"
Item Weight	4.36 pounds
Material	Waterproof Fabric, Stainless Steel Pipes
Special Features	Easy to Install, Foldable, Portable, Quiet, Travel
Certification	UL

9. WARRANTY AND CUSTOMER SUPPORT

KASYDoFF provides a **1-year complimentary replacement service** from the date of purchase. If you encounter any quality-related issues with your portable electric dryer within this period, please contact our customer support team. For assistance, please refer to the contact information provided with your purchase or visit the official KASYDoFF store

page on Amazon.

We are committed to ensuring your satisfaction and will do our best to resolve any concerns you may have.

