

Manuals.plus /

› Herrfilk /

› Herrfilk 4-in-1 Electric Lunch Box Food Heater (Model HD-J-0054) Instruction Manual

Herrfilk HD-J-0054

Herrfilk 4-in-1 Electric Lunch Box Food Heater

Model: HD-J-0054

INTRODUCTION

Thank you for choosing the Herrfilk 4-in-1 Electric Lunch Box Food Heater. This portable device is designed to provide warm, home-cooked meals wherever you are, whether at the office, in your car, or on a truck. Featuring 100W heating power and compatibility with 12V, 24V, 110V, and 220V power sources, it ensures your food is heated efficiently and safely. Please read this manual thoroughly before use to ensure proper operation and maintenance.

SAFETY INFORMATION

- Do not immerse the main heating unit in water or any other liquid.
- Ensure the power voltage matches the specified requirements (12V/24V for DC, 110V/220V for AC) before plugging in.
- Keep the appliance out of reach of children.
- Do not use the lunch box if the power cord or plug is damaged.
- Always open the steam vent on the lid during the heating process to allow steam to escape.
- Remove the fruit container before heating food in the stainless steel container.
- Avoid heating empty containers.
- Unplug the device when not in use and before cleaning.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Electric Lunch Box (Main Unit)
- 1 x 304 Stainless Steel Food Container (1.8L capacity)
- 1 x Food-Grade PP Fruit Container (0.7L capacity)
- 1 x Stainless Steel Spoon

- 1 x Stainless Steel Fork
- 1 x AC Power Cable (110V/220V for home/office use)
- 1 x DC Power Cable (12V/24V for car/truck use)
- 1 x Insulated Carry Bag



Image: All components of the Herrfilk Electric Lunch Box, including the main unit, internal containers, cutlery, power cables, and insulated bag.

SETUP

1. Unpack all components from the packaging.
2. Wash the stainless steel food container, fruit container, spoon, and fork with warm soapy water before first use. Rinse thoroughly and dry.
3. Place the stainless steel food container into the main heating unit. If using, place the fruit container on top of the stainless steel container.
4. Ensure the sealing ring is properly seated around the lid to prevent leaks.

Product Details



Image: Exploded view of the lunch box showing its various parts and how they fit together.

OPERATING INSTRUCTIONS

Heating Food

1. Place your prepared food into the 304 stainless steel container.
 2. If your food is dry, you may add a small amount of water (1-2 tablespoons) to the food to aid in steam heating and prevent scorching.
 3. Securely close the lid of the lunch box, ensuring all four clips are fastened.
 4. Open the steam outlet vent on the top of the lid. This is crucial for safe operation during heating.
 5. Connect the appropriate power cable:
 - For home or office use, use the 110V/220V AC power cable.
 - For car or truck use, use the 12V/24V DC power cable.
- Plug the power cable into the corresponding power port on the lunch box and then into a suitable power outlet (wall socket for AC, cigarette lighter socket for DC).
 - Press the power button on the front of the lunch box. The indicator light will illuminate, signifying that

heating has begun.

- Heating typically takes 20-25 minutes for warm food and 25-30 minutes for cold food. Actual heating time may vary based on food type, quantity, and initial temperature.
- Once heating is complete, unplug the power cable and close the steam vent before opening the lid.



Image: Illustration of the 100W heating process and the double-layer design, highlighting heating times.



Image: Examples of where the electric lunch box can be used, such as office, car, and truck environments.

Your browser does not support the video tag.

Video: Official product video demonstrating the features and usage of the Herrfilk Electric Lunch Box Food Heater.

MAINTENANCE AND CLEANING

Cleaning Instructions

1. Always unplug the lunch box from the power source before cleaning.
2. The 304 stainless steel food container, fruit container, spoon, and fork are dishwasher safe. Alternatively, they can be hand washed with warm soapy water.
3. The main heating unit (outer shell) should be wiped clean with a damp cloth. Do not immerse the main unit in water or rinse it under running water to avoid damaging electrical components.
4. Ensure all parts are completely dry before reassembling or storing the lunch box.

1.8L Capacity, Easy to Clean



Dishwasher Safe



Stainless Steel



0.7L Removable Plastic Layer



Image: Demonstration of cleaning the removable stainless steel container, highlighting its dishwasher-safe feature.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Food not heating	Power cable not properly connected; Power button not pressed; Steam vent closed.	Ensure power cable is securely plugged into both the lunch box and the power source. Press the power button until the indicator light illuminates. Open the steam vent during heating.
Food burning or scorching in one spot	Insufficient moisture in food; Uneven heat distribution.	Add a small amount of water (1-2 tablespoons) to the food before heating. Stir food occasionally during heating if possible.
Leakage from the lunch box	Lid not securely fastened; Sealing ring improperly seated or damaged.	Ensure all four lid clips are securely fastened. Check the silicone sealing ring for proper placement and any signs of damage. Replace if necessary.
Indicator light not turning on	No power supply; Faulty power cable or unit.	Check the power source. Try a different power outlet or cable. If the issue persists, contact customer support.

SPECIFICATIONS

Brand: Herrfilk

Model: HD-J-0054

Color: Moon Blue

Power: 100W

Voltage: 12V/24V (DC), 110V/220V (AC)

Material: Stainless Steel (container), Food-grade PP (fruit container, outer shell)

Capacity: 1.8 Liters (Stainless Steel Container), 0.7 Liters (Fruit Container)

Product Dimensions: 9.3"L x 6.6"W x 5.2"H

Item Weight: 2.69 Pounds

Special Features: Airtight, Dishwasher Safe (containers), Heat Resistant, Leak Resistant, Lightweight

Number of Compartments: 2

Product Care Instructions: Hand Wash Only (main unit), Dishwasher Safe (containers)



Image: Visual representation of the product dimensions for the lunch box and its components.

WARRANTY AND SUPPORT

Herrfilk stands behind the quality of its products. This Electric Lunch Box Food Heater comes with:

- **30-Day Money-Back Guarantee:** If you are not satisfied with your purchase, you may return it within 30 days for a full refund.
- **12-Month Replacement Warranty:** In the event of any manufacturing defects or issues with the product within 12 months of purchase, we offer a free replacement.

For any questions, concerns, or warranty claims, please contact Herrfilk customer support through the retailer's platform or visit our official website for assistance. Please have your purchase details and model number (HD-J-0054) ready when contacting support.