

ForeverPRO W11256107

ForeverPRO W11256107 Dishwasher Clip Installation Guide

For Whirlpool Dishwashers

1. INTRODUCTION

This instruction manual provides essential information for the proper installation and maintenance of the ForeverPRO W11256107 Dishwasher Clip. This component is a replacement part designed for specific Whirlpool dishwasher models. Please read this guide thoroughly before proceeding with installation to ensure correct fitment and safe operation.

The ForeverPRO W11256107 clip replaces part number W11233967.

2. SAFETY INFORMATION

- Always disconnect power to the dishwasher before attempting any repairs or installations. Failure to do so may result in electrical shock or injury.
- Wear appropriate personal protective equipment, such as gloves, to prevent cuts or scrapes during handling.
- Handle the clip with care to avoid damage to the component or surrounding dishwasher parts.
- If you are unsure about any step, consult a qualified appliance technician.

3. PRODUCT OVERVIEW

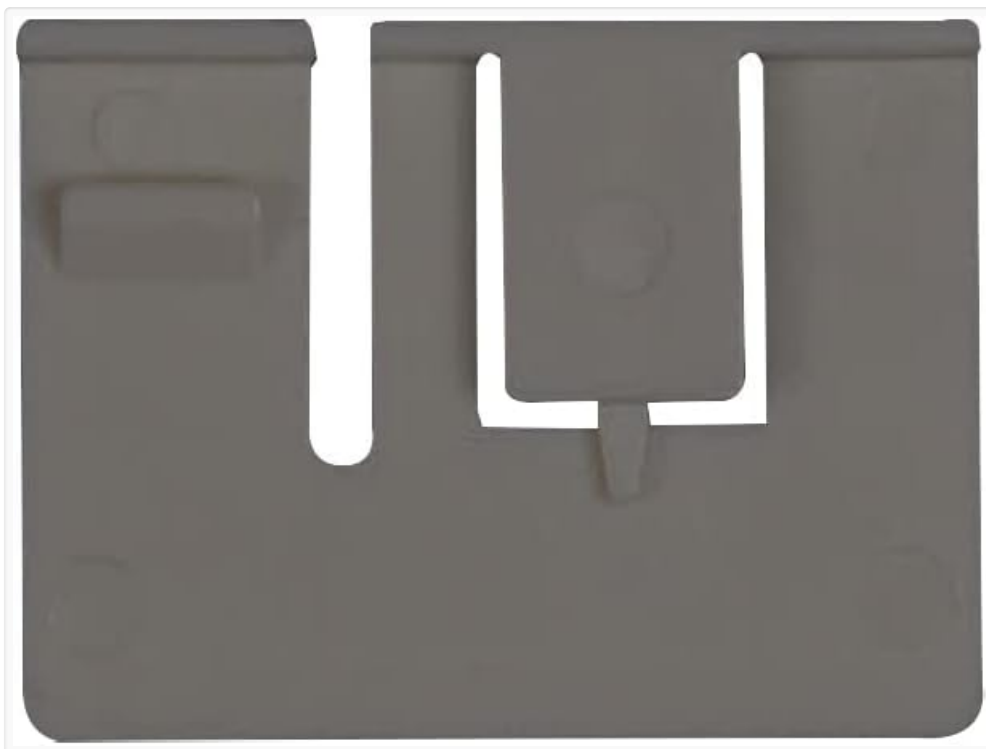


Figure 1: ForeverPRO W11256107 Dishwasher Clip

The ForeverPRO W11256107 Dishwasher Clip is a gray plastic component designed to secure various parts within your Whirlpool dishwasher. Its specific design ensures a precise fit for compatible models, helping to maintain the structural integrity and proper function of the appliance.

The image above shows the ForeverPRO W11256107 Dishwasher Clip, a gray plastic component featuring a specific shape with tabs and slots for proper fitment within the dishwasher assembly.

4. COMPATIBILITY

This ForeverPRO W11256107 Dishwasher Clip is compatible with a wide range of Whirlpool dishwasher models. It is crucial to verify your dishwasher's model number against the list below to ensure compatibility before installation.

Compatible Models Include:

- ADB1500ADB3, ADB1500ADS3, ADB1500ADW3
- MDB4949SHB0, MDB4949SHB1, MDB4949SHW0, MDB4949SHW1, MDB4949SHZ0, MDB4949SHZ1
- MDB7959SHK0, MDB7959SHZ0, MDB7959SHZ1
- MDB7979SHZ0, MDB7979SHZ1
- MDB8979SFZ2, MDB8989SHB0, MDB8989SHK0, MDB8989SHW0, MDB8989SHZ0
- BLB14FRANA0, KDTM354DSS5
- WDF590SAJB0, WDF590SAJM0, WDF590SAJW0
- WDT705PAKB0, WDT705PAKW0, WDT705PAKZ0
- WDT720PADB3, WDT720PADE3, WDT720PADH3, WDT720PADM3, WDT720PADW3
- WDT730PAHB0, WDT730PAHV0, WDT730PAHW0, WDT730PAHZ0

This part may also be compatible with other models from Whirlpool, Maytag, KitchenAid, Jenn-Air, Amana, Magic Chef, Admiral, Norge, and Roper. Always cross-reference with your appliance's specific part requirements.

5. INSTALLATION INSTRUCTIONS (SETUP)

Follow these steps carefully to install the ForeverPRO W11256107 Dishwasher Clip:

1. **Disconnect Power:** Ensure the dishwasher is completely disconnected from its power source. Turn off the circuit breaker supplying power to the appliance.
2. **Access Area:** Open the dishwasher door and identify the location where the clip needs to be replaced or installed. This may require removing other components, such as racks or spray arms, depending on the specific application of the clip.
3. **Remove Old Clip (if applicable):** If replacing an existing clip, carefully detach the old clip. Note its orientation and how it was secured. You may need a small flat-head screwdriver or pliers to gently pry it loose.
4. **Install New Clip:** Position the new ForeverPRO W11256107 clip in the correct orientation. Align its tabs or slots with the corresponding points on the dishwasher component.
5. **Secure the Clip:** Gently press the clip into place until it snaps or locks securely. Ensure it is firmly seated and does not wobble. Do not use excessive force, as this could damage the clip or the dishwasher.
6. **Reassemble:** Reinstall any components that were removed to gain access (e.g., racks, spray arms).
7. **Restore Power:** Once the installation is complete and all components are securely in place, restore power to the dishwasher by turning on the circuit breaker.
8. **Test Functionality:** Run a short cycle or test the component the clip secures to ensure proper operation.

6. MAINTENANCE

The ForeverPRO W11256107 Dishwasher Clip is designed for durability. Regular maintenance is minimal but can extend its lifespan:

- **Periodic Inspection:** During routine dishwasher cleaning or maintenance, visually inspect the clip for any signs of wear, cracks, or damage.
- **Cleaning:** If the clip accumulates food debris or residue, gently clean it with a soft cloth and mild detergent. Rinse thoroughly.
- **Replacement:** If the clip shows significant signs of wear or damage, replace it promptly to ensure continued proper function of the dishwasher component it secures.

7. TROUBLESHOOTING

If you encounter issues after installing the clip, consider the following:

- **Clip Does Not Fit:** Double-check your dishwasher's model number against the compatibility list in Section 4. Ensure you have the correct replacement part.
- **Clip Feels Loose:** Verify that the clip is fully seated and snapped into place. Ensure all tabs and slots are correctly aligned.
- **Clip Breaks During Installation:** This may indicate excessive force was used or incorrect alignment. Review the installation steps and attempt with a new clip if necessary.
- **Component Still Malfunctions:** If the clip is correctly installed but the dishwasher component it secures still does not function properly, the issue may lie with another part of the appliance. Consult a professional technician.

8. SPECIFICATIONS

Specification	Detail
---------------	--------

Specification	Detail
Manufacturer	ForeverPRO
Part Number	FP-W11256107
Item Model Number	W11256107
Replaces Part Number	W11233967
Compatibility	Whirlpool Dishwashers (various models)

9. WARRANTY AND SUPPORT

ForeverPRO stands by the quality of its products. This clip comes with a "No Questions Asked Money Back Guarantee." As a proud USA-based company, ForeverPRO is committed to customer satisfaction.

For any questions, concerns, or support regarding the W11256107 Dishwasher Clip, please contact ForeverPRO customer service. Refer to your purchase documentation for specific contact details.

© 2023 ForeverPRO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

