



Manuals.plus /

› Ontel /

› Ontel Handy Heater Copper Core Pure Warmth Ceramic Space Heater Instruction Manual

Ontel HEATTB-MC12/4

Ontel Handy Heater Copper Core Pure Warmth Ceramic Space Heater Instruction Manual

Model: HEATTB-MC12/4 | Brand: Ontel

INTRODUCTION

Thank you for choosing the Ontel Handy Heater Copper Core Pure Warmth Ceramic Space Heater. This compact and powerful 1500W heater is designed to provide efficient and customizable warmth for various indoor spaces. Please read this manual thoroughly before use to ensure safe and optimal operation.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- **Read all instructions before using this heater.**
- **Built-in Safety Features:** The ceramic heater includes built-in safety features such as stay-cool housing and auto shut-off.
- **Overheat Protection:** Equipped with an over-heat sensor that automatically shuts off the unit if it gets too hot.
- **Tip-Over Protection:** Features a tip-over auto-off function for enhanced safety.
- **Placement:** Do not use in wet or moist locations. Ensure the heater is placed on a stable, level surface or plugged directly into a wall outlet. Keep flammable materials at least 3 feet (0.9 meters) from the front, sides, and rear of the heater.
- **Power Source:** Plug directly into a 110V wall outlet. Do not use with extension cords or power strips.
- **Supervision:** Do not leave the heater unattended, especially around children or pets.
- **Maintenance:** Regularly clean the air intake and exhaust vents to prevent dust buildup, which can affect performance and safety.

Note: This heater is not intended for use in bathrooms or GFCI outlets due to consistent power draw that could trip the circuit and potential moisture issues.

PRODUCT OVERVIEW AND FEATURES

The Ontel Handy Heater Copper Core Pure Warmth is a compact, plug-in ceramic space heater designed for personal comfort and small to medium-sized rooms.

- **Powerful 1500W Heating:** Delivers strong heat output, capable of warming areas up to 250 sq ft.
- **Copper-Core Thermoceramic Technology:** Advanced ceramic heating elements infused with copper for ultra-fast and efficient heat delivery, while maintaining air moisture.
- **Adjustable Thermostat:** Allows precise temperature control from 60°F to 90°F (15°C to 32°C).
- **Programmable 12-Hour Timer:** Set the heater to operate for a desired duration, then automatically shut off.
- **Digital Display & Touch Controls:** Easy-to-read digital display and intuitive touch controls for setting temperature and timer.
- **Quiet Operation:** Designed to operate quietly, making it suitable for bedrooms, offices, and other quiet environments.
- **Compact & Portable:** Its lightweight, plug-in design eliminates messy cords and frees up floor space, making it easy to move between rooms or take on travels.
- **Built-in LED Night Light:** Features a multi-color LED light for added ambiance or night-time visibility.



Image: The Handy Heater showing its digital display and touch controls, highlighting its powerful 1500W output, adjustable thermostat, 3 heating modes, and safety features.

Safety Features Include: Over Heat Sensor, Tip-Over Auto-Off & Cool-Touch Housing



Image: The Handy Heater placed on a desk in an office, emphasizing its energy efficiency and compact size for personal use.

SETUP

1. **Unpack:** Carefully remove the Handy Heater from its packaging.
2. **Choose Location:** Select a suitable indoor location with a standard 110V wall outlet. Ensure the area is clear of obstructions and flammable materials.
3. **Adjust Plug (if necessary):** The heater features a swivel plug. If needed, gently rotate the plug to orient the heater vertically or horizontally to fit your outlet configuration.
4. **Plug In:** Insert the heater directly into a wall outlet. Do not use extension cords or power strips.



Image: A close-up of the Handy Heater's adjustable plug, demonstrating how it can be rotated to fit different wall outlets.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the **Power button** (usually marked with a circle and vertical line) on the top panel to turn the heater on or off. The digital display will illuminate.
2. **Set Temperature:** Use the '+' and '-' buttons to adjust the desired temperature. The temperature range is typically 60°F to 90°F. The heater will automatically cycle on and off to maintain the set temperature.
3. **Set Timer:** Press the **Timer button** (usually marked with a clock icon) to activate the programmable timer. Each press will increase the timer duration, typically up to 12 hours. The heater will automatically shut off once the set time expires.
4. **Adjust Fan Speed (if available):** Some models may have a speed button to adjust the fan speed (e.g., low, high). Refer to your specific model's controls.
5. **Night Light Function:** The built-in LED night light can often be cycled through different colors or turned off by pressing a dedicated light button (if available).

**COPPER
HEATS
FAST!**



Image: The Handy Heater displaying a set temperature of 90 degrees Fahrenheit on its digital screen, indicating active heating.

Your browser does not support the video tag.

Video: An official product video from Ontel Products Corp demonstrating the features of the Handy Heater Copper Core Pure Warmth, including its powerful heating, adjustable thermostat, and quiet operation.

MAINTENANCE

- **Cleaning:** Always unplug the heater and allow it to cool completely before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- **Dust Removal:** Use a vacuum cleaner with a brush attachment to gently remove dust from the air intake and exhaust grilles. Regular cleaning helps maintain optimal performance and prevents overheating.
- **Storage:** When not in use, store the heater in a cool, dry place, preferably in its original packaging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in securely; power outlet malfunction; unit's internal safety switch activated.	Ensure the heater is firmly plugged into a working 110V outlet. Check the circuit breaker. If the unit was tipped over or overheated, unplug it, wait 30 minutes, and plug it back in.
Heater stops working unexpectedly.	Overheat protection activated; tip-over switch activated; timer expired.	Check if the unit was tipped over. Unplug and allow to cool for 30 minutes. Verify the timer setting. Ensure air vents are not blocked.
Insufficient heat output.	Temperature setting too low; room size too large; blocked air vents.	Increase the temperature setting. Ensure the heater is appropriate for the room size (up to 250 sq ft). Clean air vents.

SPECIFICATIONS

Brand: Ontel

Model Number: HEATTB-MC12/4

Color: Copper Core

Heat Output: 1500 Watts

Voltage: 110 Volts

Heating Coverage: Up to 250 sq ft

Product Dimensions: 4.51"D x 4.93"W x 5.53"H

Item Weight: 3.14 pounds

Special Features: Programmable Thermostat, On/Off Timer, Portable, Energy Efficient, Lightweight, Digital Display, Adjustable Temperature, Adjustable Thermostat, Built-in LED Night Light.

Form Factor: Plug In

Indoor/Outdoor Usage: Indoor only

UPC: 735541126239

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact details provided with your product packaging or visit the official Ontel website. Keep your purchase receipt for warranty claims.