

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Ontel](#) /

› [Ontel Miracle Smile Water Flosser Instruction Manual - Model MCSMLDX-MO12](#)

Ontel MCSMLDX-MO12

Ontel Miracle Smile Water Flosser Instruction Manual

MODEL: MCSMLDX-MO12



Image: Ontel Miracle Smile Water Flosser, showing the device, its packaging, and two additional H-shaped flossing heads.

1. Safety Information

Please read all instructions carefully before using the Ontel Miracle Smile Water Flosser. Retain this manual for future reference.

- Do not immerse the main unit in water. The device is water-resistant for shower use, but not designed for full submersion.
- Keep out of reach of children.
- Do not use if you have an open wound in your mouth or have recently undergone oral surgery without consulting a dentist.
- Use only with water or dentist-recommended mouthwash. Do not use abrasive or corrosive cleaning agents.
- Ensure the charging port is dry before connecting the USB charging cable.

- If the device is damaged, do not attempt to repair it yourself. Contact customer support.

2. Product Overview

The Ontel Miracle Smile Water Flosser is designed for comprehensive oral hygiene, featuring an H-shaped flossing head with four water jets for efficient cleaning. It offers multiple pressure settings and is cordless and rechargeable for convenience.

Key Features:

- **H-Shaped Flossing Head:** Unique design with 4 water jets to clean all sides of a tooth simultaneously.
- **3 Pressure Settings:** Customizable intensity for various oral care needs, including sensitive teeth.
- **360° Cleaning Technology:** Effectively cleans teeth and below the gum line.
- **Cordless & Rechargeable:** Portable design with a USB charging cable for easy power.
- **Water-Resistant:** Safe for use in the shower.
- **220ml Water Tank:** Designed for quick and easy refills.



Image: Visual representation of the flosser's key features, including plaque fighting, cordless operation, three pressure settings, replaceable tips, flossing capability, and water resistance.



Image: A 'before and after' comparison demonstrating the product's ability to help remove food particles and stains from teeth.

3. Package Contents

Verify that all items are present in the package:

- Ontel Miracle Smile Water Flosser Unit
- H-Shaped Flossing Head (pre-installed)
- 2 x Additional Replacement H-Shaped Flossing Heads
- USB Charging Cable
- Instruction Booklet (this document)



Image: The Miracle Smile Water Flosser alongside its retail packaging, emphasizing the inclusion of two replacement H-

shaped flossing heads.

4. Setup

4.1 Initial Charge

1. Before first use, fully charge the device. Connect the USB charging cable to the charging port on the flosser and to a compatible USB power adapter (not included).
2. The indicator lights will show charging status. A full charge typically takes several hours.



Image: A close-up view of the water flosser's body, highlighting the rechargeable feature with a battery icon.

4.2 Attaching the Flossing Head

- Ensure the device is turned off.
- Align the H-shaped flossing head with the nozzle opening on the top of the unit.
- Press firmly until it clicks into place. To remove, press the release button (if present) and pull the head off.

4.3 Filling the Water Tank

1. Open the water tank cap located at the bottom or side of the unit.
2. Fill the 220ml water tank with lukewarm water. Distilled or filtered water is recommended to prevent mineral buildup.
3. Close the water tank cap securely to prevent leakage.



Image: A hand filling the water flosser's tank directly from a faucet, illustrating the easy-fill design.

5. Operating Instructions

1. **Power On:** Press the power button to turn on the device.
2. **Select Pressure Mode:** The device typically defaults to a high setting. Press the mode selection button (usually indicated by an 'M' or similar icon) to cycle through the 3 pressure modes: Low, Medium, and High. Select the mode comfortable for your gums.



Image: The control panel of the water flosser, displaying the power button, mode selection button, and LED indicators for the three pressure settings (Low, Medium, High).

3. **Positioning:** Place the H-shaped flossing head into your mouth, positioning it around a tooth. It is recommended to keep your lips closed around the flossing head to prevent splashing.
4. **Flossing:** Start with your back molars on one side. Glide the flossing head slowly along the gum line and between teeth, allowing the H-shaped head to pivot as you move. Ensure all surfaces of each tooth are cleaned. The process for a full mouth typically takes about 10 seconds per tooth area.



Image: An illustration demonstrating the H-shaped flossing head's four water jets cleaning all sides of a tooth in a single pass.



Image: Visual instructions for optimal use, advising users to set intensity, keep lips closed during operation, and begin flossing from the back of the mouth.

5. **Completion:** After flossing, turn off the unit by pressing the power button before removing it from your mouth.

6. Maintenance

6.1 Cleaning the Unit

- After each use, empty any remaining water from the tank.
- Rinse the water tank and the flossing head under running water.
- Wipe the main unit with a soft, damp cloth. Do not use abrasive cleaners.

6.2 Storage

- Store the water flosser in a cool, dry place away from direct sunlight.
- Ensure the unit is dry before storing.

6.3 Replacing Flossing Heads

- It is recommended to replace the flossing head every 3 months, or sooner if it shows signs of wear.
- Refer to section 4.2 for instructions on attaching and removing flossing heads.

7. Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not turn on	Low battery; Device not charged	Charge the device fully using the provided USB cable.
Weak water pressure	Water tank empty; Flossing head clogged; Low battery	Refill water tank; Clean flossing head; Charge device.
Water leakage	Water tank cap not closed properly; Flossing head not securely attached	Ensure water tank cap is sealed; Re-attach flossing head until it clicks.
Device stops during use	Water tank empty; Low battery	Refill water tank; Charge device.

8. Specifications

- **Model Number:** MCSMLDX-MO12
- **Product Dimensions:** 2.17 x 3.31 x 11.3 inches
- **Item Weight:** 9.1 ounces
- **Water Tank Capacity:** 220ml
- **Power Source:** Battery Powered (1 Lithium Polymer battery, included)
- **UPC:** 735541276231
- **Special Features:** 4 Targeted Water Jets, Increased Water Pressure (160 psi), H-Shaped Flossing Head

9. Warranty and Support

For warranty information or customer support, please refer to the contact details provided with your purchase documentation or visit the official Ontel website. Keep your proof of purchase for any warranty claims.