

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [G-Shock](#) /

> [G-Shock GA2100SB-1A Watch User Manual](#)

G-Shock GA2100SB-1A

G-Shock GA2100SB-1A Watch User Manual

Model: GA2100SB-1A | Brand: G-Shock

INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your G-Shock GA2100SB-1A watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. The G-Shock GA2100SB-1A combines rugged durability with a sophisticated design, featuring an octagonal form and metallic accents.

PRODUCT OVERVIEW



Image 1: Front view of the G-Shock GA2100SB-1A watch, showcasing its silver metallic dial, analog hands, and digital display. The watch features a black octagonal bezel and resin band.

The G-Shock GA2100SB-1A is a durable, shock-resistant watch designed for various activities. It features a combination analog and digital display, offering multiple functions including timekeeping, stopwatch, countdown timer, and alarm. Its slim profile and 200M water resistance make it suitable for daily wear and water sports.





Image 2: Side view of the G-Shock GA2100SB-1A watch, highlighting its slim 11.8mm profile and the textured black resin band. The side buttons for adjustment and mode selection are visible.

SETUP

1. Initial Time Setting

1. In the Timekeeping Mode, press and hold the **ADJUST** button (top left) until the city code starts to flash. This indicates the setting mode.
2. Use the **MODE** button (bottom left) to cycle through the settings: City Code, DST (Daylight Saving Time), 12/24-hour format, Seconds, Hour, Minute, Year, Month, Day.
3. Use the **LIGHT** button (top right) and **START** button (bottom right) to change the selected value.
4. Once all settings are correct, press the **ADJUST** button again to exit the setting mode.

2. Hand Alignment Correction

If the analog hands do not match the digital time, you may need to perform a hand alignment correction. Refer to the detailed instructions in the full manual for your specific module number, usually found on the watch's case back.

OPERATING MODES

Press the **MODE** button (bottom left) to cycle through the different operating modes:

- **Timekeeping Mode:** Displays the current time and date.
- **World Time Mode:** Displays the current time in various cities around the world.
- **Stopwatch Mode:** Measures elapsed time with 1/100-second precision.
 - Press **START** (bottom right) to start/stop.
 - Press **ADJUST** (top left) to reset.
- **Countdown Timer Mode:** Counts down from a specified time, up to 24 hours.
 - Press **START** (bottom right) to start/stop.
 - To set the timer, hold **ADJUST** (top left) in timer mode.
- **Alarm Mode:** Set up to 5 daily alarms and an hourly time signal.
 - Use **LIGHT** (top right) and **START** (bottom right) to toggle alarms on/off.
 - To set an alarm, hold **ADJUST** (top left) in alarm mode.

Illumination

Press the **LIGHT** button (top right) to illuminate the display with the Dual LED Super Illuminator.

MAINTENANCE

Water Resistance

Your G-Shock GA2100SB-1A is water resistant to 200 meters (20 BAR). This means it is suitable for showering, swimming, and shallow diving. **Do not operate buttons while the watch is wet or submerged.** Avoid exposing the watch to hot water or steam, as this can compromise the seals.

Cleaning

Wipe the watch with a soft, dry cloth. For stubborn dirt, use a soft brush and mild soap solution, then rinse thoroughly with fresh water and dry completely. Avoid using chemical cleaners or solvents.

Battery Replacement

The watch uses a CR2016 battery. Battery life varies depending on usage. When the display becomes dim or functions become erratic, it is time to replace the battery. It is recommended to have battery replacement performed by an authorized service center to ensure proper water resistance sealing.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low. Replace the battery.
- **Analog hands do not match digital time:** Perform hand alignment correction as described in the Setup section or refer to the full manual.
- **Watch stops functioning after exposure to water:** Ensure all buttons were not operated while submerged. Contact an authorized service center for inspection.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable) or that the battery is not critically low.

SPECIFICATIONS

Model Name	G-Shock GA2100SB-1A Black One Size
Part Number	GA-2100SB-1ACR
Material	Plastic
Color	Black And Silver
Item Weight	6 Ounces
Water Resistance Depth	200 Meters (20 BAR)
Item Dimensions (LxWxH)	4.37 x 3.78 x 3.23 inches (Package)
Included Components	G-Shock GA2100SB-1A Black One Size Watch

WARRANTY INFORMATION

Your G-Shock GA2100SB-1A watch comes with a manufacturer's warranty. For specific details regarding coverage, duration, and terms, please refer to the warranty card included with your purchase or visit the official G-Shock website. Keep your proof of purchase for warranty claims.

SUPPORT

For further assistance, detailed operating instructions, or service inquiries, please visit the official G-Shock support website or contact their customer service. You can often find the full module manual by searching for the module number (usually a 4-digit number on the watch's case back) on the G-Shock website.

