

manuals.plus /

> [Fockety](#) /

> [Fockety MP3 Player Instruction Manual: Portable Music Player with LCD Screen](#)

Fockety Fockety0aq9m3vb6e-11

Fockety MP3 Player Instruction Manual

Model: Fockety0aq9m3vb6e-11

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Fockety Portable MP3 Player. Please read this manual thoroughly before operating the device and retain it for future reference.

PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- 1 x Fockety MP3 Player
- 1 x Headphones
- 1 x USB Charging Cable



Image: Fockety MP3 Player, included headphones, and USB charging cable.

PRODUCT OVERVIEW

The Fockety MP3 Player is designed for portable music playback. It features a compact design, an LCD screen, and a clip for easy attachment.

- Built-in memory card expansion slot, supports a maximum extension of 32GB.
- The ultra-lightweight player can clip on your clothes or other devices and stays in place for a worry-free sport.
- Long battery life, can play for more than 5 hours, no more need to worry of lack of electricity.
- Adopt high quality aluminum alloy material, more firm and durable, provide longer service life.



Image: Front view of the MP3 player, displaying the LCD screen and circular control panel with 'M', play/pause, skip, and 'VOL' buttons.

Key Features:

- **Memory Card Expansion:** Supports up to 32 GB via a memory card slot (memory card not included).
- **Portable Design:** Ultra-lightweight with a clip for secure attachment to clothing or other items.
- **Extended Battery Life:** Provides over 5 hours of continuous playback on a full charge.
- **LCD Screen:** Displays song progress and navigation information clearly.
- **Durable Construction:** Made from high-quality aluminum alloy for enhanced durability.

DEVICE LAYOUT

Familiarize yourself with the various ports and controls of your MP3 player.



Image: Side view of the MP3 player, highlighting the 3.5mm headphone jack, MicroSD card slot, and the On/Off power switch.

- **3.5mm Audio Jack:** For connecting headphones.
- **MicroSD Card Slot:** Insert your memory card here.
- **Power Switch:** Slide to turn the device On or Off.
- **Mini USB Port:** Used for charging the device.
- **Control Buttons:** (M) Menu, Play/Pause, Skip Forward, Skip Backward, (VOL) Volume.

SETUP

1. Inserting a Memory Card

1. Ensure the MP3 player is powered off.
2. Locate the MicroSD card slot on the side of the device.
3. Gently insert a MicroSD card (up to 32GB, not included) into the slot until it clicks into place.
4. To remove, gently push the card in again until it springs out.

2. Connecting Headphones

Plug the 3.5mm jack of your headphones into the audio port on the side of the MP3 player.

OPERATING INSTRUCTIONS

Powering On/Off

- To turn on: Slide the power switch to the "ON" position. The LCD screen will illuminate.
- To turn off: Slide the power switch to the "OFF" position. The screen will turn off.

Playing Music

1. Ensure a memory card with MP3 files is inserted.
2. Power on the device.
3. The player should automatically enter "Music Mode" or display a menu. Use the skip buttons (<< / >>) to navigate through songs or menu options.
4. Press the **Play/Pause** button (center button) to start or pause playback.
5. Press the **M** button to access the menu for different modes or settings.

Volume Control

Press the **VOL** button. While the volume indicator is displayed on the screen, use the skip buttons (<< / >>) to adjust the volume level. Press **VOL** again or wait a few seconds for the volume indicator to disappear.

CHARGING THE DEVICE

The MP3 player has a built-in rechargeable lithium battery. When the battery is low, the device will indicate this on the screen or power off automatically.

1. Locate the Mini USB port on the side of the MP3 player.
2. Connect the smaller end of the provided USB charging cable to the Mini USB port on the player.
3. Connect the standard USB-A end of the cable to a USB power adapter (not included) or a computer's USB port.
4. The device will begin charging. A full charge provides over 5 hours of playback time.

Important Note: The USB port on this device is for charging only. It cannot be used to transfer files to or from a computer.



Image: The Fockety MP3 Player with its Mini USB charging port visible on the side.

MAINTENANCE

- Keep the device dry. Avoid exposure to moisture or liquids.
- Clean the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Avoid dropping or subjecting the device to strong impacts.
- Store the device in a cool, dry place when not in use.
- Do not attempt to disassemble or repair the device yourself. This will void the warranty.

TROUBLESHOOTING

Problem	Possible Solution
Device does not power on.	Ensure the power switch is in the "ON" position. Charge the device for at least 30 minutes. The battery may be completely depleted.
No sound from headphones.	Check if headphones are properly plugged into the 3.5mm jack. Increase the volume using the VOL button. Test with another pair of headphones to rule out faulty headphones.

Problem	Possible Solution
Cannot find music files.	<p>Ensure a MicroSD card with MP3 files is correctly inserted.</p> <p>Verify that the music files are in MP3 format.</p> <p>The USB port is for charging only; files must be loaded onto the MicroSD card using a separate card reader.</p>
Device freezes or is unresponsive.	Slide the power switch to "OFF" and then back to "ON" to restart the device.

SPECIFICATIONS

Model Name	Fockety0aq9m3vb6e-11
Brand	Fockety
Display	LCD Mini Screen
Memory Type	Memory Card (MicroSD)
Max. Expansion	32 GB
Supported Audio Formats	MP3
Interface	1 x Mini USB (charging only), 1 x 3.5mm Audio Jack, 1 x Memory Card Slot
Battery Type	Built-in 250mAh Lithium Battery
Working Hours	Over 5 hours
Material	Aluminum Alloy
Item Weight	47 Grams

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact Fockety customer service directly. Keep your purchase receipt as proof of purchase.

Do not attempt to open or modify the device, as this may void your warranty.