

manuals.plus /

> [Fockety](#) /

> [Fockety Portable Mini MP3 Player User Manual - Model Fockety0aq9m3vb6e-12](#)

Fockety Fockety0aq9m3vb6e-12

Fockety Portable Mini MP3 Player User Manual

Model: Fockety0aq9m3vb6e-12

1. INTRODUCTION

Thank you for purchasing the Fockety Portable Mini MP3 Player. This device is designed for convenient music playback on the go, featuring a compact design, an LCD screen, and support for up to 32GB memory expansion. Please read this manual carefully to ensure proper use and maintenance of your MP3 player.



Image 1.1: Fockety MP3 Player with musical notes background.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Use only the provided or recommended accessories.
- Listen to music at moderate volume levels to prevent hearing damage.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Fockety Portable Mini MP3 Player
- USB Charging Cable
- Wired Headphones



Image 3.1: Package contents including the MP3 player, USB cable, and headphones.

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts of your MP3 player:

Front View and Controls



Image 4.1: Front view of the MP3 player with LCD screen and control buttons.

- **LCD Screen:** Displays track information, battery status, and menu options.
- **M (Menu/Mode) Button:** Used to access menus or switch between modes.
- **Play/Pause Button (▶ ||):** Starts or pauses playback.
- **Previous Track/Rewind Button (◀◀):** Skips to the previous track or rewinds during playback.
- **Next Track/Fast Forward Button (▶▶):** Skips to the next track or fast forwards during playback.
- **VOL (Volume) Button:** Adjusts the playback volume.

Top View



Image 4.2: Top view showing the TF-CARD slot, headphone jack, and power switch.

- **TF-CARD Slot:** For inserting a Micro SD card (up to 32GB) to expand storage.
- **3.5mm Headphone Jack:** Connect your wired headphones here.
- **Power Switch:** Slides to turn the device ON or OFF.

Bottom View





Image 4.3: Bottom view showing the mini USB charging port.

- **Mini USB Port:** Used for charging the device and transferring files from a computer.

Side View



Image 4.4: Side view showing the integrated clip.

- **Integrated Clip:** Allows you to attach the MP3 player to clothing or other items for hands-free use.

5. SETUP

5.1 Charging the Battery

1. Connect the small end of the USB charging cable to the Mini USB port on the bottom of the MP3 player.
2. Connect the standard USB end of the cable to a computer's USB port or a compatible USB wall adapter (not included).
3. The device will indicate charging status on the LCD screen. Charge fully before first use.

The MP3 player has a long battery life, providing over 5 hours of playback on a full charge.

5.2 Inserting a Micro SD Card

The device supports Micro SD cards up to 32GB for storing your music.

1. Locate the TF-CARD slot on the top of the MP3 player.
2. Gently insert a Micro SD card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, push the card in slightly until it springs out.

5.3 Connecting Headphones

1. Plug the 3.5mm jack of your wired headphones into the headphone port on the top of the MP3 player.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- **To Power On:** Slide the Power Switch (located on the top) to the 'ON' position. The LCD screen will light up.
- **To Power Off:** Slide the Power Switch to the 'OFF' position. The screen will turn off.

6.2 Transferring Music Files

To transfer music files to your MP3 player:

1. Ensure the MP3 player is powered ON.
2. Connect the MP3 player to your computer using the USB cable.
3. Your computer should recognize the MP3 player as a removable disk.
4. Drag and drop your desired MP3 audio files into the player's storage or the inserted Micro SD card.
5. Once files are transferred, safely eject the device from your computer before disconnecting the USB cable.

6.3 Basic Music Playback

1. After powering on, the player will typically enter 'Music Mode' or display the last played track.
2. Press the **Play/Pause** (▶■) button to start or pause playback.
3. Press the **Previous Track** (◀) or **Next Track** (▶) buttons to skip between songs.
4. Press and hold the **Previous Track** (◀) or **Next Track** (▶) buttons to rewind or fast forward within a track.
5. Press the **VOL** button, then use the **Previous Track** (◀) or **Next Track** (▶) buttons to adjust the volume level. Press **VOL** again to confirm or wait a few seconds.

6.4 Using the 'M' (Menu/Mode) Button

The 'M' button allows you to navigate through different modes or menu options. Specific functions may vary slightly depending on the firmware version. Typically, it allows you to:

- Switch between playback modes (e.g., normal, repeat one, repeat all, shuffle).
- Access settings (e.g., equalizer, display brightness).
- Browse files on the Micro SD card.

Use the **Previous Track** (◀) and **Next Track** (▶) buttons to navigate menu options, and the **Play/Pause** (▶■) button to select.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** Store the MP3 player in a cool, dry place when not in use. Avoid extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

8. TROUBLESHOOTING

- **Device does not power on:** Ensure the battery is charged. Connect to a power source and try again. Check if the power switch is in the 'ON' position.
- **No sound:** Check if headphones are properly connected. Ensure the volume is not set to minimum or muted. Test with different headphones if possible.
- **Computer does not recognize the device:** Ensure the USB cable is securely connected to both the MP3 player and the computer. Try a different USB port or cable. Restart your computer. Ensure the MP3 player is powered ON when connecting.
- **Cannot transfer files:** Verify that the MP3 player is recognized by the computer. Check if the Micro SD card has sufficient free space. Ensure the files are in a compatible format (e.g., MP3).
- **Screen is blank or frozen:** Try turning the device off and then on again using the power switch. If unresponsive, allow the battery to fully discharge and then recharge.

9. SPECIFICATIONS

Brand	Fockety
Model	Fockety0aq9m3vb6e-12
Digital Memory Capacity	Supports up to 32 GB (Micro SD card)
Battery Life	Over 5 hours of playback
Material	Aluminum Alloy
Package Dimensions	17.1 x 11.7 x 3.4 cm
Weight	47 g
Country of Origin	China

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Specific warranty terms may vary by region and seller.