

[manuals.plus](#) /

› [TMA](#) /

› [TMA T800-2 Electric Spin Scrubber User Manual](#)

**TMA T800**

# **TMA T800-2 Electric Spin Scrubber User Manual**

Model: T800

## **1. INTRODUCTION**

---

Thank you for choosing the TMA T800-2 Electric Spin Scrubber. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and retain it for future reference.



Image 1.1: The TMA T800-2 Electric Spin Scrubber, showcasing its main body, adjustable extension arm, and the four included replaceable brush heads (dome, large flat, small flat, and corner brush), along with the charging cable and wall mount.

## 2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not immerse the main body of the scrubber in water. The brush heads are waterproof, but the motor unit and charging port are not.
- Keep the device away from children and pets.
- Use only the provided charging cable and adapter.
- Do not operate the scrubber if it is damaged or malfunctioning. Contact customer support.
- Ensure the brush head is securely attached before operation.
- Avoid applying excessive pressure, which can strain the motor.
- Always turn off the device before changing brush heads or cleaning.

## Waterproof Brush Head

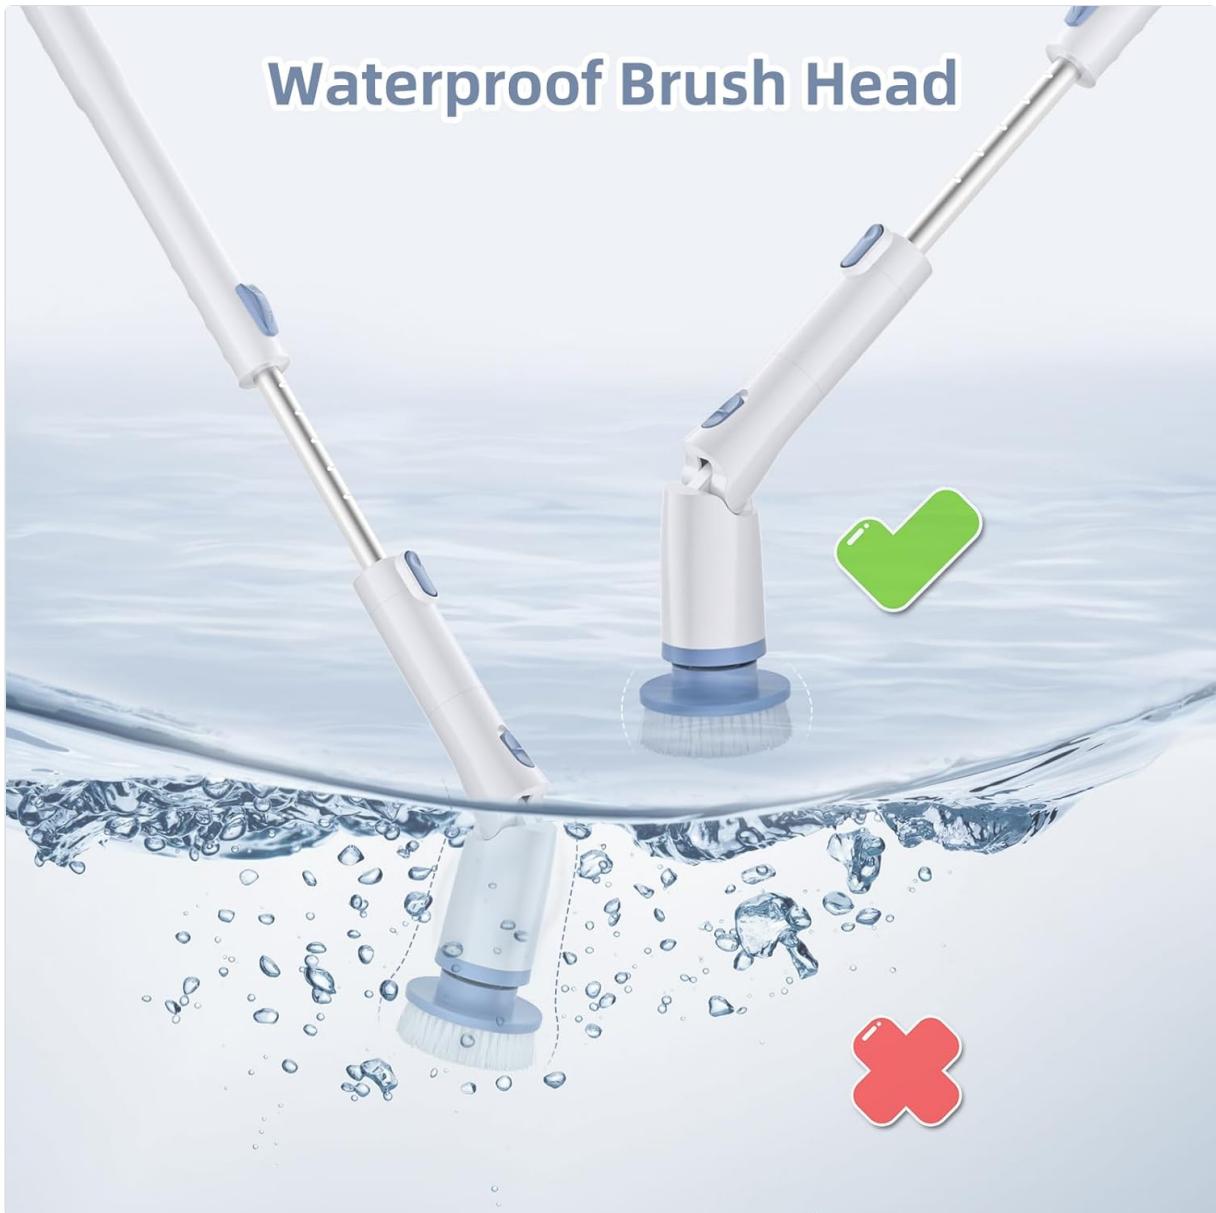


Image 2.1: Illustration showing the waterproof nature of the brush head assembly, indicating it can be submerged, while the main body should remain above water. A green checkmark indicates correct usage, and a red cross indicates incorrect usage (submerging the entire unit).

### 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- TMA T800-2 Electric Spin Scrubber Main Unit
- Adjustable Extension Arm
- Dome Brush Head
- Large Flat Brush Head
- Small Flat Brush Head
- Corner Brush Head
- USB Charging Cable
- Wall Mount Hook
- User Manual (this document)



Image 3.1: An exploded view of the TMA T800-2 Electric Spin Scrubber and its accessories, including the main unit, extension rod, various brush heads, charging cable, and wall mount, all neatly arranged with the product packaging in the background.

## 4. ASSEMBLY AND SETUP

Follow these steps to assemble your electric spin scrubber:

- 1. Attach the Extension Arm (Optional):** To extend the reach, align the extension arm with the main unit and twist clockwise until it locks securely. You can further extend the arm to 50.5 inches for high places or keep it shorter at 26.5 or 44 inches.
- 2. Attach a Brush Head:** Select the appropriate brush head for your cleaning task. Align the brush head with the rotating shaft on the main unit (or extension arm) and push firmly until it clicks into place.
- 3. Adjust Head Angle:** The scrubber head can be adjusted to various angles (90°, 135°, 180°) by pressing the angle adjustment button and rotating the head to the desired position.
- 4. Initial Charge:** Before first use, fully charge the scrubber. Connect the USB charging cable to the charging port on the handle and plug it into a suitable USB power adapter (not included). The indicator light will show charging status. A full charge takes approximately 3-5 hours.

# Detachable Free Adjustment Extension rod & Head angle



Image 4.1: Visual representation of the detachable extension rod, showing lengths of 26.5 inches, 44 inches, and 50.5 inches. Below, three diagrams illustrate the adjustable head angles: 180 degrees (straight), 135 degrees, and 90 degrees, demonstrating flexibility for various cleaning tasks.

## 5. OPERATION

Operating your TMA T800-2 Electric Spin Scrubber is straightforward:

- 1. Power On/Off:** Press the power button to turn the scrubber on. Press it again to turn it off.
- 2. Select Speed:** The scrubber features two adjustable speeds. Press the speed button to toggle between the standard speed (300 RPM for longer working time) and the maximum speed (410 RPM for stubborn stains).
- 3. Apply Cleaning Solution:** For best results, apply your preferred cleaning solution directly to the surface to be cleaned or to the brush head.
- 4. Begin Cleaning:** Gently guide the rotating brush head over the surface. Allow the scrubber to do the work; avoid pressing down too hard.
- 5. Brush Head Selection:**
  - **Dome Brush:** Ideal for curved surfaces like bathtubs and sinks.
  - **Large Flat Brush:** Suitable for large flat areas such as floors, walls, and shower doors.

- **Small Flat Brush:** Best for smaller flat surfaces, stovetops, and countertops.
- **Corner Brush:** Designed for grout lines, corners, and tight spaces.



Image 5.1: A user operating the TMA T800-2 Electric Spin Scrubber on a tiled floor, illustrating the two adjustable speeds: 410 RPM for thorough cleaning of stubborn stains and 300 RPM for standard cleaning, providing up to 90 minutes of working time.

## Multiple Brush For Different Clean Needs



Image 5.2: A collage demonstrating the application of different brush heads: the Dome Brush for bathtubs, the Large Flat Brush for floors, the Small Flat Brush for stovetops, and the Corner Brush for grout lines, highlighting their specific uses.

## 6. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and performance of your scrubber:

- **Cleaning Brush Heads:** After each use, remove the brush head and rinse it thoroughly under running water. Allow it to air dry completely before storing.
- **Cleaning the Main Unit:** Wipe the main unit and extension arm with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Charging:** Recharge the scrubber when the battery indicator shows low power. The 2500mAh battery provides up to 73 minutes of cleaning time on a full charge.
- **Storage:** Store the scrubber and its accessories in a dry, cool place, away from direct sunlight. Use the provided wall mount hook for convenient storage.

## 2500mAh Large Battery & Easy Store



**3-5Hour**  
Fast Charging



**2500mAh**  
2-Cell large capacity battery



Image 6.1: The TMA T800-2 Electric Spin Scrubber charging while mounted on a wall hook, illustrating its 2500mAh large capacity battery and a fast charging time of 3-5 hours.

## 7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Scrubber does not turn on.	Low battery or not charged.	Charge the scrubber fully (3-5 hours).
Brush head stops spinning or spins slowly.	Low battery, excessive pressure, or brush head jammed.	Recharge the battery. Reduce pressure. Check for obstructions and clear them.
Scrubber makes unusual noise.	Brush head not properly attached or internal issue.	Ensure brush head is securely clicked into place. If noise persists, discontinue use and contact support.

Problem	Possible Cause	Solution
Difficulty attaching/detaching brush heads.	Misalignment or debris.	Ensure proper alignment. Clean any debris from the connection point.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	T800
Brand	TMA
Battery Capacity	2500mAh (2-cell large capacity)
Charging Time	3-5 hours
Operating Time	Up to 73 minutes (standard speed)
Rotation Speed	Standard: 300 RPM, Max: 410 RPM
Extension Arm Lengths	26.5 inches, 44 inches, 50.5 inches
Adjustable Head Angles	90°, 135°, 180°
Material	Stainless Steel (handle), Plastic (body)
Item Weight	1 kg 840 g
Dimensions (LxWxH)	11.4 x 11.4 x 123.2 Centimeters (fully extended)
Surface Recommendation	Carpet, Floor, Grout, Tile

## Upgraded High-Efficiency Motor



Image 8.1: An X-ray style illustration highlighting the upgraded high-efficiency motor of the TMA T800-2 Electric Spin Scrubber, capable of reaching a maximum speed of 410 RPM for deep cleaning, shown in action on a tiled floor with cleaning solution.

### 9. WARRANTY AND SUPPORT

TMA products are manufactured with quality and reliability in mind. For warranty information, technical support, or replacement parts, please refer to the contact information provided with your purchase documentation or visit the official TMA website.

Please retain your proof of purchase for warranty claims.