

## AIDITIYMI AKB76040302

# AIDITIYMI AKB76040302 Replacement Remote Control User Manual

## INTRODUCTION

---

This manual provides instructions for the AIDITIYMI AKB76040302 Replacement Remote Control, designed for various LG Smart LED TV models. It covers setup, operation, maintenance, and troubleshooting to ensure optimal use of your remote control.





Angled view of the remote control, showcasing its ergonomic design and button layout.

## SETUP

---

### Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included). No programming or pairing is needed; simply install the batteries, and the remote will be ready for use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.







Image showing the back of the remote control with the battery compartment open, ready for AAA battery insertion.

Once batteries are installed, the remote is ready for use without any programming or pairing.

## OPERATING INSTRUCTIONS

---

### Basic Functions

This remote control provides standard functions for your LG Smart LED TV, allowing you to navigate and control your television experience.

- **Power Button** (●): Turns the TV on or off.
- **Number Buttons (0-9)**: Selects channels directly.
- **Volume Up/Down (VOL +/-)**: Adjusts the TV volume.
- **Channel Up/Down (CH +/-)**: Changes TV channels.
- **Mute Button (MUTE)**: Mutes or unmutes the TV sound.
- **Navigation Buttons** (Up, Down, Left, Right, OK): Used to navigate menus and select options.
- **Back Button (BACK)**: Returns to the previous screen or menu.
- **Home Button (HOME)**: Accesses the TV's home screen or smart features.

### Shortcut App Buttons

The remote includes dedicated shortcut buttons for popular streaming applications, providing quick access to your favorite content.

- **NETFLIX**: Direct access to Netflix.
- **Disney**: Direct access to Disney+.
- **prm video**: Direct access to Prime Video.
- **L Channels**: Direct access to LG Channels.



Front view of the remote control, highlighting the power button, number pad, navigation, and dedicated app shortcut buttons.

## MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, solvents, or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or if it becomes unresponsive. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries or different battery types.
- **Storage:** If the remote will not be used for an extended period (e.g., several weeks or months), remove the

batteries to prevent potential leakage, which can cause damage to the remote control.

## TROUBLESHOOTING

---

If you encounter issues with your remote control, refer to the following troubleshooting steps.

### Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the positive (+) and negative (-) terminals aligned as indicated in the battery compartment. Replace with new AAA alkaline batteries if necessary.
- **Line of Sight:** Ensure there is a clear, unobstructed line of sight between the remote control's infrared emitter and the TV's infrared receiver. Obstacles can block the signal.
- **Remote Sensor:** Check if the TV's remote sensor is blocked or dirty. Clean it gently if needed.
- **TV Power:** Ensure the TV is powered on and not in standby mode.

### Limited Range

- **Battery Level:** Low batteries can significantly reduce the remote's effective operating range. Replace batteries with new ones.
- **Interference:** Strong light sources (e.g., direct sunlight, fluorescent lights) or other electronic devices can sometimes interfere with the infrared signal. Try operating the remote in a different environment or adjusting lighting.

## SPECIFICATIONS

---

Feature	Detail
Brand	AIDITIYMI
Model Number	AKB76040302 (ADSUNCTY-AKB76040302)
Connectivity Technology	Infrared
Battery Type	2 x AAA Alkaline (not included)
Maximum Range	Approximately 32 Feet (10 meters)
Compatible Devices	LG Smart LED Televisions
Compatible LG TV Models	24LQ51OS, 32LM627BPUA, 27LQ600S, 27LQ615S, 27LQ625S, 24LQ520S, 24LQ510S, 27LQ625SPU, 43LM5770PUA, 60UM6900PUA, 32LM577BZUA, 32LM637BPUB, 43LM6370PUB, 32LM577BPUA, 75UM6970PUB, 55UP7000PUA, 49UM7300PUA, 43UP7000PUA, 50UP75006LF, 70UM6970PUA, 50UN7000PUC, 65UN7000PUD, 65UP7000PUA, 43UM6950DUB, 27LQ625S-PU.AUS
Button Quantity	48
Color	Black

Weight	0.06 Kilograms
--------	----------------

## WARRANTY INFORMATION

---

This AIDITIYMI remote control comes with a **1-year warranty** from the manufacturer. This warranty covers defects in materials and workmanship under normal use. Please retain your purchase receipt as proof of purchase for any warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage.

## SUPPORT

---

For further assistance or if you encounter issues not covered in this manual, please refer to the seller's support channels where you purchased the product. For specific functions related to your LG TV, consult your television's original user manual.