

Manuals.plus /

› AIDITIYMI /

› AIDITIYMI BN59-01357C Voice Command Remote Control User Manual for Samsung Neo QLED Smart TVs

AIDITIYMI BN59-01357C

AIDITIYMI BN59-01357C Voice Command Remote Control User Manual

For Samsung Neo QLED 4K 8K Crystal UHD Smart TVs (2021 Models)

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your AIDITIYMI BN59-01357C Voice Command Remote Control. This remote is designed as a replacement for various Samsung Neo QLED 4K 8K Crystal UHD Smart TV 2021 models, including Q60A, Q70A, Q80A, LS03A, QA60A, QA70A, QA80A, QN85A, QN90A, QN700A, QN800A, QN900A, and QNLS03A Series. It replaces models such as BN59-01350F, BN59-01357L, BN59-01350C, and BN59-01354A.

SETUP

1. Battery Installation

To power your remote control, you will need two (2) 1.5V AAA alkaline batteries. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the release tab (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Back of the remote control with the battery cover removed, illustrating the battery insertion points.

2. Pairing Instructions

Before using the remote control, it must be paired with your Samsung Smart TV. This remote does not feature a solar panel for charging.

1. Ensure your TV is powered on.
2. Install two new 1.5V AAA alkaline batteries into the remote control as described above.
3. Point the remote control towards your TV.
4. Simultaneously press and hold the **Return** button and the **Play/Pause** button for 3 seconds or more.
5. A pairing message should appear on your TV screen, indicating successful pairing. The remote will then be ready for use.

OPERATING THE REMOTE CONTROL

The AIDITIYMI BN59-01357C remote control provides intuitive access to your Samsung Smart TV's functions. Familiarize yourself with the button layout and their respective uses.



Image: Front view of the remote control, displaying the power button, voice command button, navigation pad, volume and channel controls, and dedicated app buttons.

Button Functions

- **Power (Red Circle with Line):** Turns the TV on or off.
- **Voice Command (Microphone Icon):** Activates the voice assistant for hands-free control and search.
- **123 (Numbered Grid):** Accesses the on-screen numeric keypad.
- **Source (Rectangle with Arrow):** Changes the input source (HDMI, TV, etc.).
- **Navigation Pad (Circular):** Use the directional buttons (Up, Down, Left, Right) to navigate menus and the center button to select items.

- **Return (Curved Arrow):** Goes back to the previous screen or menu.
- **Home (House Icon):** Returns to the Smart Hub home screen.
- **Play/Pause (Triangle/Two Vertical Lines):** Controls media playback.
- **Volume (+/-):** Adjusts the TV volume.
- **Channel (Up/Down Arrows):** Changes TV channels.
- **NETFLIX:** Direct access to the Netflix application.
- **Prime Video:** Direct access to the Amazon Prime Video application.
- **WWW:** Direct access to the web browser.

Voice Command Usage

To use the voice command feature:

1. Press and hold the **Voice Command (Microphone)** button.
2. Speak clearly into the microphone located at the top of the remote control.
3. Release the button when you have finished speaking. Your TV will process the command or search query.

MAINTENANCE

Cleaning

To maintain the remote control's appearance and functionality:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

If you encounter issues with your remote control, try the following solutions:

- **Remote not responding:**
Check if the batteries are correctly installed and have sufficient charge. Replace them if necessary. Ensure there are no obstructions between the remote and the TV.
- **Remote not pairing:**
Ensure the TV is on. Re-attempt the pairing process by holding the **Return** and **Play/Pause** buttons simultaneously for 3 seconds or more. If the issue persists, try restarting your TV.
- **Voice command not working:**
Ensure the remote is properly paired. Speak clearly and hold the voice command button while speaking. Check your TV's settings to ensure the voice assistant feature is enabled.
- **Buttons are sticky or unresponsive:**
The remote may require cleaning. Refer to the "Cleaning" section for instructions.

SPECIFICATIONS

Feature	Detail
Brand	AIDITIYMI
Model Number	BN59-01357C
Item Model Number (Manufacturer)	ADSUNCTY-BN59-01357C-VOIC
Compatible Devices	Samsung Neo QLED 4K 8K Crystal UHD Smart TVs (2021 Models)
Power Source	2 x 1.5V AAA Alkaline Batteries (not included)
Special Feature	Voice Command, Ergonomic Design
Color	Black
Product Dimensions	6.3 x 1.57 x 0.39 inches
Item Weight	3 ounces

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.