

## COSORI CAF-LI211-WUS

# COSORI CAF-LI211-WUS 2.1-Quart Mini Air Fryer Oven User Manual

Model: CAF-LI211-WUS

## 1. IMPORTANT SAFEGUARDS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. Read all instructions before use.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

---

## 2. PRODUCT OVERVIEW

---

### Package Contents

- 1 x COSORI 2.1-Quart Mini Air Fryer Oven
- 1 x Nonstick Basket
- 1 x Crisper Plate
- 100 x Square Disposable Paper Liners
- 1 x User Manual
- 1 x Quick Reference Guide

## Components

The COSORI 2.1-Quart Mini Air Fryer Oven features a compact design with a touch control panel. It includes a removable nonstick basket and crisper plate for easy cooking and cleaning.



Image: Front view of the COSORI CAF-LI211-WUS 2.1-Quart Mini Air Fryer Oven, white color, with its digital touch display showing temperature and time settings.



Image: Detailed front view of the COSORI 2.1-Quart Mini Air Fryer, highlighting the handle and the sleek design.

### 3. SETUP

---

## Before First Use

1. Remove all packaging from the air fryer and its accessories.
2. Wipe the exterior of the air fryer with a damp cloth.
3. Wash the basket and crisper plate thoroughly with hot, soapy water. Rinse and dry completely.
4. Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances. Ensure adequate ventilation around the unit.

## Test Run

To ensure the air fryer is working correctly and to eliminate any manufacturing odors, perform a test run before cooking food.

1. Plug the air fryer into a grounded electrical outlet.
2. Press the power button to turn on the unit.
3. Select the 'Air Fry' function. Adjust the temperature to 400°F (205°C) and time to 15 minutes.
4. Press the Start/Pause button to begin the test run.
5. After the cycle completes, allow the air fryer to cool down completely before proceeding.

---

## 4. OPERATING INSTRUCTIONS

---

The COSORI 2.1-Quart Mini Air Fryer offers 4 one-touch customizable cooking functions: Air Fry, Bake, Roast, and Reheat.

# 4 Cooking Functions in 1 Air Fryer



Image: The COSORI 2.1-Quart Mini Air Fryer displaying its four cooking functions: Air Fry, Bake, Roast, and Reheat, with examples of food cooked using each method.

## General Operation

1. Place the crisper plate inside the basket.
2. Place food on the crisper plate. Do not overfill the basket.
3. Slide the basket into the air fryer.
4. Plug in the air fryer.
5. Press the power button to turn on the unit.
6. Select your desired cooking function (Air Fry, Bake, Roast, Reheat).
7. Adjust the temperature and time using the '+' and '-' buttons.
8. Press the Start/Pause button to begin cooking.
9. The air fryer will beep when cooking is complete. Carefully remove the basket and food.

## Using Air Fryer Liners

The included COSORI Air Fryer Liners are designed for easy cleanup. Follow these guidelines for proper use:



Image: Packaging for the 100-piece COSORI Square Disposable Paper Liners, showing their dimensions and suitability for air fryer baskets.

- **WARNING:** Do NOT place the paper liner in the basket during preheating without food.
- Always ensure that there is enough food on the liner to prevent it from flying up to the upper heating element, which could result in serious consequences.
- The liners are waterproof, oilproof, and nonstick, extending the life of the basket and simplifying cleanup.
- They are made from unbleached 100% natural wood pulp, food-grade, and resistant to 465°F.

### How to Use:

1. When preheating, do not use the paper liner.
2. When heating, make sure there is enough food on the paper liner to weigh it down.
3. After cooking, simply remove the liner for easy disposal.

# Little to No Cleaning



**Save cleaning time**  
Disposable Paper Liners



**Safe and healthy**  
Food-Grade Parchment



**Multipurpose**  
Suitable for a Variety of Appliances



**Easy to use**  
Square Shape Fits Baskets Perfectly



Image: COSORI Air Fryer Liners placed inside the air fryer basket, containing cooked chicken wings, demonstrating their use.

## 5. MAINTENANCE & CLEANING

---

Regular cleaning ensures optimal performance and extends the lifespan of your COSORI Air Fryer.

### Cleaning the Air Fryer

- Always unplug the air fryer and allow it to cool completely before cleaning.
- The nonstick basket and crisper plate are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge.
- Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water.
- Clean the interior with a damp cloth and mild detergent if necessary.
- Ensure all parts are completely dry before storing or next use.

# Save Valuable Time

- ✓ Disposable & no need to clean
- ✓ Water- & oilproof, no leakage



- ✗ Need to Clean



- ✗ Messy with oil leaks



Image: A visual comparison showing the ease of cleaning with COSORI Air Fryer Liners versus cleaning a basket without liners, highlighting reduced mess.

## 6. SPECIFICATIONS

Feature	Specification
Model	CAF-LI211-WUS
Color	White
Capacity	2.1 qt / 2.0 L
Temperature Range	170°F–400°F / 75°C–205°C
Time Range	0-60 min
Rated Power	900W

Feature	Specification
Power Supply	AC 120V, 60Hz
Dimensions (with handle)	10.1 x 8.3 x 10.5 in / 25.6 x 21.1 x 26.7 cm
Dimensions (without handle)	8.0 x 8.3 x 10.5 in / 20.3 x 21.1 x 26.7 cm
Cooking Space Dimensions (D x W x H)	5.9 x 6.2 x 3.5 in
Weight	4.87 lb / 2.21 kg
Material	Silicone, Wood Pulp (Liners)
Controller Type	Touch control

## 7. TROUBLESHOOTING

---

If you encounter any issues with your COSORI Air Fryer, please refer to the following common problems and solutions:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a grounded outlet. Check if the outlet is functioning.
- **Food not cooking evenly:** Shake the basket halfway through cooking for smaller items. Do not overfill the basket.
- **White smoke coming from the appliance:** This may be caused by grease from fatty foods. Ensure the basket and crisper plate are clean. Remove excess oil from food before air frying.
- **Air fryer liners flying up:** Always place enough food on the liner to weigh it down and prevent it from contacting the heating element. Do not use liners during preheating.
- **Error codes on display:** Refer to the full user manual for specific error code meanings and resolutions. If the issue persists, contact customer support.

## 8. WARRANTY AND SUPPORT

---

COSORI provides a warranty for this product. Please refer to the warranty card included in your package or visit the official COSORI website for detailed warranty information.

For product support, questions, or concerns, please contact COSORI customer service:

- **Website:** [www.cosori.com](http://www.cosori.com)
- **Email:** [support@cosori.com](mailto:support@cosori.com)
- **Phone:** (888) 402-1684 (Mon–Fri, 9:00 am–5:00 pm PST/PDT)

