

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Bewinner](#) /

> [Universal Replacement Remote Control for TV Box CS918 MXV V88 V99](#)

## Bewinner Qinqqxj7KLbmSv

# Universal Replacement Remote Control User Manual

Model: Qinqqxj7KLbmSv | Brand: Bewinner

## INTRODUCTION

This manual provides comprehensive instructions for the Bewinner Universal Replacement Remote Control, model Qinqqxj7KLbmSv. This remote is designed to be a direct replacement for various TV Box models, including CS918, MXV, Q7, Q8, V88, and V99. Crafted from high-quality ABS material, it offers durability, wear-resistance, and a comfortable ergonomic design. It is engineered for immediate use without the need for complex programming or resetting, requiring only the insertion of two AAA batteries.

## SAFETY INFORMATION

Please read and follow these safety guidelines to ensure safe and proper operation of your remote control:

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping or subjecting the remote control to strong impacts.
- Do not immerse the remote control in water or any other liquids.
- Keep out of reach of children to prevent accidental ingestion of batteries or small parts.
- If the remote control is not used for an extended period, remove the batteries to prevent leakage.
- Dispose of used batteries according to local regulations.

## PACKAGE CONTENTS

The package should contain the following item:

- 1 x Bewinner Universal Replacement Remote Control

## PRODUCT OVERVIEW

Familiarize yourself with the layout and functions of your new remote control.



**Figure 1: Overall View of the Remote Control.** This image displays the full layout of the Bewinner Universal Remote Control, showcasing its compact design and the arrangement of all buttons, including the navigation pad, number keys, and dedicated function buttons.





**Figure 2: Detailed Button Layout.** A closer look at the remote's buttons, highlighting the central "OK" button surrounded by directional arrows, media control keys, volume controls, and the numeric keypad. Dedicated buttons for "MEDIA", "TV", "WEB", and "APP" are also visible at the top.



**Figure 3: Ergonomic Design and Portability.** This image demonstrates the remote control being held in a hand, illustrating its portable size and comfortable grip, designed for easy one-handed operation.

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two (2) AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover securely.

### 2. Initial Use

This remote control is designed for immediate use with compatible TV Box models (CS918, MXV, Q7, Q8, V88, V99). No programming or pairing is typically required. Once batteries are installed, point the remote control towards your TV Box and begin operation.

## OPERATING INSTRUCTIONS

---

## Basic Functions

- **Power Button** (●): Turns the TV Box on or off.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Used to navigate menus and select options. The central *OK* button confirms selections.
- **Volume Buttons (VOL-, VOL+)**: Adjusts the audio volume.
- **Channel Buttons (CH-, CH+)**: Changes channels or scrolls through lists.
- **Home Button** (△): Returns to the main home screen of your TV Box.
- **Return Button** (↶): Goes back to the previous screen or menu.
- **Menu Button** (≡): Accesses context-sensitive menus.
- **Media Button**: Direct access to media playback functions.
- **TV Button**: Switches to TV mode or related functions.
- **WEB Button**: Launches the web browser.
- **APP Button**: Opens the applications menu.
- **Numeric Keypad (0-9)**: For direct input of numbers, such as channel numbers or passwords.
- **Mouse Button**: Activates/deactivates mouse pointer mode (if supported by TV Box).

## Compatibility

This remote control is compatible with the following TV Box models:

- CS918 TV Box
- MXV TV Box
- Q7 TV Box
- Q8 TV Box
- V88 TV Box
- V99 TV Box

---

## MAINTENANCE

To ensure the longevity and optimal performance of your remote control:

- **Cleaning**: Use a soft, dry cloth to wipe the surface of the remote control. Do not use abrasive cleaners, solvents, or alcohol, as these may damage the finish or internal components.
- **Storage**: Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care**: If the remote control will not be used for an extended period (e.g., more than a month), remove the batteries to prevent potential leakage and damage.

---

## TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote control range is poor.	Obstruction between remote and TV Box; low battery power.	Ensure a clear line of sight. Replace batteries if they are old.
Certain buttons do not work.	Button stuck or damaged; compatibility issue.	Gently press the button multiple times. Verify your TV Box model is listed as compatible.
Remote works intermittently.	Loose battery connection; interference.	Re-seat batteries firmly. Move away from other electronic devices that might cause interference.

## SPECIFICATIONS

Feature	Detail
Brand	Bewinner
Model Number	Qinqqxj7KLbmSv
Material	ABS
Compatible TV Box Models	CS918, MXV, Q7, Q8, V88, V99
Power Source	2 x AAA Batteries (not included)
Color	Black
Country of Origin	China

## WARRANTY AND SUPPORT

This product comes with a **1 Year Warranty Against Manufacturer Defects**. For any issues or support inquiries, please contact your retailer or the manufacturer directly.

**Return Policy:** This product is eligible for a refund or replacement within 30 days of purchase, subject to the retailer's return policy.