

[manuals.plus](#) /

› [Dreamaker](#) /

› [Dreamaker One-Touch Fleece Electric Heated Throw Blanket User Manual](#)

Dreamaker B0CDWDDBTT

Dreamaker One-Touch Fleece Electric Heated Throw Blanket User Manual

Model: B0CDWDDBTT

Brand: Dreamaker

INTRODUCTION

Thank you for choosing the Dreamaker One-Touch Fleece Electric Heated Throw Blanket. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new heated blanket. Designed for ultimate comfort during cold nights, this 50x60 inch blanket features a cozy fleece material, four adjustable heat settings, and a convenient built-in remote for one-touch operation. Please read this manual thoroughly before first use and retain it for future reference.



The Dreamaker One-Touch Fleece Electric Heated Throw Blanket, folded to show its compact design and integrated control panel.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this blanket.
- Do not use with a generator, power converter, or inverter.
- Do not use with damaged cords or plugs.
- Do not use with other heating devices.
- Do not use for infants, children, incapacitated persons, or persons insensitive to heat.
- Do not use if wet.
- Do not use if folded, bunched, or creased.
- Always unplug the blanket when not in use.
- Do not dry clean this product. Dry cleaning solvents may damage the insulation of the heating element.
- Do not iron this product.
- Do not use pins or other metallic objects with this blanket.
- Keep the control unit away from drafts or open windows to prevent it from getting wet.

Safety Meets Energy Efficiency

Auto-Off Function



The blanket features an auto-off function and is ETL certified for safety and energy efficiency.

SETUP

- Unpack:** Carefully remove the heated blanket from its packaging. Retain packaging for storage or future transport.
- Inspect:** Before first use, inspect the blanket for any signs of damage, including the fabric, control unit, and power cord. Do not use if any damage is observed.
- Connect Power Cord:** Locate the detachable power cord. Insert the connector end of the cord firmly into the port on the blanket's control unit. Ensure a secure connection.

Machine Washable

Just detach the controller and toss it in the wash for easy, hassle-free cleaning.



The built-in controller with detachable cord for easy cleaning.

4. **Placement:** Lay the blanket flat on a bed or sofa. Ensure there are no folds, creases, or bunched areas that could cause overheating.
5. **Plug In:** Plug the power cord into a standard 120V AC electrical outlet. Do not use with extension cords or power strips.

OPERATING INSTRUCTIONS

The Dreamaker heated throw blanket features a user-friendly built-in remote for easy control.

Comfort Control



4 Heat Settings



Overheat Protection



One-Touch Operation



Auto-Off Function




Overview of the blanket's comfort control features, including heat settings and safety functions.

- Power On/Off:** Press the power button () on the built-in remote to turn the blanket on or off. The indicator lights will illuminate when the blanket is on.
- Adjust Heat Settings:** Press the heat setting button (| | |) to cycle through the four available heat settings. Each press will increase the heat level, indicated by the number of illuminated lights.
 - 1 Light: Low Heat
 - 2 Lights: Medium-Low Heat
 - 3 Lights: Medium-High Heat
 - 4 Lights: High Heat
- Auto-Off Function:** For safety and energy efficiency, the blanket is equipped with an automatic shut-off feature. The blanket will automatically turn off after a set period of time (typically 3 hours, refer to product packaging for exact duration). To restart, simply turn the blanket off and then on again.

Maintenance and Care

Proper care will ensure the longevity and performance of your Dreamaker heated blanket.

- 1. Before Washing:** Always ensure the blanket is unplugged from the wall outlet. **DETACH THE CONTROL UNIT AND POWER CORD COMPLETELY FROM THE BLANKET** before washing. Do not immerse the control unit or power cord in water.
- 2. Machine Washing:**
 - Wash on a delicate cycle only.
 - Use cold water and a mild detergent.
 - Do not bleach.
- 3. Drying:**
 - Do not tumble dry or dry clean.
 - Line dry or hang over a clothesline. Ensure the blanket is completely dry before reconnecting the control unit and using.
 - Do not iron.
- 4. Storage:** When not in use, store the blanket in a cool, dry place. Avoid folding tightly or placing heavy objects on top of the blanket, which could damage the internal wiring.

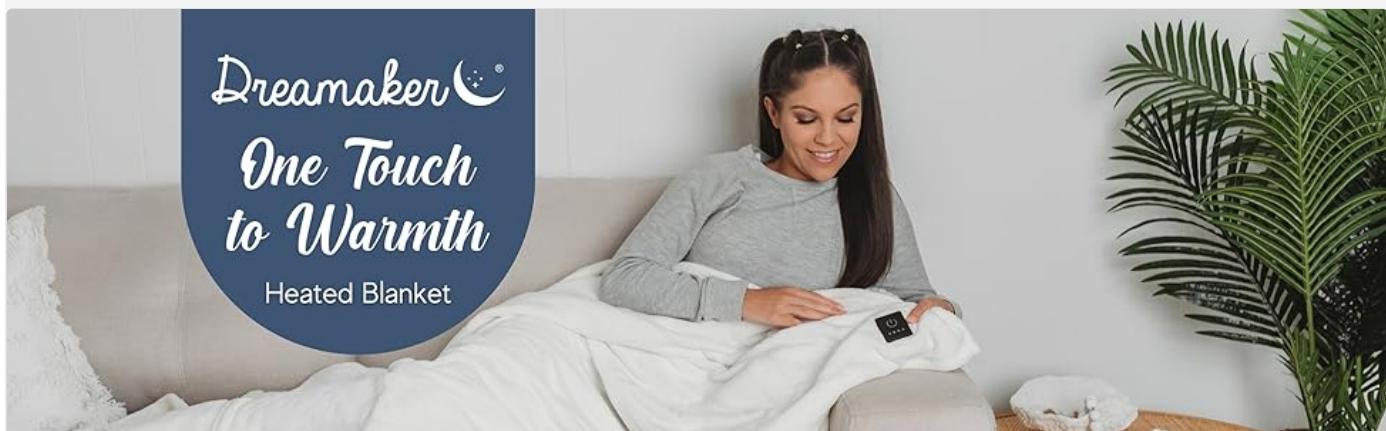

Detailed care instructions for machine washing the blanket, emphasizing detachment of the controller.

TROUBLESHOOTING

If you experience issues with your Dreamaker heated blanket, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blanket does not heat.	Not plugged in securely. Power outlet not working. Control unit not properly connected to blanket. Auto-off function activated.	Ensure power cord is firmly plugged into both the blanket and the wall outlet. Test the outlet with another appliance. Disconnect and reconnect the control unit to the blanket. Turn the blanket off and then on again to reset.
Blanket heats unevenly.	Blanket is folded, bunched, or creased.	Lay the blanket flat and smooth out any folds or creases.
Control unit lights are flashing.	Internal error or malfunction.	Unplug the blanket from the wall outlet for 5 minutes, then plug it back in. If the issue persists, discontinue use and contact customer support.

If the problem persists after trying these solutions, please contact Dreammaker customer support for assistance.

SPECIFICATIONS

Feature	Detail
Brand	Dreamaker
Model	B0CDWDDBT
Dimensions	50 x 60 inches (W x L)
Material	Fleece
Color	Off White
Heat Settings	4 Adjustable Levels
Control Type	Built-in One-Touch Remote
Safety Features	Auto-Off Function, Overheat Protection, ETL Certified
Care Instructions	Machine Washable (detach controller)
Item Weight	4.31 pounds
Country of Origin	China

WARRANTY AND SUPPORT

Dreamaker products are manufactured to the highest quality standards. For warranty information, product support, or to inquire about replacement parts, please visit the official Dreamaker website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.


For further assistance, please contact Dreamaker Customer Support:

Website: Visit the Dreamaker Store on Amazon

Email/Phone: Refer to the Dreamaker website or product packaging for the most current contact information.

© 2024 Dreamaker. All rights reserved.

Related Documents - B0CDWDDDBTT

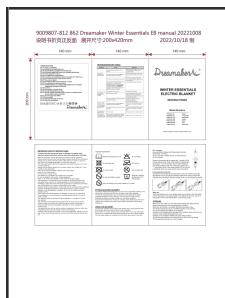

Dreamaker Winter Essentials Electric Blanket: Instructions and Safety Guide

Comprehensive instructions and safety guidelines for the Dreamaker Winter Essentials Electric Blanket, including care, troubleshooting, fitting, and usage.



[Dreamaker Winter Essentials Electric Blanket: Instructions and Safety Guide](#)

Comprehensive instructions and safety guidelines for the Dreamaker Winter Essentials Electric Blanket, including care, troubleshooting, fitting, and usage.