

[Manuals.plus](#) /

› [COOPERS](#) /

› COOPERS 10 inch Android 15 Tablet CP10 Pro User Manual

COOPERS CP10 Pro

COOPERS 10 inch Android 15 Tablet CP10 Pro User Manual

Model: CP10 Pro | Brand: COOPERS

1. INTRODUCTION

Welcome to the user manual for your COOPERS 10 inch Android 15 Tablet CP10 Pro. This guide provides essential information to help you set up, operate, and maintain your device, ensuring optimal performance and a seamless user experience. Your tablet is designed for versatility, offering powerful performance, a vibrant display, and comprehensive connectivity options.

The CP10 Pro tablet runs on the latest Android 15 OS with AI, providing enhanced app compatibility, faster performance, and improved security features. It features 8GB RAM and 32GB ROM, expandable up to 1TB with a Micro SD Card, and is powered by a 1.8GHz quad-core CPU. Enjoy a 1280x800 high-definition screen, dual cameras (2MP front, 8MP rear), and a 6000mAh battery for extended use.

Android 15 Tablet

Android 15 is designed to upgrade and better protect your privacy, providing you with a convenient and smooth experience.

Android 15

Personal OS



Privacy

security & device control



Play Store

Millions of apps



Image: Overview of Android 15 features, including secure private space, smarter screen recording, faster multitasking with app pairs, and better taskbar customization.

2. WHAT'S IN THE BOX

Upon unboxing your COOPERS CP10 Pro tablet, please verify that all the following items are included:

- COOPERS 10 inch Android 15 Tablet (CP10 Pro)
- Bluetooth Keyboard
- Wireless Mouse
- Protective Case
- Stylus Pen
- Type-C Charging Cable

Your browser does not support the video tag.

Video: An unboxing video demonstrating the contents of the COOPERS 10 inch Android Tablet package, including the tablet, keyboard, mouse, case, stylus, and charging cable.

New Android 15

More Secure Private Space

Enhanced private space with stricter isolation and hidden notifications for sensitive apps.

Smarter Screen Recording

Improved privacy by focusing solely on single-app recording, excluding all other activities.



Faster Multitasking with App Pairs

Simplified multitasking with quicker split-screen access to favorite app combinations.

Better Taskbar Customization

Easier taskbar pinning for faster app access and improved screen control.

Image: The COOPERS 10 inch Android Tablet displayed with its accompanying accessories: a keyboard, mouse, stylus, and charging cable.

3. SETUP GUIDE

3.1 Initial Charging

Before first use, fully charge your tablet using the provided Type-C charging cable and a 5V 2A charger (not included). The battery indicator on the screen will show charging status.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options that appear on the screen.
- **To Restart:** Press and hold the Power button, then select 'Restart' from the options.

3.3 Connecting Bluetooth Accessories (Keyboard & Mouse)

Your tablet comes with a Bluetooth keyboard and mouse for enhanced productivity. Follow these steps to connect them:

1. **Enable Bluetooth on Tablet:** Go to **Settings > Connected devices > Bluetooth** and toggle it ON.

2. **Pair Keyboard:**

- Turn on the keyboard using its power switch.
- Press the 'Connect' button on the keyboard. The Bluetooth indicator light will start blinking.
- On your tablet, tap 'Pair new device'. Select 'Bluetooth 3.0 Keyboard' from the list of available devices.
- Follow any on-screen prompts to complete pairing.

3. **Pair Mouse:**

- Insert 2 AAA batteries into the mouse (not included).
- Turn on the mouse using its power switch.
- On your tablet, tap 'Pair new device'. Select 'BT5.2 Mouse' from the list of available devices.
- The mouse should connect automatically.

Your browser does not support the video tag.

Video: A demonstration of how to connect Bluetooth accessories, specifically a keyboard and mouse, to the tablet.

3.4 Initial Android Setup

Upon first power-on, the tablet will guide you through the initial Android setup process. This includes selecting your language, connecting to Wi-Fi, setting up your Google account, and configuring basic privacy settings.

4. OPERATING YOUR TABLET

4.1 Basic Navigation

- **Touchscreen:** Use gestures like tap, swipe, pinch-to-zoom for navigation.
- **Stylus:** The included stylus provides precise control for drawing, writing, and navigating the interface.
- **Wireless Mouse:** Connect the wireless mouse for a traditional desktop-like navigation experience.

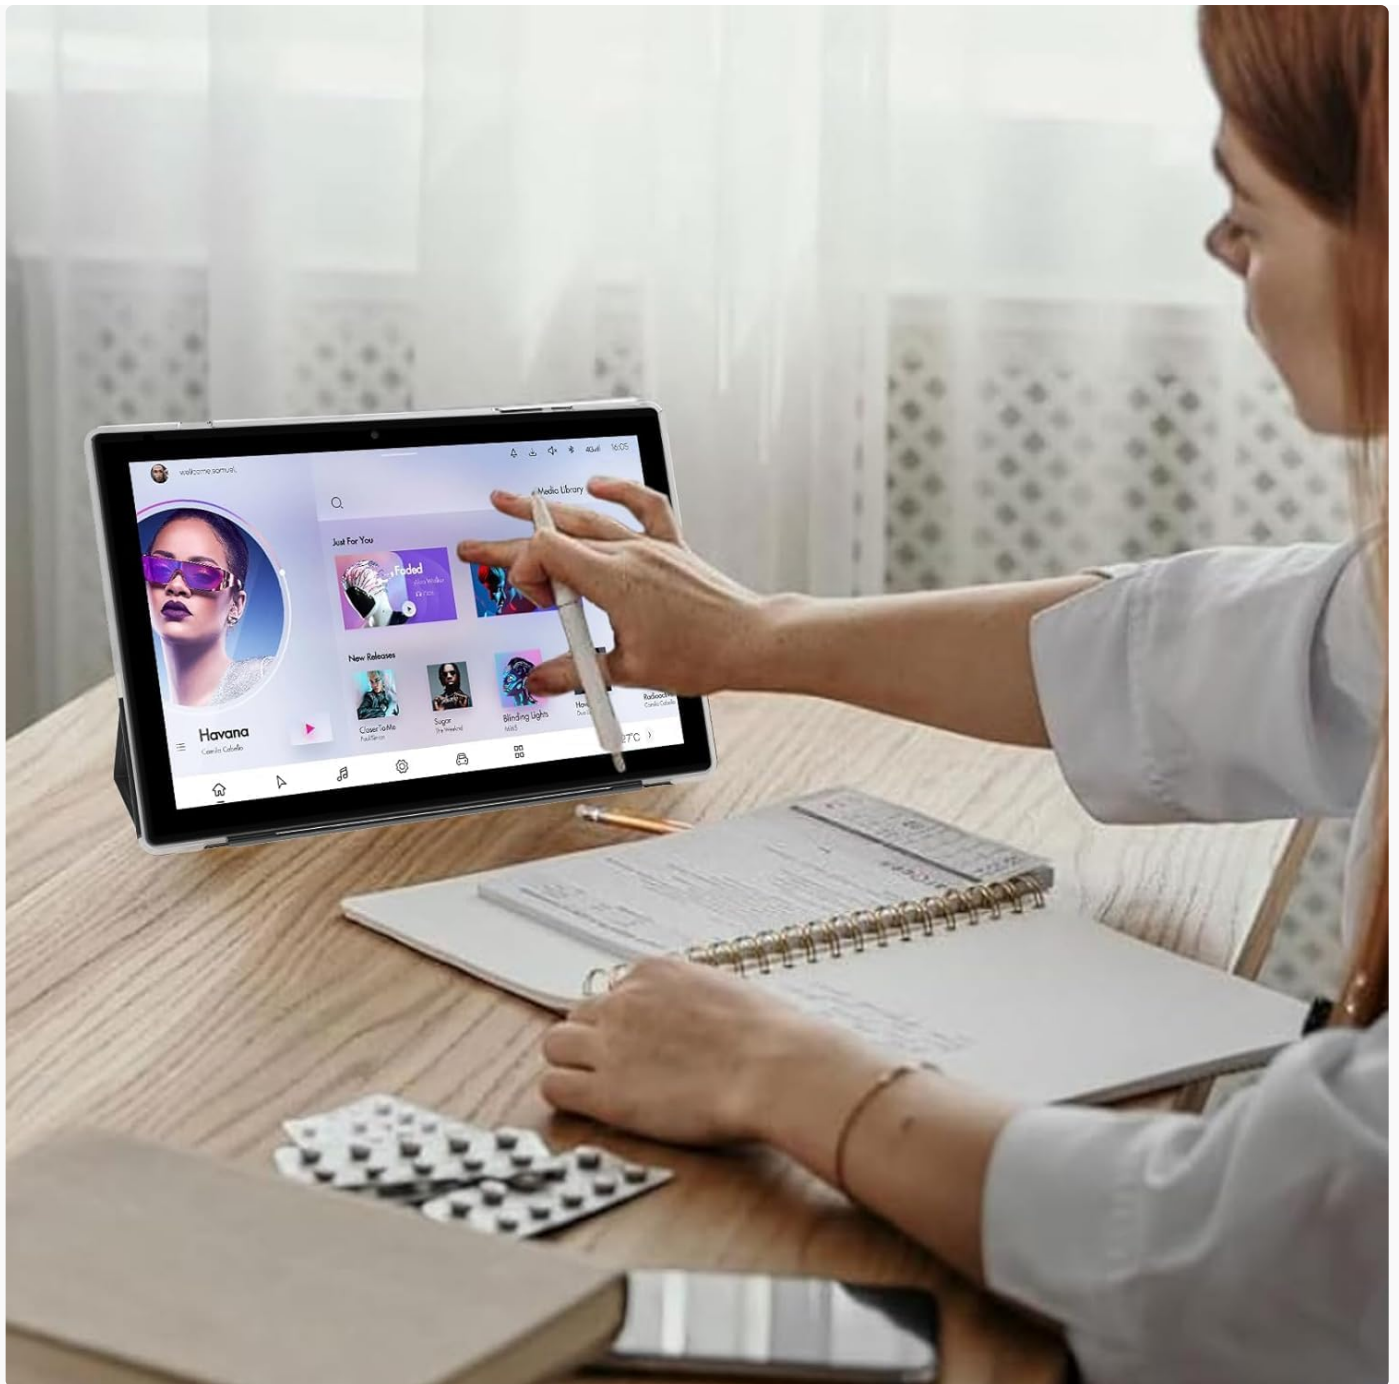


Image: A user utilizing the stylus pen to interact with the tablet screen, demonstrating precise input.

A relaxing weekend

Free your hands and immerse yourself in binge-watching TV series.



Image: A user typing on the Bluetooth keyboard connected to the tablet, showcasing its use for productivity.

4.2 App Management

The tablet is Google GMS certified, allowing access to millions of apps from the Google Play Store. Simply open the Play Store app, search for your desired application, and tap 'Install'.



Image: The tablet screen displaying various popular applications and highlighting GMS certification for broad app compatibility.

4.3 Camera Usage

Your tablet features a 2MP front camera and an 8MP rear camera. Open the Camera app to capture photos and videos. Use the front camera for video calls and selfies, and the rear camera for higher-resolution photography.



Image: An illustration highlighting the tablet's dual camera system, featuring a 2MP front camera and an 8MP rear camera.

4.4 Connectivity

- **Wi-Fi:** Supports 2.4GHz and 5GHz Wi-Fi for fast internet access. Navigate to **Settings > Network & internet > Wi-Fi** to connect to a network.
- **Bluetooth 5.0:** For connecting wireless accessories like headphones, speakers, keyboard, and mouse.

5. MAINTENANCE

5.1 Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of your tablet. Avoid using harsh chemicals or abrasive materials, as these can damage the screen or finish. For stubborn smudges, slightly dampen the cloth with water or a screen-specific cleaning solution.

5.2 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update** to check for available updates.

5.3 Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. It is recommended to fully charge the tablet before it completely drains. The 6000mAh battery provides 6-8 hours of usage.

Enjoy Fun Time, All-day Battery Life.

High Capacity Battery with 6000 mAh - Sufficient for Daily Use!

6000 mAh



Video



Music



Browsing



Standby

Image: An illustration emphasizing the tablet's 6000mAh high-capacity battery, sufficient for daily use including video, music, and browsing.

6. TROUBLESHOOTING

Issue	Possible Solution
Tablet does not turn on	Ensure the tablet is charged. Connect it to a power source for at least 30 minutes, then try powering on again.
Slow performance	Close unnecessary background apps. Clear cache for frequently used apps. Restart the tablet. Ensure sufficient storage space.
Wi-Fi connection issues	Restart your Wi-Fi router. Forget the network on your tablet and reconnect. Ensure you are within range of the Wi-Fi signal.

Issue	Possible Solution
Bluetooth accessory not connecting	Ensure the accessory is powered on and in pairing mode. Check if Bluetooth is enabled on the tablet. Try restarting both the tablet and the accessory.
Screen not responding	Restart the tablet by holding the power button for about 10-15 seconds until it reboots. Ensure the screen is clean and free of debris.

7. SPECIFICATIONS

Feature	Detail
Model Name	CP10 Pro
Operating System	Android 15
Screen Size	10.4 Inches
Screen Resolution	1280 x 800 pixels
Processor	1.8 GHz Quad-core
RAM	8GB (3GB fixed + 5GB virtual)
Internal Storage (ROM)	32GB
Expandable Storage	Up to 1TB (Micro SD Card)
Rear Camera	8 MP
Front Camera	2 MP
Battery Capacity	6000mAh (Average 10 Hours)
Wireless Type	802.11n (2.4GHz & 5GHz Wi-Fi)
Bluetooth	Bluetooth 5.0
Item Weight	2.75 pounds
Product Dimensions	9.5 x 0.3 x 6.5 inches

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your COOPERS CP10 Pro tablet is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact COOPERS customer support. Contact details can typically be found on the product packaging, the official COOPERS website, or through your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why can I not connect to the internet on my COOPERS CP10 Pro tablet?

If your COOPERS CP10 Pro tablet is unable to connect to the internet, please follow these troubleshooting steps based on the user manual: Check Wi-Fi Settings: Navigate to Settings > Network & internet > Wi-Fi....

[Read full answer](#)