

i3-Technologies I3TOUCH EX86 EX75 EX65

User Manual for Generic Replacement Remote Control

Compatible with i3-Technologies I3TOUCH EX86, EX75, EX65 4K HD Creative Touch Interactive Flat Panel LED Displays

INTRODUCTION

This document provides instructions for the Generic replacement infrared (IR) remote control designed for use with i3-Technologies I3TOUCH EX86, EX75, and EX65 4K HD Creative Touch Interactive Flat Panel LED Displays. This remote is a direct replacement and does not require programming. Please note that batteries and a separate instruction manual are not included with the product.

Important Note: This replacement remote may not support all functions of the original remote control. Ensure your display model is listed for compatibility before use.

SETUP: BATTERY INSTALLATION

The remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery cover removed, illustrating the battery compartment.



Image: Top-down view of the remote control's back, showing the open battery compartment.

OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology and is designed for immediate use without any programming. Simply point the

remote control directly at your i3-Technologies I3TOUCH display.

- **Power On/Off:** Press the power button to turn the display on or off.
- **Navigation:** Use the directional buttons (up, down, left, right) to navigate menus and selections.
- **Selection:** Press the 'OK' or 'Enter' button to confirm a selection.
- **Volume Control:** Adjust the volume using the dedicated volume buttons.
- **Source Selection:** Use the source button to switch between input sources (e.g., HDMI, USB).

Compatibility: This remote is specifically compatible with i3-Technologies I3TOUCH EX86, EX75, and EX65 4K HD Creative Touch Interactive Flat Panel LED Displays. Functionality with other models is not guaranteed.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote control in a cool, dry place, away from direct sunlight, high temperatures, and excessive humidity.
- **Avoid Impact:** Protect the remote from drops or strong impacts, which can damage internal components.

TROUBLESHOOTING

If you experience issues with your remote control, consider the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure the batteries are correctly installed with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the display's IR receiver.
 - Ensure you are within the effective range and pointing the remote directly at the display.

- **Limited Functionality:**

As a replacement remote, it may not replicate all advanced or specific functions of the original remote control. This is expected behavior for some replacement units.

SPECIFICATIONS

Brand	Generic
Compatible Devices	i3-Technologies I3TOUCH EX86, EX75, EX65 4K HD Creative Touch Interactive Flat Panel LED Display
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Batteries Required	2 x AAA (not included)
Special Feature	Replacement item may not work with all functions as original. No programming needed.

WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct customer support for this Generic replacement remote control is not provided. For

product-related inquiries, please refer to the retailer or seller from whom the item was purchased.

