

manuals.plus /

› [roborock](#) /

› [Roborock Dyad Air Wet Dry Vacuum Cleaner User Manual](#)

roborock WD2H2A

Roborock Dyad Air Wet Dry Vacuum Cleaner User Manual

Model: WD2H2A

INTRODUCTION

Welcome to the user manual for your new Roborock Dyad Air Wet Dry Vacuum Cleaner. This appliance is designed to provide efficient and thorough cleaning for your hard floors by combining vacuuming and mopping functions. With features like 17000Pa power suction, long battery life, exceptional edge cleaning, and an innovative self-cleaning and drying system, the Dyad Air simplifies your cleaning routine. Please read this manual carefully before use to ensure proper operation, maintenance, and to maximize the lifespan of your device.

PRODUCT OVERVIEW



The Rororock Dyad Air Wet Dry Vacuum Cleaner, shown with its charging dock and a smartphone displaying the companion app.



Illustration of the Dyad Air simultaneously vacuuming and mopping a floor, demonstrating its 17000 Pa suction power on wet and dry messes.

Key Features:

- **Ultimate Mess Master:** Designed to tackle both wet and dry messes, delivering spotless floors.
- **Exceptional Edge Cleaning:** Cleans hard-to-reach areas and along room edges, ensuring a thorough finish.
- **Adaptive Cleaning with DirTect Smart Sensor:** Intelligently detects dirt levels and adjusts cleaning patterns for optimal results.
- **Innovative Self-Cleaning & Drying System:** Automatically cleans and hot-air dries the brush to prevent odors.
- **Extreme Suction Power:** Features 17,000 Pa suction for effective removal of dirt and debris.
- **Easy-to-Use App Control:** Customize cleaning schedules, set preferences, and monitor progress via smartphone (2.4G WiFi only).
- **Long Battery Life:** Up to 50 minutes runtime on a single charge.
- **Large Capacity Tanks:** 900 ml clean water tank for extended cleaning sessions.

SETUP AND ASSEMBLY

Unpacking:

Carefully remove all components from the packaging. Ensure all parts listed in the packing list are present and undamaged. Keep the packaging for future storage or transport.

Component Identification:

- Main Unit (with handle and cleaning head)
- Charging Dock
- Roller Set (pre-installed or separate)
- Washable Filter (pre-installed or separate)
- Clean Water Tank
- Dirty Water Tank
- Power Adapter
- Cleaning Brush


Initial Assembly:

1. **Attach the Handle:** Insert the handle into the main unit until it clicks securely into place.
2. **Install Water Tanks:** Ensure the clean water tank and dirty water tank are correctly seated in their respective compartments.
3. **Place on Charging Dock:** Position the charging dock on a flat surface near a power outlet. Place the Dyad Air onto the charging dock.
4. **Connect Power:** Plug the power adapter into the charging dock and then into a wall outlet. The device will begin charging.

First Use Preparation:

- **Charge Fully:** For optimal performance, fully charge the device before its first use. The display will indicate charging status.
- **Fill Clean Water Tank:** Remove the clean water tank, open the cap, and fill it with clean tap water. You may add a small amount of Roborock-approved cleaning solution if desired. Do not overfill. Securely close the cap and reinsert the tank.

Exceptional Edge Cleaning

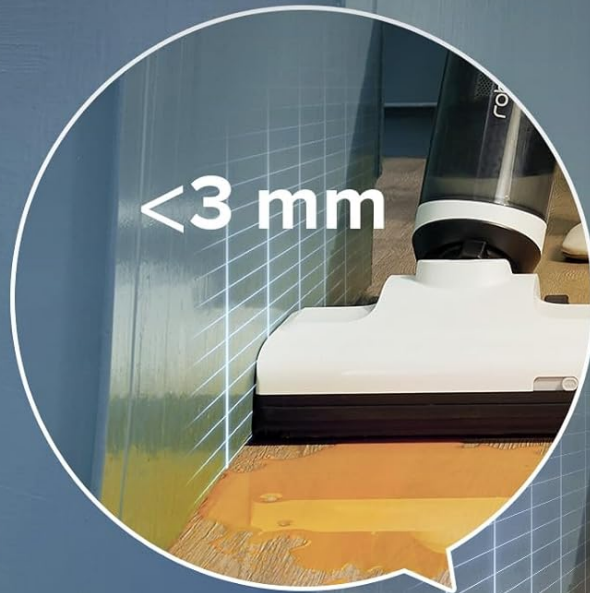

A user filling the clean water tank of the Roborock Dyad Air, demonstrating the ease of access and refill.



The Roborock Dyad Air on its charging dock, with a smartphone showing the app interface and voice alert bubbles for "Auto", "Empty the dirty water tank", and "Cleaning rollers".

OPERATING INSTRUCTIONS

Powering On/Off:

- To power on, press the Power button on the handle.
- To power off, press and hold the Power button until the device shuts down.

Cleaning Modes:

The Dyad Air offers multiple cleaning modes to suit different cleaning needs:

- **Eco Mode:** For light cleaning and extended battery life.
- **Max Mode:** Provides maximum suction and water flow for heavily soiled areas.
- **Auto Mode:** Utilizes the DirText Smart Sensor to automatically adjust cleaning power based on detected dirt levels.

- **Spot Mode:** For concentrated cleaning of specific spills or stains.

Switch between modes using the mode selection button on the handle or via the Roborock app.

Durable Design for Longer

Larger cleaning area with no interruptions.

50min
Battery Life

3875 sqft
Cleaning Range

900 ml
Clean Tank

The DirTect Smart Sensor display on the Dyad Air, showing how it detects and delivers precise power for deeper cleaning, indicated by color changes from blue to red for dirt levels.

DirTect Smart Sensor

Detects and delivers precise power for deeper cleaning, both for floors and for self-cleaning.




The agile cleaning head of the Dyad Air demonstrating its 80-degree horizontal swivel for easy maneuverability around furniture and obstacles.

Cleaning Process:

1. Ensure the clean water tank is filled and the dirty water tank is empty.
2. Select your desired cleaning mode.
3. Tilt the device back to engage the cleaning head and begin moving it across the floor.
4. The Dyad Air will vacuum and mop simultaneously. For best results, move the device slowly and steadily.
5. Pay attention to the DirTect Smart Sensor indicator; it will change color to show areas with higher dirt concentration, prompting you to clean them more thoroughly.
6. Utilize the exceptional edge cleaning feature by positioning the right side of the cleaning head close to walls or baseboards.

Self-Cleaning & Self-Drying System

Bidirectional Rotating

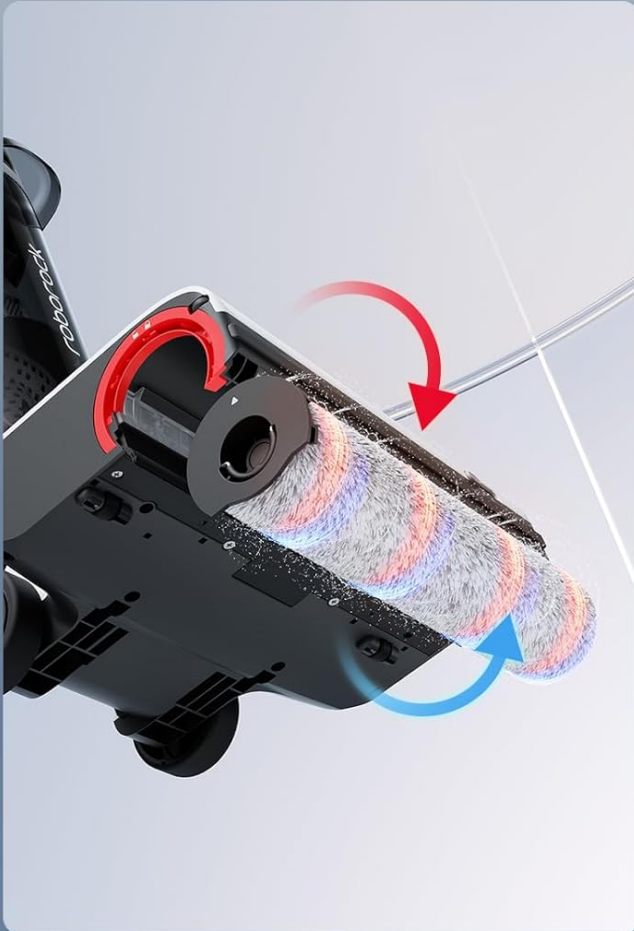

High Speed Self Drying



A split image showing the bidirectional rotating brush for self-cleaning and the high-speed self-drying process of the Roborock Dyad Air's roller.

APP Connectivity & Voice Alerts

All for your convenient cleaning experience.

Auto

Empty the dirty water tank

Cleaning rollers



The Dyad Air demonstrating its exceptional edge cleaning capability, reaching within 3mm of walls and baseboards.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your Dyad Air.

After Each Use:

1. **Initiate Self-Cleaning:** Place the device on the charging dock. Press the self-clean button (or activate via app). The device will automatically clean the roller brush and internal pathways.
2. **Empty Dirty Water Tank:** After self-cleaning, remove the dirty water tank. Carefully empty the contents and rinse the tank thoroughly with clean water. Allow it to air dry before reinserting.
3. **Clean Filter:** Remove the washable filter from the dirty water tank. Rinse it under running water until clean. Allow it to air dry completely (at least 24 hours) before reinserting. Do not use the device with a wet filter.
4. **Check Roller Brush:** After self-drying, inspect the roller brush for any tangled hair or debris. Use the provided cleaning brush to remove any stubborn residue.

An illustration showing the self-cleaning process of the Dyad Air's roller brush, with bi-directional alternating scrubbing removing 99% of dirt.



The self-drying system of the Dyad Air, where the roller is automatically dried by hot air to prevent odors.

Regular Maintenance (Monthly/As Needed):

- **Clean Charging Dock:** Wipe down the charging contacts and surrounding area with a dry cloth.
- **Deep Clean Roller Compartment:** If necessary, remove the roller brush and clean the compartment thoroughly with a damp cloth.
- **Check Air Ducts:** Ensure air ducts are free from obstructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not powering on.	Low battery; Power adapter not connected; Device malfunction.	Charge the device fully; Ensure power adapter is securely connected; Contact customer support if issue persists.
Poor suction or cleaning performance.	Dirty water tank full; Clean water tank empty; Clogged filter; Roller brush tangled or worn.	Empty and clean dirty water tank; Refill clean water tank; Clean or replace filter; Clean or replace roller brush.
Unpleasant odor from device.	Dirty water tank not cleaned; Roller brush not dried properly.	Thoroughly clean dirty water tank; Ensure self-drying cycle completes and roller brush is dry.
"Unblock cleaning head" error.	Obstruction in cleaning head or dirty water path.	Remove roller brush and inspect for blockages. Clear any debris from the suction inlet and dirty water path.
App connectivity issues.	Incorrect Wi-Fi password; Not connected to 2.4Ghz Wi-Fi; Router issues.	Verify Wi-Fi password; Ensure connection to 2.4Ghz network; Restart router and device.

SPECIFICATIONS

Feature	Detail
Brand	roborock
Model Name	Dyad Air (WD2H2A)
Suction Power	17,000 Pa
Battery Type	Lithium-Ion

Feature	Detail
Runtime	Up to 50 minutes
Clean Water Tank Capacity	900 Milliliters
Wattage	700 watts
Noise Level	82 dB
Product Dimensions	14.2"L x 12.7"W x 45.7"H
Item Weight	13 pounds
Connectivity	App Control (2.4G WiFi)
Special Features	Adaptive Cleaning with DirTect Smart Sensor, Exceptional Edge Cleaning, RevoBrush Self-Cleaning & Drying System

WARRANTY AND SUPPORT

Your Roborock Dyad Air Wet Dry Vacuum Cleaner comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details. For technical support, troubleshooting assistance, or to inquire about replacement parts, please visit the official Roborock website or contact their customer service directly. Keep your purchase receipt and product serial number handy when contacting support.

 
Online Resources:


- Official Roborock Website: us.roborock.com
- Roborock Store on Amazon: [Roborock Amazon Store](#)

© 2024 Roborock. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents - WD2H2A

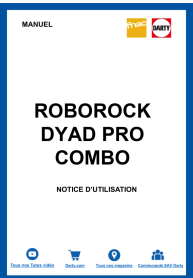	Roborock Dyad Pro Combo Wet and Dry Vacuum Cleaner User Manual Comprehensive user manual for the Roborock Dyad Pro Combo Wet and Dry Vacuum Cleaner, covering setup, operation, maintenance, and troubleshooting.
	Roborock Dyad Pro Combo Wet and Dry Vacuum Cleaner User Manual User manual for the Roborock Dyad Pro Combo wet and dry vacuum cleaner, detailing setup, operation, maintenance, and troubleshooting for optimal home cleaning performance.

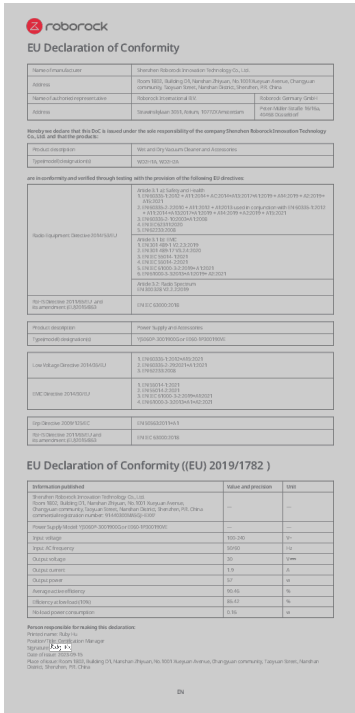 


[pdf] Declaration of Conformity Accessories

halberd lite eudoc 20241129 WD2H1A WD2H2A EU Declaration of Conformity Compliance Roborock Smart Cleaner Get Smarter Global Official Store WD2H2Aalberd v 1733302632 cdn shopify s files 1 0261 9844 2046 |||

EU Declaration of Conformity Name of manufacturer Address Name of authorized representative Address ... Product description Type model designation s Wet and Dry Vacuum Cleaner and Accessories WD2H1A, **WD2H2A** are in conformity and verified through testing with the provision of the following EU direct...

 
lang:en score:34 filesize: 162.24 K page_count: 9 document date: 2024-11-29

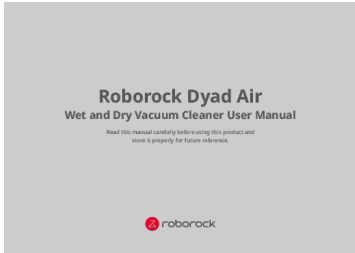

[pdf] User Manual Instructions

Roborock Dyad Air FCC EN User Manual FR ES Latin Support Center support roborock hc en us article attachments 26351365311641 |||

 
Roborock Dyad Air Wet and Dry Vacuum Cleaner User Manual Read this manual carefully before using thi ... Compliance Statement Wet and Dry Vacuum Cleaner and Accessories Wet and Dry Vacuum Cleaner Model: **WD2H2A** Power Supply Model: E060-1P300190VU This device complies with part 15 of the FCC Rules. Opera... lang:en score:33 filesize: 113.81 K page_count: 12 document date: 2023-11-08

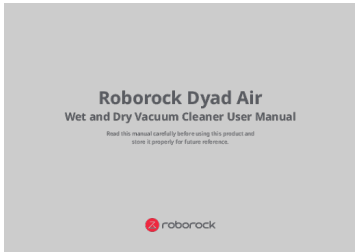

[pdf] User Manual Instructions Catalog

Roborock Dyad AirOn the App tap on home page and add device as instructed in app Push Clean Tank Release remove tank Tap side of the d18fa032 c09c 4464 98e7 df995a0f0cc9images thdstatic catalog Images d1 d18fa032 df995a0f0cc9 |||

 Roborock Dyad Air Wet and Dry Vacuum Cleaner User Manual Read this manual carefully before using thi ... Compliance Statement Wet and Dry Vacuum Cleaner and Accessories Wet and Dry Vacuum Cleaner Model: **WD2H2A** Power Supply Model: E060-1P300190VU This device complies with part 15 of the FCC Rules. Opera... lang:en score:33 filesize: 278.23 K page_count: 32 document date: 2023-08-23

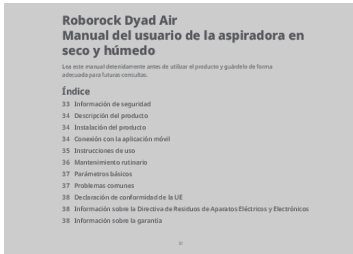


[\[pdf\]](#) User Manual

Roborock Dyad Air CE ES Manual support roborock hc es article attachments 26351832598297 |||

Roborock Dyad Air Manual del usuario de la aspiradora en seco y hmedo Lea este manual detenidamente ... ndeja. No lave ninguna de las dems piezas de la estacin de carga. Parmetros bsicos Cuerpo Modelo **WD2H2A** Peso 4,1 kg Potencia nominal 260 W Tensin nominal 21,6 V Tiempo de carga 4 horas Bater...

 lang:es **score:32** filesize: 150.56 K page_count: 7 document date: 2023-11-08

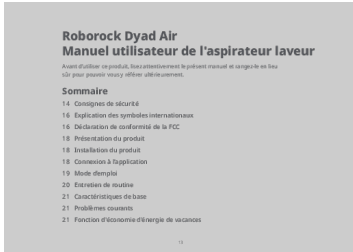


[\[pdf\]](#) User Manual Instructions

Roborock Dyad Air FCC FR Manuel User Manual EN ES Latin Support Center support roborock hc en us article attachments 26351380330905 |||

Roborock Dyad Air Manuel utilisateur de l aspirateur laveur Avant d utiliser ce produit, lisez atten ... Nom du produit Modle du produit Aspirateur laveur et ses accessoires Modle d aspirateur laveur : **WD2H2A** Modle d alimentation lectrique : E060-1P300190VU Dclaration de conformit Coordonnees de la pa...

 
lang:fr **score:31** filesize: 154.57 K page_count: 9 document date: 2023-11-08

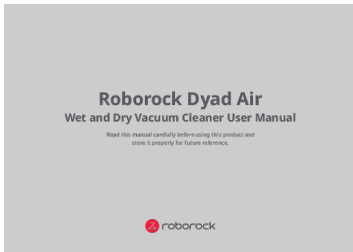

[Roborock Dyad Air Wet and Dry Vacuum Cleaner User Manual](#)

Comprehensive user manual for the Roborock Dyad Air wet and dry vacuum cleaner. Learn about setup, operation, maintenance, troubleshooting, and safety guidelines for efficient home cleaning.

 lang:en **score:28** filesize: 667.46 K page_count: 60 document date: 2023-09-25

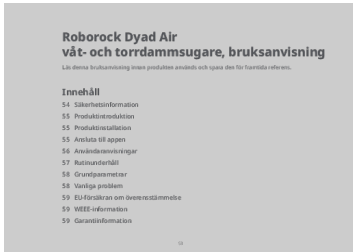

[\[pdf\]](#)

Roborock Dyad Air CE SE Anvandarhandbok support roborock hc en us article attachments 26351533350937 |||

Roborock Dyad Air vt- och torrdammsugare, bruksanvisning Ls denna bruksanvisning innan produkten anv ... tvtta facket. Tvtta inte ngra andra delar av laddningsdockan. Grundparametrar Dammsugare Modell **WD2H2A** Vikt 4,1 kg Mrkeffekt 260 W Mrkspnning 21,6 V Laddningstid Batteri 4 timmar 21,6 V/...

lang:no **score:26** filesize: 154.82 K page_count: 8 document date: 2023-11-08



[\[pdf\]](#) User Manual

Roborock Dyad Air CE DE Handbuch support roborock hc de article attachments 26351642957209 |||

Roborock Dyad Air Benutzerhandbuch fr Nass- und Trockenstaubsauger Lesen Sie diese Bedienungsanleitu ... le des Ladedocks absplen. Eckdaten Gehuse Modell Gewicht Nennleistung Nennspannung Ladedauer Akku **WD2H2A** 4,1 kg 260 W 21,6 V 4 Stunden 21,6 V/4000 mAh TYP Lithiumionenakku Netzteil Modell Nenne...

lang:de **score:23** filesize: 153.01 K page_count: 7 document date: 2023-11-08

Roborock Dyad Air
Instrukcja obsługi odkurzacza do sprzątania na mokro i na sucho
Przed rozpoczęciem użytkowania należy zapoznać się z niniejszą instrukcją i zachować ją w bezpiecznym miejscu.

Zawartość

- 40 Informacje dotyczące bezpieczeństwa
- 41 Wprowadzenie do produktu
- 41 Przygotowanie produktu
- 41 Łączenie z aplikacją
- 42 Instrukcja obsługi
- 43 Ratowna konserwacja
- 44 Parametry podstawowe
- 44 Typowe problemy
- 45 Unijna deklaracja zgodności
- 45 Informacje dotyczące WEEE
- 45 Informacje gwarancyjne

10

[\[pdf\]](#)

Roborock Dyad Air CE PL Instrukcja obsługi support roborock hc en us article attachments

26351531373465 |||

Roborock Dyad Air Instrukcja obsługi odkurzacza do sprzatania na mokro i na sucho

Przed rozpoczęciem u ... innych czci stacji ładujcej. Parametry podstawowe

Specyfikacja WiFi Korpus Usługa WiFi Model **WD2H2A** Protokół 802.11b/g/n Masa 4,1

kg Moc znamionowa 260 W Napięcie znamionowe 21,6 V Pasmo ...

lang:pl **score:23** filesize: 201.91 K page_count: 7 document date: 2023-11-08

Roborock Dyad Air
Manuel utilisateur de l'aspirateur laveur
Avant d'utiliser ce produit, lisez attentivement le présent manuel et le guide de base. Ce produit doit être utilisé conformément aux instructions.

Sommaire

- 12 Composants du produit
- 13 Précautions d'usage
- 13 Installation du produit
- 13 Connexion à l'application
- 14 Mode d'emploi
- 15 Entretien de routine
- 16 Caractéristiques de base
- 16 Problèmes courants
- 17 Déclaration de conformité UE
- 17 Informations WEEE
- 17 Informations sur la garantie

11

[\[pdf\]](#)

Roborock Dyad Air CE FR Manuel support roborock hc fr article attachments 26351726423833 |||

Roborock Dyad Air Manuel utilisateur de l'aspirateur laveur Avant d'utiliser ce produit,

lisez atten Ne lavez aucune autre pice de la station de rechargement.

Caractéristiques de base Chassis Modle **WD2H2A** Poids 4,1 kg Puissance nominale

260 W Tension nominale 21,6 V Dure de rechargement 4...

lang:fr **score:22** filesize: 180.18 K page_count: 7 document date: 2023-11-08