

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Replacement Remote Control User Manual

## ECONTROLLY D-US-TAB5305-12

# User Manual for ECONTROLLY Replacement Remote Control

Compatible with Philips Soundbar Audio Speaker Systems

## INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your ECONTROLLY Replacement Infrared Remote Control. This remote is specifically designed to be compatible with various Philips Soundbar Audio Speaker System 2.1 Channel 5000 Series models, offering a seamless replacement for your original remote.

Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your user experience.

## PACKAGE CONTENTS

- 1 x ECONTROLLY Replacement Infrared Remote Control

*Note: AAA alkaline batteries and a user manual are not included in the package.*

## SETUP

### Battery Installation

The ECONTROLLY Replacement Remote Control requires two (2) 1.5V AAA alkaline batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the release tab (if present) and lift the cover to open it.
3. Insert two new 1.5V AAA alkaline batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.







Figure 1: Back of the remote control with the battery compartment open, illustrating where to insert the two AAA batteries.

Once batteries are installed, the remote control is ready for use with compatible Philips Soundbar models. No programming or pairing is required.

## OPERATING INSTRUCTIONS

---

This remote control provides direct functionality for your compatible Philips Soundbar. Point the remote control directly at the soundbar's infrared receiver for optimal performance.





Figure 2: Front view of the remote control, displaying all functional buttons.

Key Functions

| Button              | Function                                                           |
|---------------------|--------------------------------------------------------------------|
| Power ( )           | Turns the soundbar On or Off.                                      |
| Mute ( )            | Mutes or unmutes the sound.                                        |
| Volume Up (+)       | Increases the volume level.                                        |
| Volume Down (-)     | Decreases the volume level.                                        |
| Play/Pause ( )      | Plays or pauses audio playback.                                    |
| Previous Track ( )  | Skips to the beginning of the current track or the previous track. |
| Next Track ( )      | Skips to the next track.                                           |
| Pair BT (Bluetooth) | Initiates Bluetooth pairing mode for connecting devices.           |
| HDMI (ARC)          | Selects HDMI ARC as the audio input source.                        |
| EQ (Equalizer)      | Cycles through available equalizer sound modes.                    |
| AUX (Auxiliary)     | Selects the Auxiliary input source.                                |
| Optical             | Selects the Optical input source.                                  |

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using abrasive cleaners or solvents, as they may damage the surface.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place.
- **Avoid Exposure:** Do not expose the remote control to direct sunlight, heat sources, or excessive moisture.

## TROUBLESHOOTING

| Problem                              | Possible Cause / Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote control is not working.       | <ul style="list-style-type: none"><li>◦ <b>Batteries:</b> Check if the batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with new 1.5V AAA alkaline batteries.</li><li>◦ <b>Line of Sight:</b> Ensure there are no obstructions between the remote control and the soundbar's infrared receiver.</li><li>◦ <b>Distance:</b> Make sure you are within the effective operating range of the remote control (typically up to 20 feet).</li><li>◦ <b>Soundbar Power:</b> Confirm that the Philips Soundbar is powered on and functioning correctly.</li></ul> |
| Remote control works intermittently. | <ul style="list-style-type: none"><li>◦ <b>Low Batteries:</b> Batteries may be low. Replace them with new ones.</li><li>◦ <b>Interference:</b> Strong light sources (e.g., direct sunlight, fluorescent lights) or other infrared devices might interfere. Try using the remote in a different environment.</li></ul>                                                                                                                                                                                                                                                                                       |

## SPECIFICATIONS

| Feature                         | Detail                                                                           |
|---------------------------------|----------------------------------------------------------------------------------|
| Model Number                    | D-US-TAB5305-12                                                                  |
| Brand                           | ECONTROLLY                                                                       |
| Product Dimensions              | 5.9 x 1.57 x 0.65 inches                                                         |
| Item Weight                     | 3.2 ounces                                                                       |
| Color                           | Black                                                                            |
| Special Feature                 | Ergonomic design                                                                 |
| Max Number of Supported Devices | 18 (referring to the remote's internal capability, not necessarily 18 soundbars) |
| Compatible Devices              | Philips Soundbar Audio Speaker Systems (Stereo System)                           |

| Feature      | Detail                                         |
|--------------|------------------------------------------------|
| Power Source | 2 x 1.5V AAA Alkaline Batteries (not included) |

## COMPATIBLE MODELS

This ECONTROLLY replacement remote control is compatible with the following Philips Soundbar Audio Speaker System 2.1 Channel 5000 Series models:

- TAB5305
- TAB5306
- TAB5305/12
- TAB5305/37
- TAB5305/98
- TAB5105/10
- TAB5105
- TAB5306VD
- TAB5105/37
- TAB5105/94
- TAB5105/12
- TAB5106/37
- TAB5306/37

If your Philips Soundbar model is listed above, this remote control should function without any additional setup.

## WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your ECONTROLLY Replacement Remote Control, please refer to the seller's contact information on the platform where the product was purchased. Specific warranty details are typically provided by the seller at the time of purchase.

Please retain your purchase receipt as proof of purchase for any warranty claims.

