

[Manuals.plus](#) /

> [highsam](#) /

> Gisam Cordless Pressure Washer Gisam-01 User Manual

highsam Gisam-01

Gisam Cordless Pressure Washer Gisam-01 User Manual

Model: Gisam-01 (PW-10-5C) | Brand: highsam

1. IMPORTANT SAFETY INFORMATION

Attention: Residual water or water stains may be present due to factory testing to ensure proper function. This product is not second-hand. As the product does not have a flow stop function, it is not recommended to connect it directly to a tap. For any product-related questions, please contact us first.

Always wear appropriate personal protective equipment, such as safety glasses, when operating the pressure washer. Ensure the work area is clear of obstructions and other people. Do not point the spray nozzle at people, animals, or electrical equipment.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Gisam Cordless Pressure Washer
- 1 x 6-in-1 Multi-Purpose Nozzle
- 1 x 180° Pivoting Nozzle
- 1 x Foam Sprayer Nozzle
- 1 x Extension Wand
- 1 x Connector
- 1 x 5-meter Water Hose
- 1 x Water Filter
- 1 x User Manual
- 1 x Battery Charger
- 2 x 4Ah Batteries
- 1 x Carrying Case

3. PRODUCT OVERVIEW

The Gisam cordless pressure washer is designed for versatile cleaning and watering tasks. It features a powerful brushless motor, adjustable pressure settings, and multiple nozzle options for various applications.

3.1 Key Components

- **Main Unit:** Ergonomic handle with trigger, battery slot, and water inlet.
- **Battery:** Rechargeable 4Ah lithium-ion battery for cordless operation.
- **Extension Wand:** Connects the main unit to the nozzle for extended reach.
- **Nozzles:** Includes a 6-in-1 multi-purpose nozzle and a 180° pivoting nozzle for diverse spray patterns.
- **Foam Sprayer:** Attaches for applying cleaning solutions.
- **Water Hose with Filter:** Draws water from various sources.

3.2 Power Display & Gear Adjustment

The pressure washer features an intuitive power display and gear adjustment system. The display indicates battery level and selected pressure mode (Low or High).



Image: Power display and gear adjustment on the Gisam cordless pressure washer. Shows battery indicator and low/high speed modes.



Image: Close-up view of the digital display on the Gisam pressure washer, showing battery status and mode selection buttons.

3.3 Brushless Motor

Equipped with a high-efficiency brushless motor, this pressure washer offers energy saving, low noise operation, and heat resistance for extended durability and powerful performance.

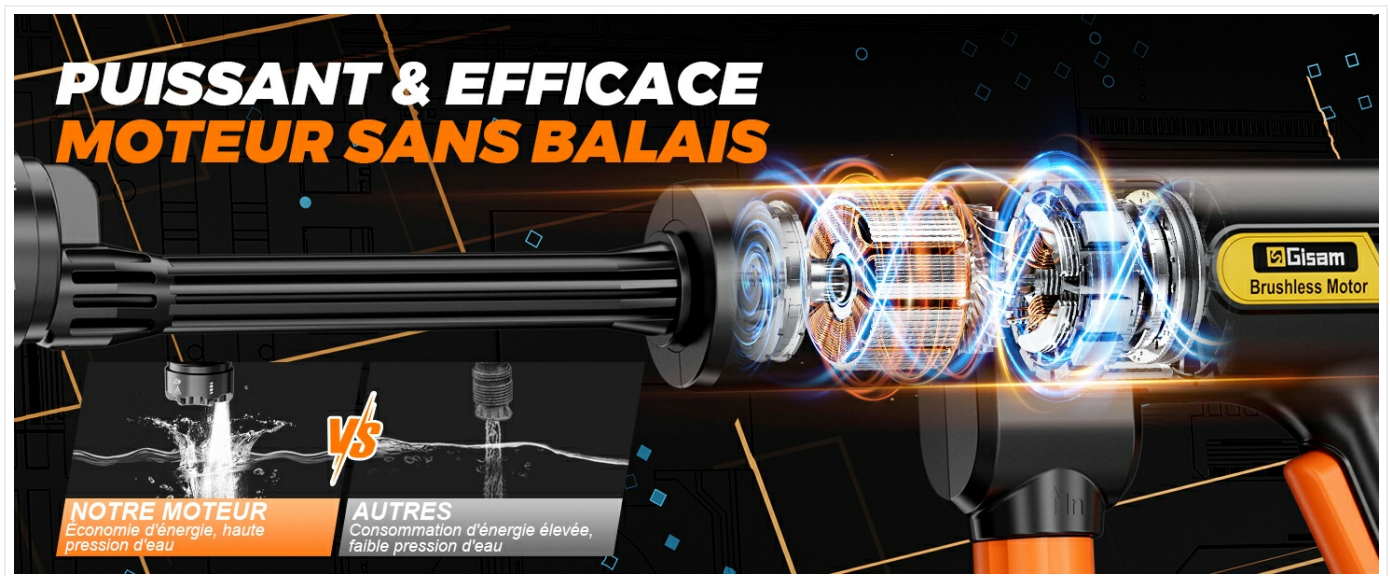 


Image: Technical illustration of the Gisam pressure washer's brushless motor, highlighting its powerful and efficient operation.

3.4 Nozzle System

The unit includes a 6-in-1 multi-purpose nozzle and a 180° pivoting nozzle, allowing for at least 7 spray modes. This combination enables effective cleaning of both surface stains and hard-to-reach areas.

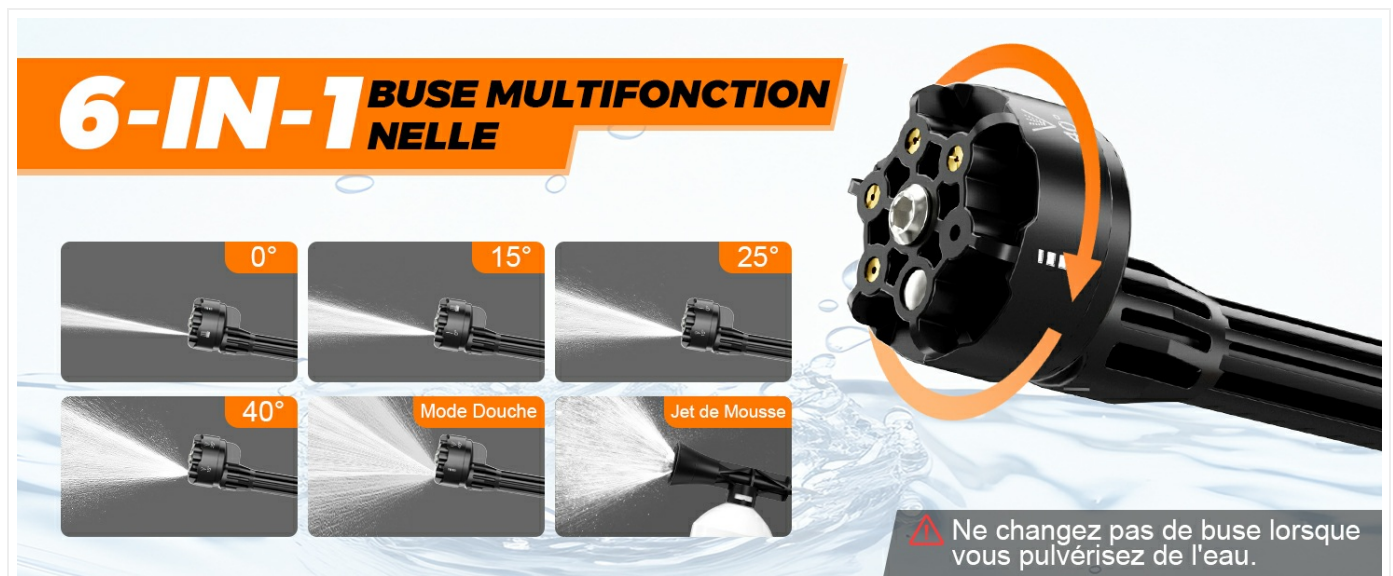 


Image: Diagram showing the 6-in-1 multifunctional nozzle with various spray patterns: 0°, 15°, 25°, 40°, Shower Mode, and Foam Jet.

180° ROTATABLE SPRAY NOZZLE



Image: The 180° rotatable spray nozzle being used to clean a car, demonstrating its flexibility for corner and high-place cleaning.

3.5 Water Source Flexibility

The pressure washer can draw water from various sources such as rivers, buckets, reservoirs, and garden hoses, thanks to its included filter. This filter helps protect the unit and surfaces from impurities.

Multiple Water Supplies, Regardless of Location



Image: Illustration showing the Glsam pressure washer drawing water from various sources like buckets, pools, lakes/ rivers, and cisterns.

4. SETUP AND ASSEMBLY

4.1 Battery Charging

Before first use, fully charge both 4Ah batteries. Connect the charger to a power outlet and then to the battery. The charging indicator on the battery or charger will show the charging status. A full charge typically takes 4 to 5 hours.

4.2 Assembling the Pressure Washer

1. Insert a fully charged battery into the battery slot on the main unit until it clicks into place.
2. Attach the extension wand to the main unit by aligning the connectors and twisting until secure.
3. Select the desired nozzle (6-in-1 or 180° pivoting) and attach it to the end of the extension wand. Ensure it is firmly in place.
4. Connect the 5-meter water hose to the water inlet on the main unit using the provided connector.
5. Place the water filter end of the hose into your chosen water source (e.g., bucket of water). Ensure the filter is fully submerged.

Note: The water drop should not exceed 1.5 meters, as this may affect pumping performance. Seawater is prohibited to prevent corrosion of internal components.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Adjusting Pressure

Press the power button on the unit to turn it on. The power display will illuminate. Use the '+' and '-' buttons to switch between the two pressure settings:

- **Low Pressure (25 bar):** Ideal for watering plants or light cleaning tasks.
- **High Pressure (65 bar):** Suitable for more demanding cleaning, such as cars, fences, or floors.

The battery provides a maximum runtime of 45 minutes per battery in low-pressure mode.

5.2 Nozzle Usage

The 6-in-1 nozzle allows you to select different spray patterns by rotating its front. The 180° pivoting nozzle offers additional flexibility for reaching awkward angles.

- **0° Jet:** For concentrated, powerful cleaning of stubborn dirt.
- **15°, 25°, 40° Fan Spray:** For general cleaning of various surfaces.
- **Shower Mode:** Gentle spray for watering plants.
- **Foam Jet:** For applying cleaning solutions with the foam sprayer.

Warning: Do not change nozzles while spraying water.

5.3 Using the Foam Sprayer

Fill the foam sprayer bottle with your desired cleaning solution. Attach it to the pressure washer in place of the standard nozzle. Select the "Foam Jet" setting on the 6-in-1 nozzle (if using) or use the dedicated foam sprayer nozzle to apply foam evenly to the surface. After applying foam, remove the foam sprayer and rinse the surface with a suitable spray pattern.

POWER DISPLAY & GEAR ADJUSTMENT

HIGH 25-30 mins

CAR WINDOWS FENCES FLOOR

LOW 40-50 mins

PLANTS PETS
(with the 40° or the shower mode)

Battery Indicator

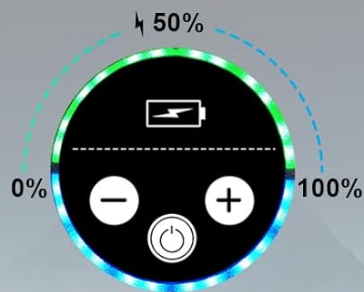 


Image: The Gisam pressure washer with foam sprayer attached, applying cleaning foam to a car.

SOLUTION FOR NOT PUMPING



Image: The Gisam pressure washer rinsing a car, demonstrating the effective removal of foam and dirt.

6. MAINTENANCE

6.1 Cleaning the Unit

After each use, disconnect the battery and water hose. Rinse the nozzles and extension wand with clean water to remove any residue. Wipe the main unit with a damp cloth. Do not use harsh chemicals or abrasive cleaners.

6.2 Water Filter Maintenance

Regularly inspect and clean the water filter to ensure optimal performance and prevent clogging. Remove any debris or sediment from the filter mesh.

6.3 Storage

Store the pressure washer and its accessories in the provided carrying case in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure batteries are partially charged before long-term storage.

7. TROUBLESHOOTING

7.1 Unit Not Pumping Water

If the unit is not pumping water, the internal rubber gasket may stick to the water inlet due to dryness.

- **Solution:** Pour a small amount of water into the water inlet and simultaneously start the machine. This helps to soften the rubber gasket and initiate pumping.



Image: Diagram illustrating the solution for a pressure washer not pumping, showing water being poured into the inlet.

7.2 Low Pressure Output

- Check battery charge level.
- Ensure the water filter is clean and not clogged.
- Verify that the water source is adequate and the hose is not kinked.
- Confirm the correct nozzle and pressure setting are selected.

7.3 Unit Not Turning On

- Ensure the battery is fully charged and correctly inserted.
- Try using the second battery provided.

8. SPECIFICATIONS

Feature	Specification
Brand	highsam
Model Number	Gisam-01 (PW-10-5C)
Power Source	Battery Powered
Color	Black
Item Weight	1.3 Kilograms
Hose Length	5 Meters
Product Dimensions (L x W x H)	25L x 15W x 12H Centimeters
Max Flow Rate	1.08 Gallons per Minute
Max Pressure	65 Bars (approx. 943 PSI)

Feature	Specification
Wand Length	9.84 Inches
Batteries	2 x 4Ah (included)
Certifications	CE, CSA

9. WARRANTY AND SUPPORT

Gisam offers a 12-month warranty and dedicated customer service for this product. If you have any questions or require assistance, please contact Gisam customer support through the "Contact Seller" option on your order page.

Gisam is committed to providing high-quality products and services. For more information about Gisam and their product range, please visit their official channels.

