



[Manuals.plus](#) /

› [Teamson Kids](#) /

› Teamson Kids Little Chef Atlanta Modular Wooden Play Kitchen Instruction Manual

## Teamson Kids TD-13850C

# Teamson Kids Little Chef Atlanta Modular Wooden Play Kitchen

Model: TD-13850C

## INTRODUCTION

Welcome to the world of imaginative play with your new Teamson Kids Little Chef Atlanta Modular Wooden Play Kitchen. This premium 3-piece set is designed to provide hours of creative fun for children aged 3 and up, encouraging role-play and skill development. Its modern design and realistic features make it a perfect addition to any playroom.

## SAFETY INFORMATION

### **WARNING:**

For external use only. Avoid contact with eyes. Keep away from naked flame or direct heat sources. This product is CPSIA and ASTM F963 certified, ensuring it's safe for years of play. Adult supervision is recommended during assembly and play.

## WHAT'S IN THE BOX

- Play kitchen with 17 accessories

The 17-piece accessory set includes cookware, utensils, a cup, spice bottles, crackable eggs, magnets, a coffee pot, and more.



Figure 1: Included Accessories

## SETUP AND ASSEMBLY

Your Teamson Kids Play Kitchen comes in three modular pieces: a refrigerator unit, a sink unit, and an oven unit. These can be arranged together to form a large kitchen or separated to fit your space. Assembly typically takes approximately 2 hours for one adult. Follow the detailed instructions provided in the separate assembly guide for step-by-step directions. For enhanced stability and safety, especially in households with active children, it is recommended to secure the kitchen units to a wall using the provided anti-tip hardware. The back panels of the units include pre-drilled holes for this purpose.



Figure 2: Assembled Play Kitchen Layout

## OPERATING INSTRUCTIONS

The play kitchen features several interactive elements designed for realistic play:

- **Magnetic Refrigerator Door:** The refrigerator door is magnetic, allowing children to attach the included play magnets or their own.
- **Working Ice Maker:** Place the included cup under the dispenser and press the lever to dispense play ice cubes.
- **Clicking Stove Knobs:** The knobs on the stove unit produce a realistic clicking sound when turned, simulating real appliance operation.
- **Rotating Faucet:** The faucet on the sink unit can be rotated, adding to the immersive play experience.
- **Oven and Microwave Doors:** The oven and microwave doors open and close, providing space for play food and cookware.
- **Storage Bins:** Two soft recycling bins are included under the sink unit for organizing play food and accessories.



Figure 3: Interactive Features Overview



Figure 4: Child Interacting with Oven



Figure 5: Child Adjusting Stove Knobs

## MAINTENANCE

To ensure the longevity and appearance of your wooden play kitchen, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces clean with a damp cloth and mild soap. Avoid abrasive cleaners or excessive moisture, especially on the faux marble countertops, as prolonged exposure to water can cause damage.
- **Inspections:** Periodically check all screws and connections to ensure they remain tight. Tighten as necessary to maintain structural integrity.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or warping of the wood.
- **Handle with Care:** While durable, rough handling can lead to scuffs or scratches on the painted surfaces.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Missing accessories or parts	Packaging error or items shifted during transit.	Carefully check all packaging materials. If still missing, contact customer support with your purchase details.
Scuffs or scratches on paint	Minor manufacturing imperfections or normal wear from play.	Minor scuffs may be present upon arrival. For significant damage, contact customer support. Normal play may cause minor marks.
Difficulty during assembly	Misaligned pilot holes, incorrect part orientation, or missing hardware.	Refer to the detailed assembly guide. Ensure all parts are oriented correctly before tightening screws. Contact customer support if parts are defective or missing.
Countertop damage from moisture	Prolonged exposure to liquids.	Wipe up spills immediately. Avoid leaving wet items on the surface. The countertop is not waterproof.

## SPECIFICATIONS

- **Product Dimensions:** 12.99 x 60.75 x 34.37 inches
- **Item Weight:** 61.5 pounds
- **Item Model Number:** TD-13850C
- **Manufacturer Recommended Age:** 36 months - 12 years
- **Material:** Engineered wood with non-toxic paint
- **Certifications:** CPSIA compliant, ASTM F963 safety standards



Figure 6: Product Dimensions

## **WARRANTY AND SUPPORT**

For any questions, concerns, or to report missing/damaged parts, please contact Teamson Kids customer support. Refer to your purchase documentation for specific warranty details and contact information. We are committed to ensuring your satisfaction with our products.