

Manuals.plus /

› Fisher-Price /

› Fisher-Price HXB89 Smartphone Instruction Manual

## Fisher-Price HXB89

# Fisher-Price HXB89 Smartphone Instruction Manual

## INTRODUCTION

Thank you for choosing the Fisher-Price HXB89 Smartphone. This interactive learning toy is designed to engage babies and toddlers aged 6 to 36 months with lights, sounds, music, and phrases. It helps develop number recognition, language skills (in German), and fine motor skills through playful interaction.



Image: A baby interacting with the Fisher-Price HXB89 Smartphone.

## IMPORTANT SAFETY INFORMATION

### WARNING:

- This toy is intended for external use only. Do not attempt to open or ingest any parts.
- Adult supervision is recommended during play.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of batteries properly according to local regulations.

## SETUP AND BATTERY INSTALLATION

The Fisher-Price HXB89 Smartphone requires 2 AAA alkaline batteries, which are included with the product. Follow these steps to install or replace the batteries:

1. Locate the battery compartment on the back of the toy.
2. Using a Phillips head screwdriver (not included), loosen the screw on the battery compartment cover.
3. Remove the cover.
4. Insert 2 new AAA alkaline batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
5. Replace the cover and tighten the screw securely.

**Note:** For optimal performance, use fresh alkaline batteries. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are only to be charged under adult supervision.





Image: Fisher-Price HXB89 Smartphone retail packaging, indicating age range and features.

## OPERATING INSTRUCTIONS

The Fisher-Price HXB89 Smartphone is designed for intuitive play. Simply press the buttons on the screen to activate various sounds, melodies, songs, and phrases. The toy features over 30 different activations to keep your child engaged.

- **Screen Buttons:** Press any of the app-like icons on the screen to hear numbers, letters, weather sounds, and more.
- **Slider Switch:** Move the slider switch located below the screen to change modes or activate different phrases.
- **Language:** Please note that the toy's spoken phrases and songs are in German.



Image: Front view of the Fisher-Price HXB89 Smartphone, highlighting interactive buttons.

## CARE AND MAINTENANCE

To ensure the longevity of your Fisher-Price HXB89 Smartphone, follow these care instructions:

- **Cleaning:** Wipe the toy with a damp cloth and mild soap. Do not immerse the toy in water.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

## TROUBLESHOOTING

Problem	Solution
Toy does not turn on or has no sound.	Check if the batteries are installed correctly with the correct polarity. Replace with fresh AAA alkaline batteries. Ensure the battery compartment cover is securely closed.
Buttons are unresponsive or function intermittently.	Replace batteries with fresh ones. Ensure the toy is clean and free from debris that might obstruct buttons.
Toy speaks in German, not English.	This model (HXB89) is designed to speak in German. There is no option to change the language.

## SPECIFICATIONS

- **Model Number:** HXB89
- **Brand:** Fisher-Price
- **Dimensions (L x W x H):** Approximately 4.13 x 8.89 x 20.32 cm (1.63 x 3.5 x 8 inches)
- **Weight:** Approximately 159 grams (0.35 lbs)
- **Recommended Age:** 6 - 36 months
- **Batteries:** 2 x AAA Alkaline (included)
- **Educational Objective:** Number recognition, language skills (German), motor skills
- **UPC:** 194735225378
- **Country of Origin:** China



Image: Dimensional diagram of the Fisher-Price HXB89 Smartphone.

## WARRANTY AND SUPPORT

For warranty information or customer support regarding your Fisher-Price HXB89 Smartphone, please refer to the warranty card included in the product packaging or visit the official Fisher-Price website. Contact details for customer service can typically be found on the manufacturer's website or on the product packaging.

Fisher-Price is committed to providing quality products. If you experience any issues, please reach out to their customer support for assistance.