

[Manuals.plus](#) /

› [Ihomekee](#) /

› Ihomekee Programmable Coffee Maker User Manual

Ihomekee CM9428C

Ihomekee Programmable Coffee Maker User Manual

Model: CM9428C

1. INTRODUCTION

Thank you for choosing the Ihomekee Programmable Coffee Maker. This appliance is designed to provide you with delicious coffee, offering both hot and iced coffee functions, along with programmable settings for your convenience. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.



Figure 1.1: The iHomekee Programmable Coffee Maker, showcasing its sleek silver and black design and digital display.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any

manner.

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
- This appliance is ETL safety approved and BAP free.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Ihomekee coffee maker:

- **Control Panel with LCD Screen:** Displays time, brew settings, and strength options. Features touch screen buttons for easy operation.
- **Water Reservoir:** Located at the back, with clear markings for water levels up to 12 cups.
- **Filter Basket:** Holds the reusable filter for coffee grounds.
- **Glass Carafe:** 12-cup capacity with measurement markings for both hot and iced coffee.
- **Warming Plate:** Non-stick surface to keep coffee warm after brewing.

12 CUPS LARGE WATER TANK

Easy Pouring Without Making Any Mess

III



Figure 3.1: The large water tank allows for easy pouring without spills, accommodating up to 12 cups of water.



Figure 3.2: The removable filter basket and reusable filter, eliminating the need for paper filters.

4. SETUP

4.1 First Use

1. Unpack the coffee maker and remove all packaging materials.
2. Wash the carafe, lid, and reusable filter basket in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the coffee maker with a soft, damp cloth.
4. Before brewing coffee for the first time, run a full cycle with only water to clean the internal components. Fill the water reservoir to the MAX line, place the empty filter basket and carafe, and initiate a regular brew cycle. Discard the water after the cycle.

4.2 Setting the Clock

To set the current time:

- Plug in the coffee maker. The LCD screen will illuminate.
- Press the **HOUR** button to set the hour. The time will cycle through AM/PM.
- Press the **MINUTE** button to set the minutes.
- The clock is now set.

5. OPERATING INSTRUCTIONS

5.1 Brewing Hot Coffee

1. Open the top lid and fill the water reservoir with fresh, cold water to your desired level (up to 12 cups).
2. Place the reusable filter into the filter basket. Add your desired amount of ground coffee into the filter. A general guideline is one tablespoon of coffee per cup.
3. Close the top lid securely and ensure the carafe is properly placed on the warming plate.
4. Press the **BREW NOW** button to start brewing immediately.
5. The coffee maker will automatically shut off 2 hours after brewing is complete for safety.

TIME PROGRAMMABLE 24H

Wake Up to Fresh Coffee

III



Figure 5.1: The coffee maker features a 24-hour programmable timer, allowing you to wake up to fresh coffee.

5.2 Iced Coffee Function

To brew iced coffee:

1. Fill the glass carafe with approximately 2 pounds of ice cubes. Refer to the 'ICE CUBES PER SERVING' markings on the carafe.
2. Add water to the reservoir according to the iced coffee markings on the carafe (e.g., for 6 cups of iced coffee, fill water to the 6-cup line).
3. Add coffee grounds to the reusable filter as usual.
4. Press the **ICED** button on the control panel. The coffee maker will adjust the brewing process for optimal iced coffee flavor.

ICED COFFEE IS ALSO AVAILABLE

Add 2 Pounds Of Ice In To The Glass

III



Figure 5.2: Prepare delicious iced coffee by adding ice directly to the carafe before brewing.

5.3 Brewing Strength Adjustment

The coffee maker allows you to choose between regular and bold coffee flavors:

- After adding water and coffee grounds, press the **STRONG** button on the touchscreen.
- The indicator light for 'STRONG' will illuminate, indicating that the coffee maker will brew a more concentrated flavor.
- To return to regular brew, press the **STRONG** button again to deselect the option.

SMART TOUCHSCREEN

III



Figure 5.3: Easily adjust your coffee strength between regular and bold using the smart touchscreen.

5.4 Programmable Brewing (Brew Later)

To set a delayed brew time:

1. Prepare the coffee maker with water and coffee grounds as you would for a regular brew.
2. Press the **BREW LATER** button. The display will show a flashing time.
3. Use the **HOUR** and **MINUTE** buttons to set your desired brew start time.
4. Once the time is set, the display will revert to the current time, and the **BREW LATER** indicator will remain lit, confirming the programmed setting.
5. The coffee maker will automatically start brewing at the set time.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

6.1 Daily Cleaning

- After each use, discard used coffee grounds and rinse the reusable filter and filter basket.
- Wash the glass carafe and lid in warm, soapy water. These parts are also top-rack dishwasher safe.
- Wipe the exterior of the coffee maker and the warming plate with a damp cloth. Do not use abrasive cleaners or scouring pads.

6.2 Descaling (Deep Cleaning)

Mineral deposits from water can build up over time and affect performance. Descale your coffee maker every 2-3 months, or more frequently if you have hard water.

1. Fill the water reservoir with a mixture of white vinegar and water (1:2 ratio). For example, 2 cups of vinegar and 4 cups of water.
2. Place the empty reusable filter and carafe in position.
3. Press the **CLEAN** button on the control panel. The coffee maker will run a special cleaning cycle.
4. Once the cycle is complete, discard the vinegar solution.
5. Run 2-3 full cycles with fresh, clean water to rinse out any remaining vinegar smell or taste.

7. TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew.	No water in reservoir; Power cord unplugged; Brew cycle not initiated.	Fill water reservoir; Ensure power cord is securely plugged in; Press 'BREW NOW' or 'BREW LATER'.
Coffee tastes weak.	Not enough coffee grounds; Coffee grounds too coarse; Descaling needed.	Add more coffee grounds; Use finer grind; Perform descaling cycle.
Coffee overflows from filter basket.	Too many coffee grounds; Filter basket not seated correctly; Clogged filter.	Reduce coffee grounds; Ensure filter basket is properly inserted; Clean filter and descaling.
Unit does not turn on.	No power; Malfunction.	Check power outlet and cord; Contact customer service if issue persists.

8. SPECIFICATIONS

Feature	Detail
Brand	lhomekee
Model Name	CM9428C
Color	Black+Silver
Product Dimensions (D x W x H)	11.4" x 7.55" x 14.9"
Item Weight	4.95 pounds
Capacity	12 Cups
Special Features	Auto Shut-Off, Cup Warmer, Iced Coffee Function, 12 Cups Large Capacity
Coffee Maker Type	Drip Coffee Machine
Filter Type	Reusable
Human Interface Input	Touchscreen



Figure 8.1: Product dimensions for placement and reference.

9. WARRANTY AND SUPPORT

Ihomekee stands by the quality of its products. This coffee maker comes with **2-year hassle-free replacement warranty**. For any questions, concerns, or warranty claims, please contact our customer service team. We offer **24/7 customer service** to assist you.

Please refer to your purchase documentation for specific contact details or visit the official Ihomekee website for support information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question