

Clikon CK651

Clikon 6kg Fully Automatic Front Load Washing Machine CK651 User Manual

Model: CK651 | Brand: Clikon

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your new Clikon 6kg Fully Automatic Front Load Washing Machine, model CK651. This appliance features a 6kg capacity, 250W power, 16 wash programs, a durable stainless steel drum, and an ABS plastic control panel. Key features include a child lock function and an elegant, modern design. Please read this manual thoroughly before using the appliance and keep it for future reference.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, observe the following basic precautions:

- Read all instructions before using the appliance.
- Ensure the power supply matches the voltage requirements specified on the rating label.
- Do not install or store the appliance where it will be exposed to the weather or to freezing temperatures.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual.
- Keep flammable materials and vapors away from the appliance.
- Always unplug the appliance from the power supply before cleaning or performing any maintenance.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use extension cords or ungrounded adapters.
- Ensure all water connections are secure to prevent leaks.

3. PRODUCT OVERVIEW

The Clikon CK651 washing machine is designed for efficient and convenient laundry care. It combines advanced features with a user-friendly interface.

3.1 Key Features

- **Capacity:** 6 kg, suitable for small to medium loads.
- **Wash Programs:** 16 standard cycles including Normal, Heavy Duty, Delicates, Quick Wash, and Rinse.
- **Drum Material:** Durable stainless steel drum for longevity and gentle fabric care.
- **Control Panel:** ABS plastic control panel with push-button controls for easy program selection.
- **Child Lock:** Integrated child lock function to prevent accidental program changes.
- **Power:** 250W wash power and 250W spin power for effective cleaning and drying.
- **Design:** Elegant and modern freestanding design.

3.2 Components

Familiarize yourself with the main components of your washing machine:



Figure 1: Front view of the Clikon CK651 Fully Automatic Front Load Washing Machine. This image shows the main door, control panel, and detergent dispenser drawer.



Figure 2: Detailed view of the control panel and detergent dispenser. The control panel features a program selection dial, function buttons, and a digital display.



Figure 3: Rear view of the washing machine, showing water inlet connections and the drain hose outlet.

4. INSTALLATION AND SETUP

Proper installation is crucial for the safe and efficient operation of your washing machine. It is recommended to have the appliance installed by a qualified technician.

4.1 Unpacking

1. Carefully remove all packaging materials.

2. Remove the transport bolts located at the rear of the machine. Keep these bolts for future transport if needed.
3. Inspect the machine for any damage incurred during transit.

4.2 Location and Leveling

- Place the washing machine on a firm, level floor.
- Adjust the leveling feet at the bottom of the machine until it is perfectly stable and level. Use a spirit level to verify.
- Ensure there is adequate space around the machine for ventilation and maintenance.

4.3 Water Connection

- Connect the inlet hose to the cold water tap and to the water inlet valve at the back of the machine. Ensure connections are tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent dislodging during operation. The included drain hose is designed for this purpose.

4.4 Electrical Connection

- Plug the power cord into a grounded electrical outlet.
- Verify that the power supply (220-240V, 40-60Hz) matches the machine's requirements.
- Do not use extension cords or multi-plug adapters.

5. OPERATING INSTRUCTIONS

Follow these steps for effective and safe operation of your Clikon washing machine.

5.1 Before Each Wash

- Sort laundry by fabric type, color, and degree of soiling.
- Check pockets for small items like coins or keys.
- Close zippers and hooks, and tie loose strings.

5.2 Loading Laundry

- Open the washing machine door.
- Load laundry loosely into the drum, ensuring not to overload the 6kg capacity.
- Close the door firmly until it clicks shut.

5.3 Adding Detergent and Additives

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment.
- If using fabric softener or pre-wash detergent, add them to their respective compartments.
- Push the dispenser drawer back in completely.

5.4 Selecting a Wash Program

1. Turn the program selection dial to choose one of the 16 available wash programs (e.g., Normal, Heavy Duty, Delicates, Quick Wash, Rinse).

2. Adjust any additional settings (e.g., temperature, spin speed) if available and desired.
3. Press the 'Start/Pause' button to begin the wash cycle.

5.5 Child Lock Function

To activate the child lock, press and hold the designated child lock button (refer to control panel diagram in Figure 2) for a few seconds until the indicator light illuminates. This prevents children from accidentally changing settings or opening the door during operation. Repeat the process to deactivate.

6. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

6.1 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

6.2 Cleaning the Detergent Dispenser

- Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue.
- Clean the housing of the dispenser with a brush.

6.3 Cleaning the Drum

- Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) regularly to prevent odor and residue buildup.
- Wipe the inside of the drum and the rubber gasket around the door after each wash to prevent mold growth.

6.4 Cleaning the Drain Filter

- Locate the drain filter, usually at the bottom front of the machine (refer to Figure 1 for general location).
- Place a shallow container beneath the filter to catch any residual water.
- Carefully unscrew and remove the filter.
- Clean any lint, debris, or foreign objects from the filter.
- Reinsert and securely tighten the filter.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Door not closed properly; Program not selected; 'Start/Pause' not pressed.	Check power connection; Ensure door is firmly closed; Select a program; Press 'Start/Pause'.

Problem	Possible Cause	Solution
No water intake	Water tap closed; Water inlet hose kinked or blocked; Water pressure too low.	Open water tap; Straighten hose, check for blockages; Ensure adequate water pressure.
Water not draining	Drain hose kinked or blocked; Drain filter clogged.	Straighten drain hose, check for blockages; Clean the drain filter (see Section 6.4).
Excessive vibration/noise	Machine not level; Transport bolts not removed; Overloaded or unbalanced load.	Adjust leveling feet; Remove transport bolts (if not already done); Redistribute laundry, reduce load size.
Detergent residue in dispenser	Insufficient water pressure; Detergent clumping; Dispenser dirty.	Check water pressure; Use less detergent or a different type; Clean dispenser (see Section 6.2).

8. SPECIFICATIONS

Detailed technical specifications for the Clikon CK651 washing machine.

Feature	Detail
Brand	Clikon
Model Number	CK651
Product Type	Front Load Washing Machine
Capacity	6 kg
Product Dimensions (D x W x H)	48.8 cm x 48.8 cm x 89 cm
Item Weight	33.5 kg
Material	Stainless Steel, Plastic
Drum Material	Stainless Steel
Finish Type	Stainless Steel
Color	White
Operation Mode	Fully Automatic
Control Type	Push Button
Number of Standard Cycles	16
Cycle Options	Normal, Heavy Duty, Delicates, Quick Wash, Rinse
Special Features	Child Lock, Modern Design, Specialized Wash Cycles
Installation Type	Freestanding
Included Components	Drain Hose

Feature	Detail
Manufacturer	China

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Clikon washing machine comes with **atwo-year warranty** from the date of purchase. The warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by improper installation, misuse, neglect, or unauthorized repairs.

9.2 Customer Support

For technical assistance, service requests, or questions regarding your Clikon washing machine, please contact Clikon customer support. Refer to the official Clikon website or your purchase documentation for contact details specific to your region.

When contacting support, please have your model number (CK651) and purchase date ready.