Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Bestway /
- > Bestway Family Ground 6 Tent (Model 68094) Instruction Manual

Bestway 68094

Bestway Family Ground 6 Tent (Model 68094) Instruction Manual

Your guide to safe and effective use of your Bestway Family Ground 6 Tent.

INTRODUCTION

This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your Bestway Family Ground 6 Tent, Model 68094. Please read these instructions carefully before use and retain them for future reference.

The Bestway Family Ground 6 Tent is designed for family camping, accommodating up to 6 people with a spacious living area and two partitioned sleeping areas. It features durable, weather-resistant materials for comfort and protection in various outdoor conditions.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in fire, injury, or property damage.

- Keep all flame and heat sources away from tent fabric. The tent is made of flame-retardant material but is not fireproof.
- Do not use fuel-burning appliances inside the tent. Ensure adequate ventilation to prevent carbon monoxide poisoning.
- Choose a flat, clear site for pitching, away from sharp objects, overhanging branches, and potential flood areas.
- Secure the tent properly with all ropes and pegs to withstand wind and weather conditions.
- Do not pitch the tent near open flames or heat sources.
- Supervise children around the tent to prevent accidents.
- In case of strong winds or storms, evacuate the tent and seek safer shelter.

PACKAGE CONTENTS

Before beginning assembly, ensure all components are present:

- 1 x Tent Body
- 1 x Carry Bag
- 32 x Pegs
- Fiberglass Poles (quantity not specified, assume sufficient for structure)
- Guy Ropes (quantity not specified, assume sufficient for securing)

SETUP INSTRUCTIONS

Estimated setup time: Approximately 25 minutes.

- 1. Choose a Site: Select a flat, dry area free of debris. Lay out the tent body on the ground.
- 2. **Assemble Poles:** Connect the fiberglass pole sections. Identify the different pole lengths if applicable and match them to the corresponding sleeves on the tent.
- 3. **Insert Poles:** Carefully slide the assembled poles through the fabric sleeves on the tent. Avoid forcing them to prevent damage.
- 4. **Raise the Tent:** Insert the ends of the poles into the designated pins or grommets at the base of the tent. Gradually lift the tent structure.
- 5. Secure the Base: Peg down the corners and sides of the tent body to the ground.
- 6. **Attach Guy Ropes:** Extend all guy ropes and secure them to the ground with pegs, ensuring even tension. This provides stability against wind.
- 7. **Inner Tent Setup:** If the sleeping areas are separate, attach them to the interior hooks or loops.
- 8. **Ventilation:** Open vents and entrances as needed for airflow.



Image: The Bestway Family Ground 6 Tent fully assembled, showcasing its spacious design and two entrances.



Image: A diagram showing the structural components and assembly points of the tent.

OPERATING YOUR TENT

- **Ventilation:** The tent features two entrances for improved ventilation. Utilize these and any integrated vents to maintain airflow and reduce condensation.
- **Storage:** Four internal pockets are provided for additional storage of small items, helping to keep the tent organized.
- **Insect Protection:** An integrated insect net helps keep pests out while allowing air circulation. Ensure all zippers are closed when not entering or exiting.
- **Ground Protection:** The tent includes a ground protection layer designed to shield the tent floor from moisture, water, and other ground elements.



Image: The spacious interior of the tent, highlighting the partitioned sleeping areas and overall living space.

MAINTENANCE

- **Cleaning:** Clean the tent with a soft brush or sponge and mild soap. Do not use harsh detergents, bleach, or solvents. Rinse thoroughly with water.
- **Drying:** Always ensure the tent is completely dry before packing it away to prevent mildew and odors. Air dry in a shaded area.
- **Storage:** Store the tent in its carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- Pole Care: Inspect poles for damage before and after each use. Replace any cracked or broken sections
- **Zipper Care:** Keep zippers clean and lubricated with a silicone-based spray to ensure smooth operation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Condensation inside tent	Lack of ventilation, high humidity.	Increase ventilation by opening vents and entrances. Ensure proper airflow.
Tent not stable in wind	Insufficient pegging or loose guy ropes.	Ensure all pegs are firmly in the ground and guy ropes are taut and evenly tensioned.
Water leakage	Damaged fabric, unsealed seams, or improper pitching.	Check for tears or holes and repair with a tent repair kit. Ensure seams are properly sealed. Verify tent is pitched correctly to shed water.
Zipper sticking	Dirt or debris in zipper teeth, lack of lubrication.	Clean zipper teeth with a brush. Apply a silicone-based zipper lubricant.

SPECIFICATIONS

Model Number	68094		
Dimensions (L x W x H)	4.90 m x 2.80 m x 2.00 m (16'1" x 9'2" x 6'7")		
Capacity	6 Person		
Material	Polyester, Polyethylene (Flame Retardant)		
Water Resistance	3000mm (Waterproof seams)		
Construction	Double Layer		
Weight	14.54 kg (32.05 lbs)		
Features	2 Entrances, Insect Net, 4 Internal Pockets, Ground Protection Layer, Fiberglass Poles, Fluorescent Guy Ropes		



Image: Technical diagram detailing the tent's dimensions, materials, and features such as 3000mm water resistance and flame retardant fabric.

WARRANTY AND SUPPORT

Specific warranty information for the Bestway Family Ground 6 Tent (Model 68094) is not provided in this manual. For detailed warranty terms, conditions, and to register your product, please refer to the official Bestway website or contact Bestway customer support directly.

For technical support, spare parts, or any inquiries regarding your tent, please visit the Bestway official website or consult your retailer.

You can find more information about Bestway products and support at:www.bestwaycorp.com

Bestway Bestway Beach Ground 2 Tent Owner's Manual Comprehensive guide for setting up, using, and maintaining the Bestway Beach Ground 2 Tent (Model 68105). Includes safety instructions, assembly steps, disassembly, maintenance, and storage tips. Bestway Bestway Ramble X2 Tent User Manual - Setup, Care, and Storage Guide Comprehensive user manual for the Bestway Ramble X2 Tent, covering setup instructions, safety guidelines, disassembly, maintenance, and storage tips. Includes detailed diagrams and part descriptions. Bestway Bestway 68142 Tent Owner's Manual Comprehensive owner's manual for the Bestway 68142 tent, providing essential safety instructions, product specifications, setup guidance, and maintenance tips to ensure proper use and longevity. Bestway Alpine Dome 4 Tent with SwiftClick Setup Owner's Manual Owner's manual for the Bestway Alpine Dome 4 Tent with SwiftClick Setup, providing important safety instructions, product specifications, maintenance guidelines, and assembly instructions. Bestway Bestway COOLMOUNT 4 Tent Owner's Manual and Instructions Comprehensive owner's manual and assembly instructions for the Bestway COOLMOUNT 4 tent, including safety guidelines, care, and storage information. Bestway #68080 Play Tent Assembly Instructions and Safety Warnings Detailed assembly instructions, parts list, and safety warnings for the Bestway #68080 play tent and ball pit.