

[Manuals.plus](#) /

› [Bestway](#) /

› Bestway Flip & Lock Above Ground Pool Ladder 1.22 m User Manual

Bestway 58331

Bestway Flip & Lock Above Ground Pool Ladder 1.22 m

Model: 58331 | Brand: Bestway

INTRODUCTION

The Bestway Flip & Lock Above Ground Pool Ladder provides a secure and convenient means of entering and exiting your above-ground pool. Designed with safety in mind, this ladder features a unique Flip & Lock mechanism that allows the outer section to be raised and secured, preventing unsupervised access to the pool, particularly by small children. Constructed from durable, corrosion-resistant materials, this ladder is built for long-lasting use.



Image: The fully assembled Bestway Flip & Lock Above Ground Pool Ladder, ready for use with an above-ground pool.

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these warnings can result in serious injury or death.

- Always supervise children when they are in or around the pool.
- Do not dive or jump from the ladder. The ladder is designed for entry and exit only.
- Ensure the ladder is securely placed on a firm, level surface before use.
- When the pool is not in use, always engage the Flip & Lock mechanism to prevent unauthorized access.
- Do not exceed the maximum load capacity of 150 kg (330 lbs).
- Inspect the ladder regularly for damage, wear, or loose components. Do not use if damaged.
- Keep hands and feet clear of moving parts when operating the Flip & Lock mechanism.



Image: Detail of a ladder step showing embossed safety warnings, including "NO DIVING" and "NO JUMPING" symbols, and a textured surface for grip.

PARTS LIST

Before assembly, ensure all parts are present and undamaged. Refer to the diagram below for identification.

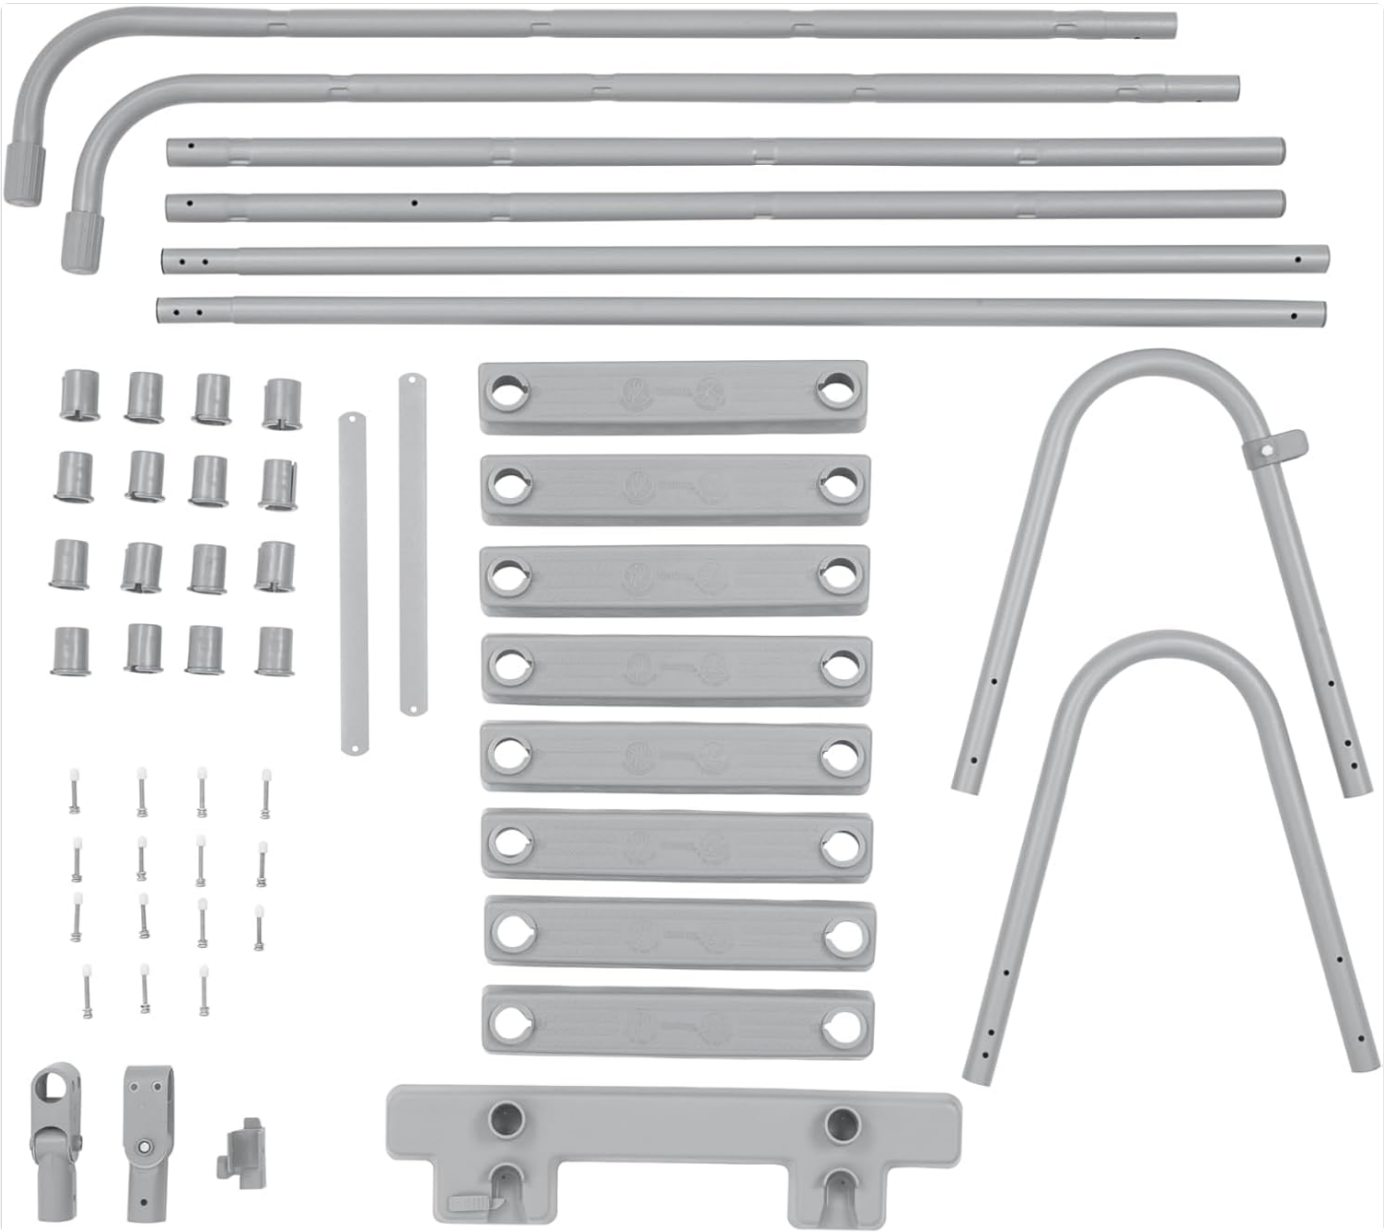


Image: All components of the Bestway pool ladder laid out, including metal frame tubes, plastic steps, connecting pins, and the locking mechanism parts.

Table 1: Ladder Components

Part	Description	Quantity
A	Upper Handrails (Curved)	2
B	Vertical Support Poles	Various
C	Horizontal Crossbars	Various
D	Plastic Steps (with textured surface)	8
E	Step Hinges/Connectors	Various
F	Base Supports/Feet	2
G	Flip & Lock Mechanism Assembly	1
H	Fasteners (Screws, Pins, Caps)	Various

SETUP AND ASSEMBLY

Assembly of the Bestway Flip & Lock Pool Ladder is designed to be straightforward. Follow these steps carefully:

1. **Prepare the Area:** Choose a flat, stable surface for assembly. Ensure you have enough space to lay out all components.
2. **Assemble the Inner Ladder Section:** Connect the vertical support poles and horizontal crossbars for the inner section (the part that goes into the pool). Secure them with the provided fasteners.
3. **Attach Inner Steps:** Slide the plastic steps onto the inner ladder frame, ensuring they are oriented correctly for grip. Secure them firmly.
4. **Assemble the Outer Ladder Section:** Repeat the process for the outer ladder section (the part that remains outside the pool), including attaching its steps.
5. **Install Base Supports:** Attach the base supports/feet to the bottom of both inner and outer ladder sections. Ensure they are stable.
6. **Connect Handrails:** Attach the curved upper handrails to the top of both ladder sections.
7. **Integrate Flip & Lock Mechanism:** Carefully install the Flip & Lock mechanism assembly between the inner and outer ladder sections at the top. This mechanism allows the outer section to pivot. Refer to the detailed instructions provided in your physical manual for precise attachment of the locking pin and hinge.
8. **Final Inspection:** Once assembled, double-check all connections and fasteners to ensure they are tight and secure. Test the stability of the ladder before placing it in position.



Image: A close-up view of the sturdy base supports (feet) of the ladder, designed for stability on the ground.

OPERATING INSTRUCTIONS

Using the Ladder for Entry/Exit

Position the ladder firmly against the side of your above-ground pool. Ensure the inner section is submerged in the pool water and the outer section rests securely on the ground outside the pool. Use the handrails for support when ascending or descending. Always face the ladder when using it.



Image: A person demonstrating safe entry into an above-ground pool using the Bestway ladder, holding onto the handrails.

Engaging the Flip & Lock Mechanism

The Flip & Lock feature is essential for pool safety when the pool is not in use, especially to prevent access by children. To engage:

1. Ensure no one is in the pool or on the ladder.
2. From outside the pool, grasp the outer ladder section.
3. Locate the locking mechanism near the top of the ladder (refer to image below).
4. Disengage the lock (usually by turning a knob or pressing a button, as shown in the close-up image).
5. Carefully lift and pivot the outer ladder section upwards until it is in the vertical, locked position.
6. Re-engage the lock to secure the ladder in the upright position. Verify it is firmly locked and cannot be easily lowered.

To disengage and lower the ladder, reverse these steps.





 


Image: The Bestway pool ladder with its outer section flipped upwards and secured, demonstrating the safety lock feature.



Image: A detailed view of the Flip & Lock mechanism, showing the locking knob and hinge assembly.

MAINTENANCE

Regular maintenance will extend the life of your pool ladder and ensure continued safe operation.

- **Cleaning:** Periodically clean the ladder with mild soap and water. Rinse thoroughly to remove any chemical residue from pool water. Avoid abrasive cleaners or harsh chemicals that could damage the materials.
- **Inspection:** Before each use, inspect all components for signs of wear, cracks, corrosion, or loose fasteners. Pay close attention to the steps, handrails, and the Flip & Lock mechanism.
- **Fasteners:** Ensure all screws and pins are tight. Re-tighten if necessary, but do not overtighten.
- **Storage:** During off-season or prolonged periods of non-use, it is recommended to remove the ladder from the pool, clean it, dry it completely, and store it in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Table 2: Common Issues and Solutions

Problem	Possible Cause	Solution
Ladder feels unstable.	Uneven ground; loose fasteners.	Ensure ladder is on a flat, firm surface. Check and tighten all fasteners.

Problem	Possible Cause	Solution
Flip & Lock mechanism is stiff or won't engage/disengage.	Dirt/debris in mechanism; misaligned parts.	Clean the mechanism. Check for proper alignment during assembly. Do not force.
Steps are slippery.	Algae or dirt buildup.	Clean steps thoroughly with a brush and mild soap. Ensure proper pool water chemistry to prevent algae.
Corrosion on metal parts.	Exposure to harsh chemicals or prolonged moisture.	Rinse ladder after use. Store dry. If minor, clean with a non-abrasive rust remover and protect. Replace severely corroded parts.

SPECIFICATIONS

- **Model Number:** 58331
- **Brand:** Bestway
- **Material:** Plastic, Metal (Corrosion-resistant metal frames, heavy-duty plastic steps)
- **Color:** White
- **Product Dimensions:** 46.65"W x 64.17"H (approx. 118.5 cm W x 163 cm H)
- **Maximum Height (Compatible Pool Wall Height):** 1.22 m (48 inches)
- **Number of Steps:** 4 (per side, total 8 steps)
- **Load Capacity:** 150 kg (330 lbs)
- **Item Weight:** 12000 Grams (26.5 pounds)
- **Assembly Required:** Yes
- **Batteries Required:** No

WARRANTY AND SUPPORT

For specific warranty information and customer support, please refer to the documentation included with your purchase or visit the official Bestway website. Bestway products typically come with a manufacturer's warranty covering defects in materials and workmanship.

Bestway Official Website: www.bestwaycorp.com

© 2024 Bestway. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question