

[manuals.plus](#) /› [SKPM](#) /› [SKPM YS-213 Karaoke Bluetooth Speaker with Dual Wireless Microphones User Manual](#)

SKPM YS-213

SKPM YS-213 Karaoke Bluetooth Speaker with Dual Wireless Microphones

User Instruction Manual

INTRODUCTION

Thank you for choosing the SKPM YS-213 Karaoke Bluetooth Speaker. This portable system is designed to provide high-quality audio and an enjoyable karaoke experience with its dual wireless microphones and various connectivity options. Please read this manual carefully before use to ensure proper operation and to maximize the product's lifespan.

WHAT'S IN THE BOX

- 1x SKPM YS-213 Karaoke Bluetooth Speaker
- 2x Wireless Microphones
- 1x USB Charging Cable
- 1x AUX Cable



Image: The SKPM YS-213 Karaoke Bluetooth Speaker shown with its two accompanying wireless microphones.

PRODUCT OVERVIEW

Speaker Controls and Ports

Familiarize yourself with the speaker's interface for seamless operation.

- **Power Button:** Press and hold to turn the speaker on or off.
- **Mode Button:** Cycle through Bluetooth, USB, AUX, and TF card modes.
- **Volume Controls:** Adjust the main speaker volume.
- **USB Port:** For USB drive playback or charging.
- **AUX Port:** For connecting external audio devices via AUX cable.
- **TF Card Slot:** For playing music directly from a TF (MicroSD) card.
- **Charging Port:** Micro USB port for charging the speaker.



Image: Top view of the speaker unit, highlighting the control panel and various input/output ports.

Microphone Controls

Each wireless microphone features the following controls:

- **Power Button:** Press and hold to turn the microphone on or off.
- **Volume Controls (VOL+/-):** Adjust the microphone's vocal volume.
- **Echo Controls (EFF+/-):** Adjust the echo effect level.
- **Voice Changer Button:** Cycle through different voice effects.
- **Charging Port:** Micro USB port for charging the microphone.



Image: Detailed view of a wireless microphone, illustrating the power, volume, echo, and voice changer buttons.

SETUP

1. Charging the Devices

Before first use, fully charge the speaker and both microphones.

- **Speaker:** Connect the USB charging cable to the speaker's charging port and a suitable USB power adapter (not included). The speaker's built-in battery capacity is 3000-4000mAh, requiring approximately 2-3 hours for a full charge.
- **Microphones:** Connect the USB charging cable to each microphone's charging port and a suitable USB power adapter. Each microphone has a 1200mAh battery, requiring approximately 2-3 hours for a full charge.

The charging indicator light will typically turn off or change color once charging is complete.

2. Powering On/Off

- **Speaker:** Press and hold the Power button on the speaker until you hear an audible prompt or see an indicator light.
- **Microphones:** Press and hold the Power button on each microphone. The microphones will automatically connect to the speaker when both are powered on.

OPERATING INSTRUCTIONS

1. Bluetooth Connection

1. Ensure the speaker is powered on and in Bluetooth mode (press the Mode button if necessary). The speaker will indicate it is ready for pairing.

2. On your smartphone, tablet, or other Bluetooth-enabled device, open the Bluetooth settings.
3. Search for available devices and select "YS-213" from the list.
4. Once connected, the speaker will provide an audible confirmation. You can now play audio from your device through the speaker.

2. USB/AUX/TF Card Playback

- **USB Playback:** Insert a USB drive containing MP3 audio files into the USB port. The speaker will automatically switch to USB mode and begin playback.
- **TF Card Playback:** Insert a TF (MicroSD) card containing MP3 audio files into the TF card slot. The speaker will automatically switch to TF card mode and begin playback.
- **AUX Playback:** Connect an external audio device (e.g., MP3 player, computer) to the speaker's AUX port using the provided AUX cable. Press the Mode button until the speaker enters AUX mode.

3. Using the Microphones

- **Vocal Volume:** Use the VOL+/- buttons on the microphone to adjust your vocal output level.
- **Echo Effect:** Use the EFF+/- buttons on the microphone to increase or decrease the echo effect.
- **Voice Changer:** Press the Voice Changer button to cycle through seven different voice effects: *Original, Monster, Baby, Female, Male, Multi-mix*.
- **Vocal Elimination:** Some models may feature a function to reduce or eliminate vocals from music tracks, allowing for a more dedicated karaoke experience. Refer to the speaker's controls for this specific feature.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker and microphones. Do not use abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the devices regularly, even if not in frequent use. Avoid completely draining the battery before recharging.
- **Water Exposure:** This device is not waterproof. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power button not held long enough.	Charge the speaker fully. Press and hold the Power button for 3-5 seconds.
No sound from speaker.	Volume too low; Incorrect mode selected; Device not paired (Bluetooth).	Increase speaker volume. Press Mode button to select correct input. Re-pair Bluetooth device.
Microphone not working.	Microphone off; Low battery; Not paired with speaker.	Ensure microphone is powered on. Charge microphone. Power cycle both speaker and microphone to re-establish connection.
Poor sound quality/echo.	Microphone too close to speaker; Echo level too high.	Maintain a reasonable distance between microphone and speaker. Adjust microphone EFF+/- settings.

Problem	Possible Cause	Solution
Bluetooth connection unstable.	Device too far from speaker; Interference.	Move Bluetooth device closer to the speaker. Avoid obstacles or other wireless devices.

SPECIFICATIONS

Brand	SKPM
Model	YS-213
Product Dimensions	10 x 5 x 8 cm
Item Weight	960 g
Speaker Wattage	120 Watts
Speaker Battery Capacity	3000-4000mAh
Microphone Battery Capacity	1200mAh (each)
Battery Life (approx.)	4-5 hours (speaker), 4-5 hours (microphones)
Charging Time (approx.)	2-3 hours
Connectivity	Bluetooth, USB, AUX, TF Card
Bluetooth Version	5.0
Compatible Devices	Smartphones, Tablets, Portable Audio Players
Audio Output Mode	Stereo
Special Features	Dual Wireless Microphones, Voice Changer, Portable

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to your purchase documentation or contact the retailer where you purchased the SKPM YS-213 Karaoke Bluetooth Speaker. Keep your proof of purchase for any warranty claims.