

## Chefman RJ11-17-GMRL-TI

# Chefman Electric Kettle with Tea Infuser User Manual

Model: RJ11-17-GMRL-TI

## INTRODUCTION

Thank you for choosing the Chefman Electric Kettle with Tea Infuser. This 1.7L, 1500W kettle is designed for rapid boiling and convenient tea steeping, offering a blend of efficiency, safety, and modern design. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

This kettle features a removable tea infuser, lift-out lid for easy cleaning, automatic shut-off, boil-dry protection, and a 360-degree swivel base for cordless convenience.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Extreme caution must be used when moving an appliance containing hot water.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- The kettle is equipped with boil-dry protection. If the kettle boils dry, it will automatically shut off. Allow it to cool before refilling.

## PRODUCT OVERVIEW

Familiarize yourself with the components of your Chefman Electric Kettle.



Image: The Chefman Electric Kettle with Tea Infuser, showing the glass body, black handle, lid, and internal tea infuser. Water levels are marked on the side, and a blue LED light illuminates the base.



## Safety Features

Automatic shutoff and boil-dry protection for added peace of mind

Image: The Chefman Electric Kettle separated from its 360-degree swivel power base, highlighting its cordless design and safety features.

- **Glass Kettle Body:** Durable borosilicate glass with clear water level markings (MIN, 0.5L, 1.0L, 1.5L, MAX 1.7L).
- **Removable Lid:** For easy filling and cleaning.
- **Tea Infuser:** Stainless steel, removable for steeping loose-leaf tea.
- **Handle:** Cool-touch handle for safe pouring.
- **Power Base:** 360-degree swivel base with cord storage.
- **On/Off Switch:** Integrated into the handle.
- **LED Indicator Lights:** Blue lights illuminate when water is heating and turn off when boiling is complete.
- **Drip-Free Spout:** Designed for precise and mess-free pouring.

## SETUP

1. **Unpack:** Carefully remove all packaging materials and any promotional labels or stickers from your kettle.
2. **Initial Cleaning:** Before first use, fill the kettle with water to the MAX line. Boil the water, then

discard it. Repeat this process 2-3 times to remove any manufacturing residue.

3. **Placement:** Place the power base on a dry, flat, heat-resistant surface. Ensure the power cord is not dangling where it can be pulled or tripped over.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

## OPERATING INSTRUCTIONS

### Boiling Water



Boil



Pour



Steep



Brew

## Chefman Boils Fast

Enjoy a hot cup in as little as 3 minutes

Image: A collage illustrating the kettle's versatility: boiling water for oatmeal, pouring for ramen, steeping tea, and brewing coffee.

1. **Fill Kettle:** Remove the kettle from its power base. Open the lid and fill the kettle with fresh, cold water to your desired level, ensuring it is between the MIN (0.5L) and MAX (1.7L) markings. Do not overfill.
2. **Place on Base:** Securely close the lid and place the kettle back onto its power base.
3. **Start Boiling:** Press the On/Off switch down. The blue LED indicator lights will illuminate, indicating that the kettle is heating.
4. **Automatic Shut-off:** The kettle will automatically shut off once the water reaches a rolling boil, and the blue LED lights will turn off.



5. **Pour:** Carefully lift the kettle from the base and pour the hot water. The cool-touch handle and drip-free spout ensure safe and clean pouring.

## Using the Tea Infuser



## Easy Steeping

Make tea right in the kettle with the removable tea infuser

Image: The Chefman Electric Kettle with loose-leaf tea steeping in the removable infuser, demonstrating easy tea preparation.

1. **Prepare Infuser:** Remove the tea infuser from the kettle. Fill the infuser with your desired amount of loose-leaf tea. Do not overfill, as tea leaves expand.
2. **Place Infuser:** Place the filled tea infuser back into the kettle, ensuring it is properly seated.
3. **Fill and Boil:** Fill the kettle with fresh, cold water to the desired level (between MIN and MAX). Place the kettle on its power base and press the On/Off switch to boil the water.
4. **Steep Tea:** Once the water boils and the kettle shuts off, allow the tea to steep for the recommended time according to your tea type.
5. **Remove Infuser:** Carefully remove the tea infuser using its handle to prevent over-steeping.
6. **Serve:** Pour and enjoy your freshly brewed tea.

## MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and appearance of your kettle.



## Simple to Clean

The removable lid makes cleaning your kettle easy

Image: The Chefman Electric Kettle with its removable lid lifted, demonstrating the ease of access for cleaning and filling.

- **Always Unplug:** Before cleaning, always unplug the kettle from the power outlet and allow it to cool completely.
- **Exterior Cleaning:** Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- **Interior Cleaning:** The removable lid and wide opening make the interior easy to access. You can wipe the inside with a soft cloth or sponge.
- **Tea Infuser Cleaning:** Remove the tea infuser and rinse it under running water. For thorough cleaning, you can use a small brush to remove any tea residue.
- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale:
  - a. Fill the kettle with 1 part white vinegar and 2 parts water.
  - b. Bring the mixture to a boil and let it stand for 30 minutes.
  - c. Empty the kettle and rinse thoroughly with fresh water several times.
  - d. For stubborn deposits, repeat the process or use a commercial descaling solution following its instructions.
- **Do Not Immerse:** Never immerse the kettle or its power base in water or any other liquid.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in; power outlet not working; kettle not properly seated on base; On/Off switch not pressed.	Ensure kettle is plugged in and outlet is functional. Place kettle firmly on base. Press On/Off switch down.
Kettle turns off before boiling.	Kettle has boiled dry (boil-dry protection activated); too little water.	Allow kettle to cool down, then refill with water above the MIN line.
Water has an unusual taste or odor.	New appliance odor; mineral deposits.	Perform initial cleaning (boil and discard water several times). Descale the kettle if mineral deposits are present.
Loud boiling noise.	Normal operation; mineral deposits.	Some noise is normal during boiling. If excessive, descale the kettle.
LED lights not working.	Kettle not heating; malfunction.	Ensure kettle is heating. If kettle heats but lights don't work, contact customer support.

## SPECIFICATIONS

9.25"



## Stylishly Designed

Looks great in every kitchen

Image: The Chefman Electric Kettle with its approximate dimensions (height, width, depth) indicated.

Feature	Detail
Brand	Chefman
Model Number	RJ11-17-GMRL-TI
Capacity	1.7 Liters
Power/Wattage	1500 Watts
Voltage	120V
Material	Borosilicate Glass
Color	Black
Auto Shut-off	Yes



Feature	Detail
Boil-Dry Protection	Yes
Special Features	Cordless, Drip-Less Spout, Illuminated Water Window, Rapid Boil, Removable Lid, Removable Tea Infuser, 360-degree Swivel Base, Cool-Touch Handle
Product Dimensions (approx.)	24.59 x 16.99 x 23.5 cm (L x W x H)
Item Weight (approx.)	962 g

## WARRANTY AND SUPPORT

 
 

Chefman provides a **1-year assurance** for this product. This warranty covers defects in materials and workmanship under normal use.




For warranty claims, technical support, or any questions regarding your Chefman Electric Kettle, please contact Chefman Customer Service. Refer to the official Chefman website or your product packaging for the most current contact information.

Please have your model number (RJ11-17-GMRL-TI) and proof of purchase ready when contacting support.

 
© 2024 Chefman. All rights reserved.
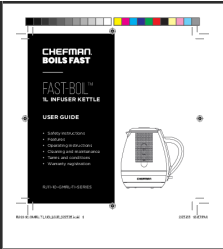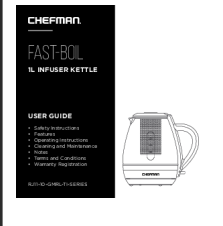
### Related Documents - RJ11-17-GMRL-TI

	<p><a href="#">Chefman Fast-Boil 1L Infuser Kettle User Guide</a></p> <p>User guide for the Chefman Fast-Boil 1L Infuser Kettle, covering safety instructions, features, operating instructions, cleaning and maintenance, terms and conditions, and warranty registration.</p>
	<p><a href="#">Chefman Fast-Boil 1L Infuser Kettle User Guide</a></p> <p>Comprehensive user guide for the Chefman Fast-Boil 1L Infuser Kettle. Learn about safety instructions, features, operating procedures, cleaning, maintenance, and warranty information for your Chefman kettle.</p>
	<p><a href="#">Chefman Electric Kettle+ User Guide and Operating Instructions</a></p> <p>Comprehensive guide for the Chefman Electric Kettle+ (RJ11-17-TCTI), covering features, operation, safety, cleaning, and warranty information.</p>

	<p><a href="#">Chefman RJ11-GN-P-BLACK Gooseneck Kettle User Guide</a></p> <p>Comprehensive user guide for the Chefman RJ11-GN-P-BLACK Gooseneck Kettle, covering safety instructions, features, operating procedures, cleaning, maintenance, and warranty information for optimal brewing of tea and coffee.</p>
	<p><a href="#">Chefman 1.8-Liter Rapid-Boil Kettle Quick Start Guide</a></p> <p>Get started quickly with your Chefman 1.8-Liter Rapid-Boil Kettle. This guide covers features, first use, cleaning, operation, and tea brewing tips for model RJ11-17-SS.</p>
	<p><a href="#">Chefman Power Infusion Plus 1.8L Kettle User Guide</a></p> <p>User guide for the Chefman Power Infusion Plus 1.8L Kettle, covering safety instructions, features, operating instructions, cleaning and maintenance, terms and conditions, and warranty registration.</p>

Documents - Chefman – RJ11-17-GMRL-TI

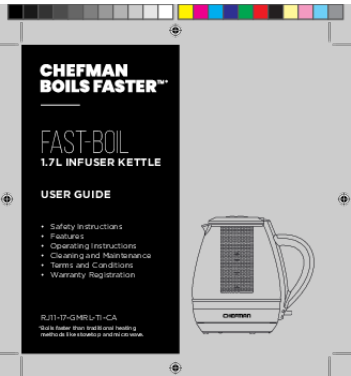 


[\[pdf\]](#) Instructions Guide Warranty

RJ11 17 GMRL TI CA UG FINAL LIVE 051123 indd US Document Library Electric Kettles Chefman FR v 1715725430 cdn shopify s files 1 0576 5755 7158 |||

FAST-BOIL 1.7L INFUSER KETTLE USER GUIDE Safety Instructions Features Operating Instructions Cleaning and Maintenance MAX 1.7L 1.5L Terms and Conditions Warranty Registration 1.0L 0.5L MIN **RJ11-17-GMRL-TI-CA** \*Boils faster than traditional heating methods like stovetop and microwave....

lang:en **score:42** filesize: 839.99 K page\_count: 40 document date: 2023-05-11

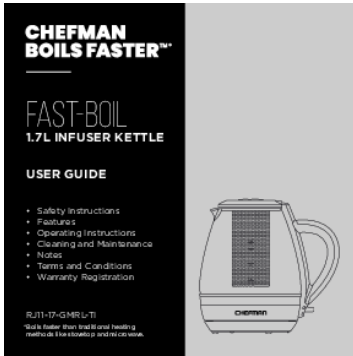 


[\[pdf\]](#) Instructions Guide Warranty

User Guide Chefman Electric Kettle with Tea Infuser 1 7L 1500W Removable Lid for Easy Cleaning Boil Dry Protection Stainless Steel Filter BPA Free Auto Shut Off Hot Water Boiler Glass Home Kitchen 81USKgo CHL m media amazon images I |||

FAST-BOIL 1.7L INFUSER KETTLE USER GUIDE Safety Instructions Features Operating Instructions Cleaning and Maintenance MAX 1.7L 1.5L Notes Terms and Conditions 1.0L Warranty Registration 0.5L MIN **RJ11-17-GMRL-TI** \*Boils faster than traditional heating methods like stovetop and micr...

lang:en **score:36** filesize: 343.85 K page\_count: 24 document date: 2023-03-24

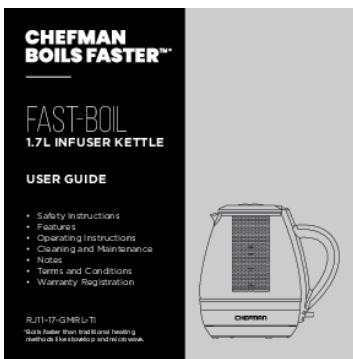

[\[pdf\]](#) Instructions Guide Warranty

FAST BOILm media amazon81USKgo CHLm amazon images I 81USKgo CHL |||

FAST-BOIL 1.7L INFUSER KETTLE USER GUIDE Safety Instructions Features Operating Instructions Cleaning and Maintenance MAX 1.7L 1.5L Notes Terms and Conditions 1.0L Warranty Registration 0.5L MIN **RJ11-17-GMRL-TI** \*Boils faster than traditional heating methods like stovetop and micr...

lang:en **score:22** filesize: 343.86 K page\_count: 24 document date: 2023-03-24