

## Chefman RJ38-SQPF-3TDB-2W

# CHEFMAN 6 Quart Dual Basket Air Fryer Oven

Model: RJ38-SQPF-3TDB-2W | Brand: Chefman

### IMPORTANT SAFETY INFORMATION

Always read all instructions before use. Keep this manual for future reference. Ensure the appliance is placed on a stable, heat-resistant surface. Do not immerse the cord, plug, or appliance in water or other liquid. Close supervision is necessary when any appliance is used by or near children. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries. Do not use outdoors. Do not let cord hang over edge of table or counter, or touch hot surfaces. Do not place on or near a hot gas or electric burner, or in a heated oven. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet. Do not use appliance for other than intended use.

### PRODUCT OVERVIEW

The CHEFMAN 6 Quart Dual Basket Air Fryer Oven is designed for efficient and healthier cooking. It features two independent 3-quart nonstick baskets, allowing you to cook different foods simultaneously. The intuitive digital touch controls and easy-view windows provide convenience and precision.



Figure 1: Front view of the CHEFMAN 6 Quart Dual Basket Air Fryer Oven, showcasing its dual baskets and digital display.

### Key Features:

- **Dual Air Fryer with 2 Baskets:** Cook food faster and more conveniently with two powerful air fryers in one, offering a combined 6-quart capacity.
- **Versatile Cooking Options:** Dual zone technology allows for simultaneous cooking of different dishes or easy switching between baskets.
- **Sync Finish:** Conveniently allows individual 3-quart baskets to finish cooking at the same time.
- **Wide Temperature Range:** Digital temperature settings from 200-450°F for precise cooking.
- **Healthy Food Prep:** Requires little to no oil for healthier frying results.
- **Large Viewing Windows:** Monitor cooking progress without removing baskets.
- **Easy Cleanup:** Removable, non-stick coated baskets are dishwasher safe.
- **Touchscreen Presets:** Pre-programmed settings for chicken, vegetables, pizza, French fries, frozen foods, and more.
- **Compact Design:** Sleek countertop design fits seamlessly in various kitchen spaces.

### SETUP

1. **Unpack:** Carefully remove all packaging materials and any promotional labels or stickers from your air fryer.

2. **Clean Baskets:** Wash the removable non-stick coated baskets and crisper trays with warm, soapy water. Rinse and dry thoroughly.
3. **Wipe Unit:** Wipe the exterior of the air fryer with a clean, damp cloth.
4. **Placement:** Place the air fryer on a stable, level, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure at least 3 inches of clearance around the unit.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The digital display will illuminate.

## OPERATING INSTRUCTIONS

### General Operation:

1. **Power On:** Press the power button to turn on the unit.
2. **Select Basket:** Choose Basket 1 or Basket 2 on the digital display to set its cooking parameters.
3. **Set Temperature:** Use the "TIME-TEMP" button and +/- controls to adjust the cooking temperature (200-450°F).
4. **Set Time:** Use the "TIME-TEMP" button and +/- controls to adjust the cooking time.
5. **Start Cooking:** Press the "START/STOP" button to begin the cooking cycle.
6. **Pause/Resume:** Press "START/STOP" during cooking to pause. Press again to resume.
7. **Auto Shutoff:** The air fryer will automatically shut off when the timer reaches zero.

### Dual Basket Functionality:

This air fryer allows for independent cooking in each basket or synchronized cooking for convenience.



# Sync Technology

Automatically programs cooking so that different foods finish at the same time



Figure 2: Illustration of Sync Technology, showing how different foods can finish cooking simultaneously.

- **Sync Baskets:** To cook the same food in both baskets with identical time and temperature settings, press "SYNC BASKETS". This ensures both baskets start and finish together.
- **Sync Finish:** To cook different foods with varying times and temperatures but have them finish simultaneously, set the desired time and temperature for each basket. Then, press "SYNC FINISH". The air fryer will automatically adjust the start times for each basket so they complete cooking at the same moment.

## Special Functions:

- **Hi-Fry:** Press the "Hi-Fry" button to activate a 450°F heat setting for the final two minutes of cooking, providing an extra crispy finish.
- **Easy View Windows:** The transparent windows on each basket allow you to visually monitor your food's progress without interrupting the cooking cycle. The interior light will turn on and off periodically during cooking.
- **Shake Reminder:** For certain foods, the air fryer may display a "SHAKE" reminder halfway through the cooking cycle to ensure even crisping. Simply remove the basket, shake the contents, and reinsert.
- **+2 Min Button:** Quickly add 2 minutes to the current cooking time.
- **Mute:** Silence the unit's beeping sounds.

## Cooking Guide

Use these recommended times and temperatures as a guideline for cooking some of your favorite foods. Adjust as needed based on food quantity and desired crispness.

Food Type	Temperature	Time (Minutes)
Chicken	400°F	18-22 min
French Fries	400°F	20-22 min
Vegetables	375°F	12-15 min
Fish	400°F	10-13 min
Steak	400°F	15-20 min
Bacon	400°F	8-10 min
Wings (Frozen)	400°F	8-10 min

Note: These are general guidelines. Actual cooking times may vary.

## Cleaning and Maintenance

Proper cleaning ensures the longevity and optimal performance of your air fryer.

- **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- **Dishwasher Safe Baskets:** The removable non-stick coated baskets and crisper trays are dishwasher safe for easy cleaning. For best results and to prolong the non-stick coating, hand wash them with warm, soapy water using a non-abrasive sponge.
- **Exterior Cleaning:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- **Interior Cleaning:** Wipe the interior of the air fryer with a damp cloth. If necessary, use a mild detergent. Ensure no water enters the electrical components.
- **Storage:** Store the cleaned and dried air fryer in a cool, dry place.



# Easy to Clean

Baskets are top-rack dishwasher safe



Figure 3: The removable baskets are designed for easy cleaning, including being top-rack dishwasher safe.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; unit malfunction.	Ensure plug is securely in a working outlet. Check circuit breaker. Contact customer support if issue persists.
Food is not cooked evenly.	Overcrowding baskets; not shaking/flipping food.	Do not overfill baskets. Shake or flip food halfway through cooking.
Food is not crispy.	Too much moisture; insufficient cooking time/temperature.	Pat food dry before air frying. Increase cooking time or temperature. Use Hi-Fry function.
White smoke coming from unit.	Grease residue from previous use; high fat content food.	Clean baskets thoroughly after each use. For high-fat foods, drain excess fat during cooking.

## SPECIFICATIONS

- **Model Name:** Turbo Fry® Touch
- **Model Number:** RJ38-SQPF-3TDB-2W
- **Capacity:** 6 Quarts (2 x 3-Quart Baskets)
- **Product Dimensions:** 13.38"D x 11.81"W x 10.63"H
- **Item Weight:** 12.02 Pounds
- **Color:** Black, Gray
- **Material:** Plastic, Metal (Inner: Plastic with Non-Stick Coating)
- **Wattage:** 1700 Watts
- **Voltage:** 120 Volts
- **Control Method:** Touch
- **Max Temperature Setting:** 450 Degrees Fahrenheit
- **Special Features:** Dual Zone Features, +2Min Button, Hi-Fry, Mute, Automatic Shut-Off, Easy View Windows
- **Dishwasher Safe:** Yes (Baskets)
- **UPC:** 810087845025









Figure 4: Dimensions of the CHEFMAN 6 Quart Dual Basket Air Fryer Oven.

## WARRANTY AND SUPPORT

This CHEFMAN appliance is backed by a 1-year assurance, ensuring long-lasting durability and peace of mind. For detailed warranty information, troubleshooting, or to access the full user guide, please refer to the official Chefman website or the provided PDF user guide.

**User Guide (PDF):** [Download Here](#)

### Related Documents - RJ38-SQPF-3TDB-2W

	<p><a href="#">Chefman Fry Guy 1.6-Quart Deep Fryer User Guide RJ07-15-SS</a></p> <p>Comprehensive user guide for the Chefman Fry Guy 1.6-Quart Deep Fryer (Model RJ07-15-SS), covering safety instructions, operating procedures, cleaning, maintenance, and warranty information.</p>
	<p><a href="#">Chefman TurboFry Touch Dual Air Fryer User Guide - Model RJ38-SQPF-45TDB</a></p> <p>Comprehensive user guide for the Chefman TurboFry Touch Dual Air Fryer (Model RJ38-SQPF-45TDB). Includes safety instructions, operating procedures, cooking charts, tips, troubleshooting, and warranty information.</p>
	<p><a href="#">Chefman TurboFry Touch Air Fryer with Basket Divider User Guide</a></p> <p>Comprehensive user guide for the Chefman TurboFry Touch Air Fryer, model RJ38-SQSS-8T-D. Includes safety instructions, operating procedures, cooking charts, troubleshooting tips, cleaning and maintenance, and warranty information.</p>
	<p><a href="#">Chefman TurboFry Touch Easy-View Air Fryer User Guide</a></p> <p>Comprehensive user guide for the Chefman TurboFry Touch Easy-View Air Fryer (Model RJ38-SQPF-5TW-CA), covering safety instructions, features, operating procedures, cooking tips, troubleshooting, and warranty information.</p>
	<p><a href="#">Chefman Jumbo Size Deep Fryer User Guide - Safety, Operation &amp; Tips</a></p> <p>Explore the Chefman Jumbo Size Deep Fryer User Guide for essential safety instructions, operating procedures, deep frying tips, cooking times, cleaning advice, and warranty details. Model RJ07-45-SS-MX-V2.</p>
	<p><a href="#">Chefman TurboFry Touch Easy-View Air Fryer User Guide</a></p> <p>Comprehensive user guide for the Chefman TurboFry Touch Easy-View Air Fryer (RJ38-SQPF-5TW), covering safety instructions, features, operating procedures, cooking tips, troubleshooting, and warranty information.</p>