

Chefman RJ11-12-TI

CHEFMAN 1.2L Electric Kettle with Tea Infuser (Model RJ11-12-TI) Instruction Manual

Your guide to safe and efficient use of your new Chefman Electric Kettle.

1. INTRODUCTION

Thank you for purchasing the CHEFMAN 1.2L Electric Kettle with Tea Infuser. This appliance is designed for rapid boiling of water and convenient tea steeping. Please read this instruction manual thoroughly before first use to ensure safe operation and optimal performance. Keep this manual for future reference.



Image 1.1: CHEFMAN 1.2L Electric Kettle with Tea Infuser.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- **Automatic Shut-Off:** The kettle is equipped with an automatic shut-off feature that activates when water boils or the kettle is empty, preventing boil-dry situations.



Safety Features

Automatic shutoff and boil-dry protection for added peace of mind

Image 2.1: Kettle base with LED lights, illustrating safety features.

3. PRODUCT COMPONENTS

Your CHEFMAN Electric Kettle includes the following parts:

- Kettle (Glass Carafe with Stainless Steel Accents)
- Power Base (360-degree swivel)
- Removable Lid
- Removable Tea Infuser
- User Guide (this document)



Rapid-Heat
Technology



LED Indicator
Lights



Easy-Fill
Lift-Out Lid



CHEFMAN® Fast-Boil 1.2L Infuser Kettle

Image 3.1: Key features of the CHEFMAN Electric Kettle.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and labels from the kettle and its components.
2. **Initial Cleaning:** Before first use, fill the kettle with water to the MAX fill line. Bring the water to a boil, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, heat-resistant surface. Ensure the power cord is not dangling or in contact with hot surfaces.
4. **Power Connection:** Plug the power base into a standard 120V AC electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Boiling Water

1. **Fill the Kettle:** Remove the lid and fill the kettle with fresh, cold water. Do not fill below the MIN line (0.5L) or above the MAX line (1.2L). The removable lid allows for easy filling.
2. **Secure the Lid:** Place the lid back onto the kettle securely.
3. **Place on Base:** Position the kettle onto the power base. The 360-degree swivel base allows

for easy placement from any angle.

4. **Start Boiling:** Flip the ON/OFF switch located on the handle downwards. The blue LED indicator lights will illuminate, indicating that the water is heating.
5. **Automatic Shut-Off:** Once the water reaches a rolling boil, the kettle will automatically shut off, and the LED lights will extinguish.
6. **Pouring:** Carefully lift the cordless kettle from its base and pour the hot water. The easy-grip handle ensures safe handling.



LED Indicator Lights

Lights illuminate when water is heating and has come up to temperature

Image 5.1: LED indicator lights showing operation.

5.2 Using the Tea Infuser

The removable tea infuser allows you to steep loose-leaf tea directly in the kettle.

1. **Insert Infuser:** Remove the lid and attach the tea infuser to the underside of the lid.
2. **Add Tea:** Place your desired amount of loose-leaf tea into the infuser basket.
3. **Fill and Boil:** Fill the kettle with water to the appropriate level, ensuring the infuser is submerged. Secure the lid with the infuser attached. Follow the boiling instructions in Section 5.1.
4. **Steeping:** Once the water boils and the kettle shuts off, allow the tea to steep for your preferred duration.
5. **Remove Infuser:** Carefully remove the lid with the infuser attached to prevent over-steeping.



Easy Steeping

Make tea right in the kettle with the removable tea infuser

Image 5.2: Kettle demonstrating easy steeping with the infuser.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your kettle.

1. **Unplug and Cool:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
3. **Interior Cleaning (Kettle):** The removable lid makes it easy to access the interior. Hand wash the glass carafe with warm, soapy water and a soft sponge. Rinse thoroughly.
4. **Tea Infuser Cleaning:** Remove the tea infuser from the lid and rinse it under running water. Use a small brush if necessary to remove tea leaves.
5. **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale:
 - Fill the kettle with a mixture of 1 part white vinegar and 2 parts water.
 - Bring the mixture to a boil and let it stand for 20-30 minutes.
 - Discard the mixture and rinse the kettle thoroughly with fresh water several times.
 - For stubborn deposits, repeat the process or use a commercial descaling solution following its instructions.

6. **Storage:** Ensure the kettle is clean and dry before storing. Wrap the cord around the base for tidy storage.



Simple to Clean

The removable lid makes cleaning your kettle easy

Image 6.1: Removable lid for simple cleaning.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	Kettle not properly seated on base. Power cord not plugged in. No power at outlet. Kettle is empty (boil-dry protection activated).	Ensure kettle is correctly placed on the power base. Check if the power cord is securely plugged into a working outlet. Test the outlet with another appliance. Fill the kettle with water.
Kettle shuts off before boiling.	Excessive limescale buildup. Kettle is empty or has insufficient water.	Descale the kettle as described in Section 6. Ensure water level is between MIN and MAX lines.

Problem	Possible Cause	Solution
Water has an unusual taste.	First-time use residues. Limescale buildup.	Perform initial cleaning steps (boil and discard water several times). Descale the kettle.

8. SPECIFICATIONS

Feature	Detail
Brand	Chefman
Model Name	Rapid-Boil (RJ11-12-TI)
Capacity	1.2 Liters
Power	1500W / 120V
Material	Glass, Heat-Resistant Stainless Steel
Special Features	Anti Scale Mesh Filter, Automatic Shut-Off, Boil-Dry Protection, Drip-Less Spout, Heat Resistant Handle, Removable Tea Infuser, LED Indicator Lights, Cordless Design, 360-Degree Swivel Base
Product Dimensions	8.66"L x 8.39"W x 6.3"H
Item Weight	2.23 Pounds
UPC	810087847180

6.69"



Stylishly Designed

Looks great in every kitchen

Image 8.1: Kettle dimensions for reference.

9. WARRANTY AND SUPPORT

This CHEFMAN appliance is backed by a 1-year assurance provided by Chefman. For detailed warranty information, product registration, or support inquiries, please visit the official Chefman website or contact their customer service.


Online Support: www.chefman.com/support

Please have your model number (RJ11-12-TI) and proof of purchase available when contacting support.

© 2025 Chefman. All rights reserved. Information in this manual is subject to change without notice.

	<p>Chefman Fast-Boil 1L Infuser Kettle User Guide</p> <p>User guide for the Chefman Fast-Boil 1L Infuser Kettle, covering safety instructions, features, operating instructions, cleaning and maintenance, terms and conditions, and warranty registration.</p>
	<p>Chefman Fast-Boil 1L Infuser Kettle User Guide</p> <p>Comprehensive user guide for the Chefman Fast-Boil 1L Infuser Kettle. Learn about safety instructions, features, operating procedures, cleaning, maintenance, and warranty information for your Chefman kettle.</p>
	<p>Chefman Electric Kettle+ User Guide and Operating Instructions</p> <p>Comprehensive guide for the Chefman Electric Kettle+ (RJ11-17-TCTI), covering features, operation, safety, cleaning, and warranty information.</p>
	<p>Chefman RJ11-GN-P-BLACK Gooseneck Kettle User Guide</p> <p>Comprehensive user guide for the Chefman RJ11-GN-P-BLACK Gooseneck Kettle, covering safety instructions, features, operating procedures, cleaning, maintenance, and warranty information for optimal brewing of tea and coffee.</p>
	<p>Chefman Power Infusion Plus 1.8L Kettle User Guide</p> <p>User guide for the Chefman Power Infusion Plus 1.8L Kettle, covering safety instructions, features, operating instructions, cleaning and maintenance, terms and conditions, and warranty registration.</p>
	<p>Chefman 1.8-Liter Rapid-Boil Kettle Quick Start Guide</p> <p>Get started quickly with your Chefman 1.8-Liter Rapid-Boil Kettle. This guide covers features, first use, cleaning, operation, and tea brewing tips for model RJ11-17-SS.</p>

Documents - Chefman – RJ11-12-TI

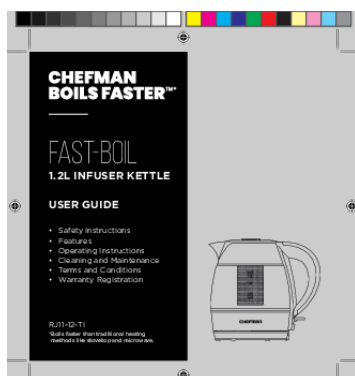


[\[pdf\]](#) User Manual Instructions Guide Warranty

RJ11 12 TI UG FINAL LIVE 080823 indd FAST BOIL 8 nov 2023 — For your safety and continued enjoyment of this product always read the instruction manual In addition to tea electric kettle is perfect for all user 6d9baf76 4ea2 4a69 bbbcb ba625556527a mkt jopenney prod images |||

FAST-BOIL 1.2L INFUSER KETTLE USER GUIDE Safety Instructions Features Operating Instructions Cleaning and Maintenance Terms and Conditions Warranty Registration **RJ11-12-TI** *Boils faster than traditional heating methods like stovetop and microwave. COOKING FORWARDTM Welcome Whether this is y...

lang:en score:39 filesize: 747.1 K page_count: 20 document date: 2023-08-08

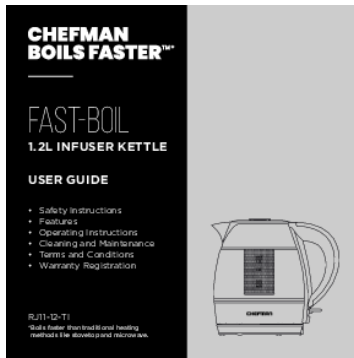

[\[pdf\]](#) Instructions Guide Warranty

User Guide CHEFMAN Electric Kettle 1.2L 1500W Hot Water Tea Pot with Infuser BPA Free Auto Shut Off Boil Dry Protection Removable Lid LED Light Cordless Glass Stainless Steel Home Kitchen 81kWWkV7NIl m media amazon images I |||


FAST-BOIL 1.2L INFUSER KETTLE USER GUIDE Safety Instructions Features Operating Instructions Cleaning and Maintenance Terms and Conditions Warranty Registration **RJ11-12-TI** *Boils faster than traditional heating methods like stovetop and microwave. COOKING FORWARDTM Welcome Whether this is y...
lang:en score:30 filesize: 335.8 K page_count: 20 document date: 2023-08-08



[\[pdf\]](#) Instructions Guide Warranty

RJ11 12 TI UG FINAL LIVE 080823 indd US Document Library Electric Kettles Chefman v 1715724274 cdn shopify s files 1 0576 5755 7158 |||

FAST-BOIL 1.2L INFUSER KETTLE USER GUIDE Safety Instructions Features Operating Instructions Cleaning and Maintenance Terms and Conditions Warranty Registration **RJ11-12-TI** *Boils faster than traditional heating methods like stovetop and microwave. COOKING FORWARDTM Welcome Whether this is y...
lang:en score:30 filesize: 744.68 K page_count: 20 document date: 2023-08-08

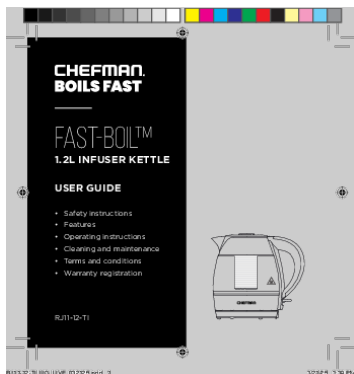

[\[pdf\]](#) Instructions Guide Warranty

RJ11 12 TI UG LIVE 032125 indd US Document Library Electric Kettles ChefmanRJ11 OTP 032125cdn shopify s files 1 0576 5755 7158 v 1742839232 |||

FAST-BOILTM 1.2L INFUSER KETTLE USER GUIDE Safety instructions Features Operating instructions Cleaning and maintenance Terms and conditions Warranty registration COVER DRAWING - RJ11 12 kettle **RJ11-12-TI RJ11-12-TI**_UG_LIVE_032125.indd 1 3/21/25 3:39PM COOKING FORWARDTM Welcome Whether...
lang:en score:25 filesize: 650.22 K page_count: 20 document date: 2025-03-21