

Elevon ELCG-PW2000

Elevon Electric High Pressure Washer ELCG-PW2000 User Manual

IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings and instructions before operating your Elevon Electric High Pressure Washer. Failure to follow these instructions may result in serious injury or property damage.

- Always wear appropriate eye protection (safety glasses) when operating the pressure washer.
- Never direct the spray gun at people, pets, or electrical devices.
- Ensure all electrical connections are dry and properly grounded. Do not operate with damaged cords.
- Keep children and bystanders away from the operating area.
- Do not operate the pressure washer if you are fatigued or under the influence of alcohol or drugs.
- Always turn off the power and water supply, and release residual pressure before performing any maintenance or changing accessories.



Rear view of the pressure washer unit, highlighting the safety warning label. Always observe safety precautions during operation.



A close-up of the safety warning label located on the back of the pressure washer, indicating important precautions to prevent injury.

PRODUCT OVERVIEW AND PACKAGE CONTENTS

This section details the components included with your Elevon Electric High Pressure Washer ELCG-PW2000. Please ensure all parts are present before assembly.

Included Accessories

- Elevon Electric High Pressure Washer Main Unit
- G1 Spray Gun
- Spray Lance
- 4 Quick-Connect Spray Nozzles (0° Red, 15° Yellow, 25° Green, 40° White)
- Black Soap Nozzle (for detergent application)
- Turbo Nozzle
- Bubble Watering Can (Foam Cannon)
- Chenille Gloves
- Long Brush
- Disc Brush
- Nozzle Cleaner Tool
- 6-meter High Pressure Pipe
- Garden Hose Adapter



An illustration showing the various accessories included with the Elevon Electric High Pressure Washer, such as the spray gun, nozzles, brushes, and foam cannon.

12

KINDS OF SUPER ACCESSORIES

CHENILLE GLOVES



LONG BRUSH AND DISC BRUSH



BUBBLE WATERING CAN



G1 SPRAY GUN



NOZZLE CLEANER



SPRAY LANCE



4 SPRAY NOZZLES



The Elevation Electric High Pressure Washer main unit with its integrated hose reel and handle.


SETUP

Connecting the Water Supply

Ensure the pressure washer is on a stable, level surface before connecting the water supply.

1. Connect the garden hose adapter to the water inlet on the pressure washer.
2. Attach your standard garden hose to the adapter. Ensure a tight, leak-free connection.
3. Ensure the water source is clean and free of debris to prevent pump damage.
4. The unit can connect directly to a water tap or draw water from a bucket (ensure the bucket is elevated for gravity feed).

1 WATER TAP

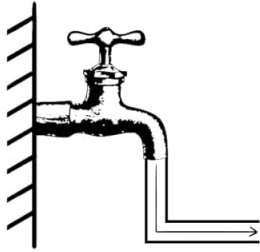

2 WATER TAP

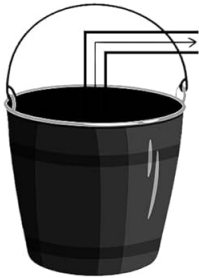


Diagram illustrating two methods for connecting the water supply: directly from a water tap or drawing water from a bucket.

Assembling the Spray Gun and Lance

1. Connect the high-pressure hose to the pressure washer's high-pressure outlet.
2. Attach the other end of the high-pressure hose to the G1 spray gun.
3. Connect the spray lance to the G1 spray gun, ensuring it clicks securely into place.



A close-up image demonstrating how to connect the spray lance to the spray gun, ensuring a secure fit.

Starting the Pressure Washer

1. Turn on the water supply completely.
2. Squeeze the trigger on the spray gun to purge air from the system until a steady stream of water emerges. This prevents air pockets from damaging the pump.
3. Plug the power cord into a grounded electrical outlet.
4. Turn the pressure washer's power switch to the "ON" position. The motor will start.

Nozzle Selection and Usage

The pressure washer includes various quick-connect nozzles, each designed for specific cleaning tasks and intensities. Always select the appropriate nozzle to avoid damaging surfaces.

- **0° Red Nozzle:** Produces a concentrated, high-impact stream. Use for extremely tough, localized stains on durable surfaces like concrete. Exercise extreme caution.
- **15° Yellow Nozzle:** Creates a narrow, powerful spray. Ideal for intense cleaning of hard surfaces such as concrete, brick, or metal.
- **25° Green Nozzle:** Provides a medium-fan spray. Suitable for general cleaning of wood, fences, lawn equipment, and siding.
- **40° White Nozzle:** Delivers a wide, gentle spray. Best for delicate surfaces like vehicles, boats, patio furniture, and windows.
- **Black Soap Nozzle:** Used for applying detergent or cleaning solutions at low pressure.

FIVE STYLES OF NOZZLE



An illustration demonstrating the spray patterns and recommended uses for the five different nozzle types included with the pressure washer.

Cleaning Techniques

Always start with the widest spray pattern (40° white nozzle) and a safe distance (approximately 2 feet) from the surface. Gradually move closer and adjust the nozzle if more pressure is needed. Test on an inconspicuous area first.



A person demonstrating the use of the pressure washer to clean a wooden deck, showing proper technique and distance.



The pressure washer being used to clean car wheels, illustrating its application for automotive detailing.

MAINTENANCE

After Each Use

1. Turn off the pressure washer and disconnect the power cord from the outlet.
2. Turn off the water supply completely.
3. Squeeze the spray gun trigger to release any remaining pressure in the system.

4. Disconnect the garden hose and the high-pressure hose.
5. Drain all water from the pump, hoses, and spray gun to prevent freezing damage, especially in cold climates.
6. Clean any debris from the nozzles using the provided nozzle cleaner tool.

Storage

Store the pressure washer in a dry, frost-free environment. Coil hoses neatly and store all accessories in their designated places on the unit or in a storage container to prevent loss or damage.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
No pressure or low pressure	Insufficient water supply, air in pump, clogged nozzle, incorrect nozzle selected	Check water connection and supply, purge air from system, clean nozzle, select appropriate nozzle
Motor not starting	Power supply issue, thermal overload, power switch off	Check power connection and outlet, allow motor to cool if overheated, ensure switch is ON
Water leaks	Loose connections, damaged O-rings or seals, cracked hose	Tighten all connections, inspect and replace damaged O-rings/seals, replace damaged hoses
Pulsating pressure	Air in pump, restricted water flow, worn valves	Purge air from system, check water filter for clogs, ensure adequate water supply

For issues not listed or if troubleshooting steps do not resolve the problem, please contact Elevon customer support.

SPECIFICATIONS

Key technical specifications for the Elevon Electric High Pressure Washer ELCG-PW2000.

Feature	Detail
Model	ELCG-PW2000
Power	1800 Watt
Maximum Pressure	2030 PSI
Maximum Flow Rate	1.8 GPM (Gallons Per Minute)
Product Dimensions (L x W x H)	15" x 13" x 30"
Item Weight	23.4 pounds (10.61 Kilograms)
Power Source	Electric
Color	Green

Feature	Detail
UPC	810127322424

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card or documentation included with your Elevon Electric High Pressure Washer purchase. You can also visit the official Elevon website for the most up-to-date warranty terms and conditions.

If you require technical assistance, replacement parts, or have any questions regarding the operation or maintenance of your pressure washer, please contact Elevon customer service through the contact information provided in your product packaging or on the official brand website.