



Manuals.plus /

- › Horizon Group USA /
- › Horizon Group USA Bluey Magnetic Wooden Playhouse Instruction Manual

Horizon Group USA 222732

Bluey Magnetic Wooden Playhouse Instruction Manual

Brand: Horizon Group USA | **Model:** 222732

1. PRODUCT OVERVIEW

The Horizon Group USA Bluey Magnetic Wooden Playhouse is an 18-piece activity set designed for imaginative play. It includes magnetic wooden Bluey and Bingo dolls, 12 magnetic accessories, a sheet of repositionable stickers, and a reusable playhouse featuring two whimsical double-sided play scenes. This playset encourages storytelling, fine motor skill development, and creative thinking for children aged 3 and up.



Figure 1.1: The Bluey Magnetic Wooden Playhouse set, showcasing the magnetic dolls and accessories within its wooden frame.

2. WHAT'S INCLUDED

Your Bluey Magnetic Wooden Playhouse set contains the following components:

- **2 Magnetic Wooden Dolls:** Bluey and Bingo characters.
- **1 Wooden Playhouse:** Measures approximately 11 inches x 2 inches x 11 inches.
- **12 Magnetic Accessories:** Various items for dressing up and scene creation.
- **1 Repositionable Sticker Sheet:** Additional decorative elements.
- **2 Double-Sided Background Inserts:** Each measuring 11 inches x 11 inches, providing four unique play scenes.
- Easy-to-Follow Instructions.



Figure 2.1: Contents of the Bluey Magnetic Wooden Playhouse set, showing all included pieces.

3. SETUP INSTRUCTIONS

Follow these steps to set up your Bluey Magnetic Wooden Playhouse for play:

1. **Unpack Components:** Carefully remove all 18 pieces from the packaging.
2. **Prepare Playhouse:** The wooden playhouse serves as the main frame.
3. **Insert Background Scenes:** Choose one of the two double-sided background inserts and slide it into the designated slot within the wooden playhouse. Ensure the desired scene is facing forward.
4. **Place Dolls and Magnets:** Position the magnetic wooden Bluey and Bingo dolls onto the background scene. Begin attaching the magnetic accessories to the dolls or directly onto the magnetic surface of the playhouse scene to create your desired play scenario.
5. **Apply Stickers:** Use the repositionable stickers to add extra details and personalize your play scenes.



Figure 3.1: Setting up the playhouse with magnetic dolls and accessories.

4. OPERATING INSTRUCTIONS

The Bluey Magnetic Wooden Playhouse is designed for open-ended imaginative play. Here are some ways to interact with the set:

- **Character Customization:** Mix and match the 12 magnetic accessories (outfits, hats, items) onto the Bluey and Bingo wooden dolls to create different looks and roles for your characters.
- **Scene Creation:** Utilize the two double-sided background inserts to set up various play environments, such as a beach, backyard, or bedroom.
- **Storytelling:** Encourage children to verbalize what is happening in their play, narrating their own adventures and dialogues for Bluey and Bingo.
- **Repositionable Stickers:** Enhance scenes with the included repositionable stickers, adding small details like food, toys, or animals.
- **Portable Play:** The compact design allows for easy transport, making it suitable for play during travel or on the go.

5. MAINTENANCE

To ensure the longevity and cleanliness of your Bluey Magnetic Wooden Playhouse, follow these maintenance guidelines:

- **Cleaning:** Wipe down the wooden playhouse, wooden dolls, and magnetic accessories with a soft, slightly damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Drying:** Ensure all components are completely dry before storing to prevent warping or damage.
- **Storage:** Store all pieces neatly within the wooden playhouse when not in use to prevent loss and keep them protected from dust and damage. Keep the set in a cool, dry place away from direct sunlight.
- **Handle with Care:** While durable, avoid excessive force or bending of the magnetic pieces to maintain their integrity.

6. TROUBLESHOOTING

If you encounter any issues with your Bluey Magnetic Wooden Playhouse, consider the following common solutions:

- **Magnets Not Sticking Well:** Ensure the surfaces of the magnetic dolls and accessories, as well as the playhouse background, are clean and free of dust or debris. The magnets are designed for light attachment and may not hold under vigorous movement or if layered excessively.
- **Lost Pieces:** Due to the small size of some accessories, it is recommended to keep all pieces contained within the wooden playhouse when not in use. Regularly check for missing pieces after play sessions.
- **Damaged Components:** If any wooden or magnetic pieces become damaged, discontinue use to prevent potential hazards.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	11 x 2 x 11 inches
Item Weight	1.19 pounds
Model Number	222732
Manufacturer Recommended Age	3 years and up
Number of Pieces	18
Material	Wood, Magnetic materials, Paper

8. WARRANTY & SUPPORT

For any questions regarding the Horizon Group USA Bluey Magnetic Wooden Playhouse, including product inquiries, missing parts, or concerns, please contact Horizon Group USA customer support.

While specific warranty details are not provided in this manual, general product support can often be found through the manufacturer's official website or by contacting their customer service department directly. Please retain your proof of purchase for any warranty claims.

Contact Information: Refer to the product packaging or the official Horizon Group USA website for the most current customer support contact details.