

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [YOOREAL](#) /

› Yooreal Digital 9999-Day Countdown Timer, Model YR-HM202 Instruction Manual

YOOREAL YR-HM202

Yooreal Digital 9999-Day Countdown Timer (Model YR-HM202) Instruction Manual

Brand: YOOREAL | Model: YR-HM202

1. INTRODUCTION

The Yooreal Digital 9999-Day Countdown Timer is a versatile device designed to track significant events with precision. It features a large display, magnetic backing, and multiple functions including a clock, daily alarm, and long-term countdown capabilities. This manual provides detailed instructions for setting up and operating your countdown timer.

 
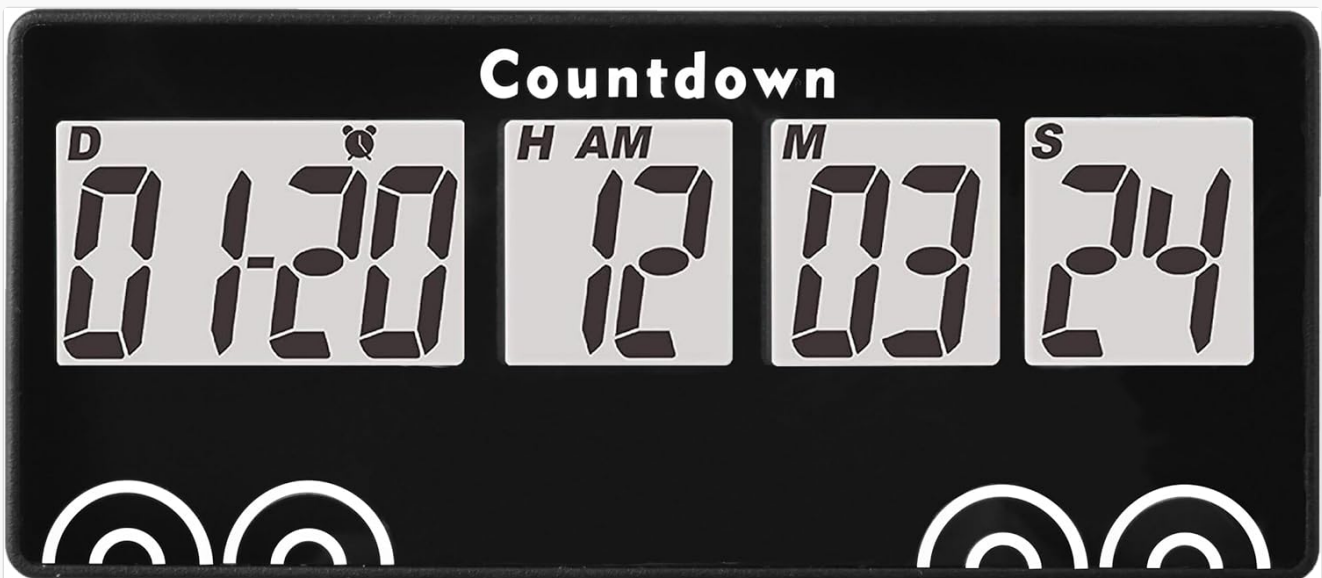 


Image 1: Yooreal Digital 9999-Day Countdown Timer

2. FEATURES

- **Extended Countdown Range:** Capable of counting down up to 9999 days, 23 hours, 59 minutes, and 59 seconds.
- **Integrated Clock Function:** Displays current time with switchable 12-hour and 24-hour formats.

- **Daily Alarm:** Set a recurring daily alarm to remind you of important events.
- **Magnetic Design:** Equipped with two strong inset magnets on the back for secure attachment to metal surfaces.
- **Adjustable Backlight:** Backlight display time can be set from 0 to 10 seconds. Setting to 0 disables the backlight.
- **Display On/Off Function:** The LCD display can be turned off while the countdown, clock, and alarm functions continue to operate in the background.
- **Button Sound Control:** Option to turn button press sounds on or off.
- **Battery Operated:** Uses 2 CR2032 batteries (included) for power.

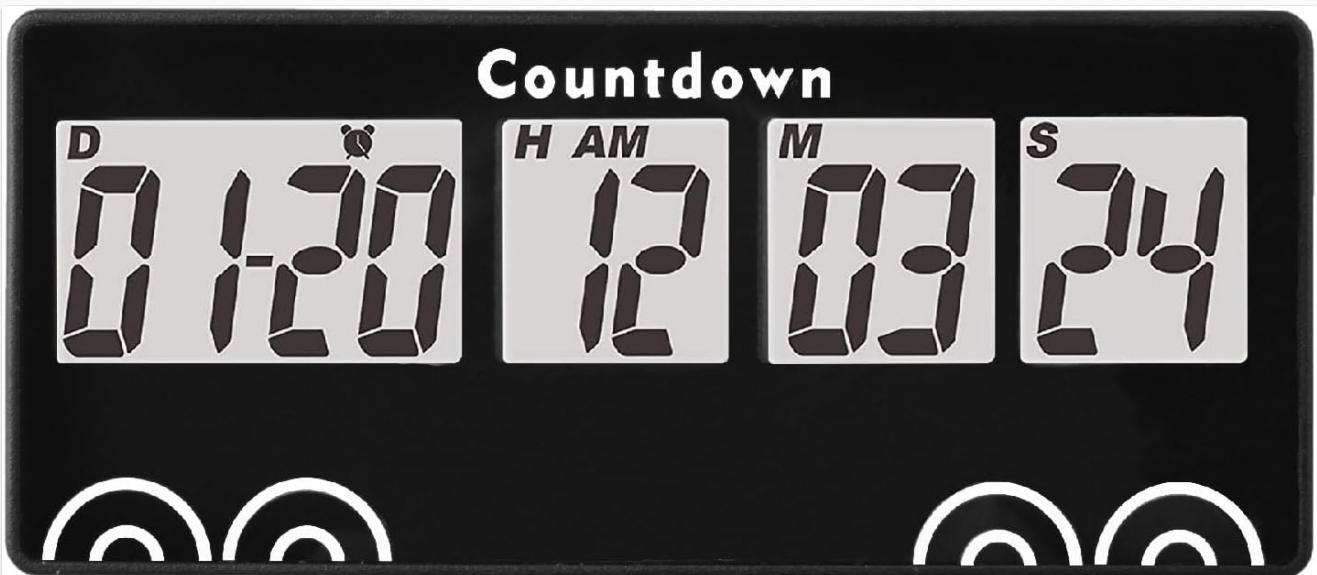

-  Count Up/Down Timer(9999D 23H 59M 59S)
-  Clock
-  Every Day Clock Alarm Time
-  Backlight Display
-  12/24 Hour Switch
-  Display Function Is On And Off
-  The Button Remind Sound On Or Off

Image 2: Key Features of the Countdown Timer

3. PACKAGE CONTENTS

Upon opening the package, you should find the following items:

- 1 x Yooreal Digital 9999-Day Countdown Timer
- 1 x Instruction Manual

Your browser does not support the video tag.

Video 1: Unboxing and Overview of the Yooreal Countdown Timer. This video demonstrates the package contents and basic physical features of the timer.

4. SETUP

4.1. Battery Installation

The countdown timer requires two CR2032 batteries (included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the device.
2. Slide the cover open in the direction indicated by the arrow.
3. Insert two CR2032 batteries, ensuring the positive (+) side faces upwards.
4. Close the battery compartment cover securely.

REPLACEABLE BATTERY

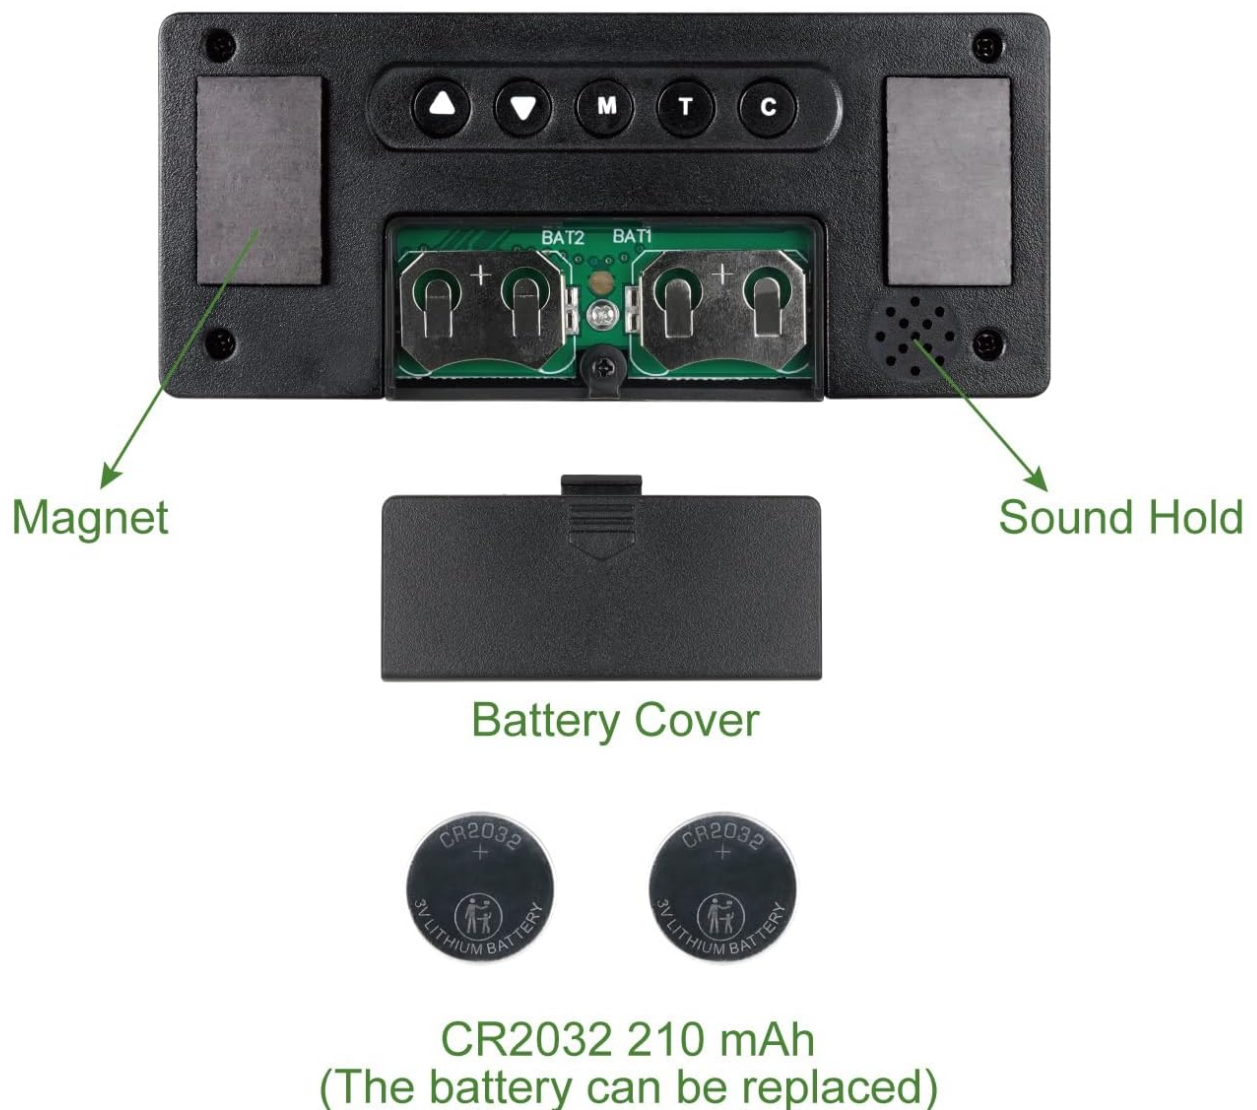 


Image 3: Battery Compartment and CR2032 Batteries

Refer to **Video 1** from 0:25 to 0:33 for a visual guide on battery installation.

5. OPERATING INSTRUCTIONS

5.1. Button Functions Overview

The device has five function buttons on the back:

- **Up Arrow (▲)**: Increases values during setting, switches 12/24 hour format in clock mode.
- **Down Arrow (▼)**: Decreases values during setting.
- **M (Mode)**: Enters/exits alarm setting mode, confirms alarm settings.
- **T (Timer)**: Enters/exits countdown setting mode, starts/pauses countdown, confirms countdown settings.
- **C (Clock)**: Enters/exits current time setting mode, confirms time settings.

5.2. Setting Current Date and Time

1. Press and hold the **C** button until the display flashes, indicating time setting mode.
2. Use the **Up (▲)** or **Down (▼)** buttons to adjust the flashing value (e.g., year, month, day, hour, minute, second).
3. Press the **C** button again to confirm the current value and move to the next setting field.
4. Repeat steps 2 and 3 until all time and date fields are set.
5. Once all fields are set, press **C** one last time to exit the setting mode.

Refer to **Video 1** from 0:34 to 0:55 for a visual guide on setting the current date and time.

5.3. Setting Countdown Target Date and Time

1. Press and hold the **T** button until the display flashes, indicating countdown target setting mode.
2. Use the **Up (▲)** or **Down (▼)** buttons to adjust the flashing value (e.g., target year, month, day, hour, minute, second).
3. Press the **T** button again to confirm the current value and move to the next setting field.
4. Repeat steps 2 and 3 until all target date and time fields are set.
5. Once all fields are set, press **T** one last time to exit the setting mode.

Refer to **Video 1** from 0:56 to 1:19 for a visual guide on setting the countdown target date and time.

5.4. Starting and Pausing the Countdown

After setting the target date and time:

- Press the **T** button briefly to start the countdown.
- Press the **T** button again briefly to pause the countdown.

Refer to **Video 1** from 1:20 to 1:28 for a visual guide on starting and pausing the countdown.

5.5. Switching 12/24 Hour Format

In standard clock display mode (not in setting mode):

- Press the **Up (▲)** button briefly to toggle between 12-hour (AM/PM) and 24-hour formats.

Refer to **Video 1** from 1:29 to 1:33 for a visual guide on switching the time format.

5.6. Setting Daily Alarm Reminder

1. Press and hold the **M** button until the alarm time flashes.
2. Use the **Up (▲)** or **Down (▼)** buttons to adjust the hour.

3. Press the **M** button again to confirm the hour and move to the minute setting.
4. Use the **Up (▲)** or **Down (▼)** buttons to adjust the minute.
5. Press the **M** button one last time to confirm the minute and exit alarm setting mode.



Image 4: Daily Alarm Reminder Function

Refer to **Video 1** from 1:34 to 1:50 for a visual guide on setting the daily alarm.

5.7. Backlight and Sound Control

The backlight display time can be adjusted from 0 to 10 seconds. If set to 0, the backlight function is turned off. The device also allows you to turn the button press sound on or off. Specific instructions for these settings are typically found within the device's menu system, accessible by cycling through modes or holding specific buttons as detailed in the full manual.

6. MAINTENANCE

6.1. Battery Replacement

When the display dims or functions become erratic, it is time to replace the batteries. Use two new CR2032 batteries

and follow the installation steps outlined in Section 4.1.

6.2. Cleaning

To clean the device, use a soft, dry cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the display or casing.

7. TROUBLESHOOTING

- **Display is off, but functions continue:** This is a feature. The LCD display can be turned off to save power while the countdown, clock, and alarm processes continue to run. Check your backlight settings (refer to Section 5.7).
- **Countdown not accurate or not starting:** Verify that both the current date/time and the target countdown date/time are set correctly (refer to Sections 5.2 and 5.3). Ensure the countdown is not paused.
- **Daily alarm not sounding:** Check if the daily alarm time is set correctly (refer to Section 5.6) and ensure the sound is not turned off (refer to Section 5.7).
- **Buttons unresponsive:** Replace the batteries with new CR2032 batteries. If the issue persists, contact customer support.

8. SPECIFICATIONS

Specification	Detail
Model Number	YR-HM202 (Manufacturer Part Number: RL-HM202)
Brand	YOOREAL
Color	Black
Material	Plastic
Product Dimensions (D x W x H)	4.29" x 1.85" x 0.51" (110mm x 48mm x 13.5mm)
Countdown Range	Up to 9999 Days, 23 Hours, 59 Minutes, 59 Seconds
Power Source	2 x CR2032 Batteries (Included)
Number of Settings	5 (referring to modes/functions)



Image 5: Product Dimensions

9. WARRANTY AND SUPPORT

YOOREAL provides a 2-year warranty for this product. During this period, if there are any quality problems with the product, YOOREAL offers free replacement service. For any issues or concerns, please contact the seller directly via the Amazon Platform. The YOOREAL Care Team is available for 7x24H professional online services to ensure a hassle-free replacement or return process.