

[Manuals.plus](#) /

› [PAWHITS](#) /

› PAWHITS Wireless Xbox 360 Controller WM86-P User Manual

PAWHITS WM86-P

PAWHITS Wireless Xbox 360 Controller WM86-P User Manual

Model: WM86-P

1. INTRODUCTION

This manual provides detailed instructions for the PAWHITS Wireless Xbox 360 Controller (Model WM86-P). Please read this manual carefully before use to ensure proper operation and to maximize your gaming experience. This controller is compatible with Microsoft Xbox 360 consoles and PCs running Windows 11, 10, 8, or 7.

 


Image 1.1: PAWHITS Wireless Xbox 360 Controller and USB Receiver.

2. PRODUCT FEATURES

- **2.4GHz Wireless Technology:** Provides a stable connection up to 10 meters (32.8 feet) with the included USB receiver.
- **Dual Vibration Feedback:** Built-in motors deliver immersive haptic feedback for enhanced gaming.
- **Customizable LED Lighting:** Features a semi-transparent shell with a customizable LED light strip offering steady, breathing, or off modes.
- **Ergonomic Design:** Lightweight and designed with anti-slip grips for extended comfort during gameplay.
- **Battery Powered:** Operates on 2 standard AA batteries (not included) for flexible power management.
- **3.5mm Headset Jack:** Supports Xbox 360 compatible audio devices.
- **Multiplayer Support:** Connect up to 4 controllers simultaneously with individual player position indicators.

Wireless Controller Compatible with Xbox 360/Slim/Android TV/PC Windows 11/10/8/7



intelligent
Chip



2.4G
Wireless



Double
Shock



Precise
Joystick



Image 2.1: Key features of the PAWHITS Wireless Controller.

3. CONTROLLER LAYOUT

Familiarize yourself with the buttons and controls of your PAWHITS Wireless Xbox 360 Controller:

PRESENTATION OF KEY



Image 3.1: Controller button and joystick layout.

LB Key: Left Bumper

RB Key: Right Bumper

LT Key: Left Trigger

RT Key: Right Trigger

Left Joystick: Analog stick for movement/control

Right Joystick: Analog stick for camera/aiming

D-pad: Directional Pad

A, B, X, Y Buttons: Action buttons

START Button: Game start/pause

BACK Button: Game menu/return

HOME Button: Xbox Guide button/Controller pairing

4. SETUP INSTRUCTIONS

4.1. Battery Installation

1. Locate the battery compartment on the back of the controller.
2. Open the battery cover.
3. Insert two (2) AA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Close the battery cover securely.

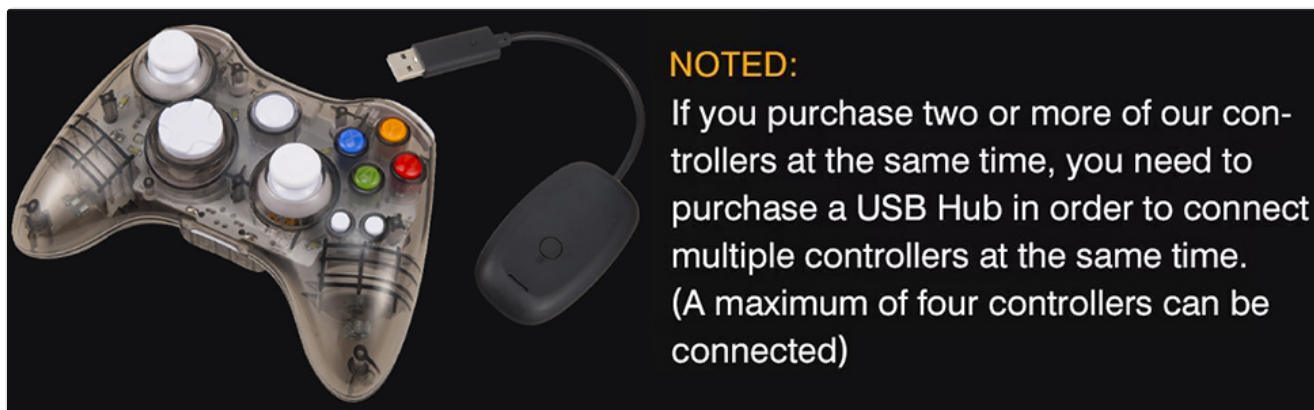


Image 4.1: Battery installation and testing.

4.2. Connecting to Xbox 360 Console

1. Ensure the 2 AA batteries are correctly installed in the controller.
2. Turn on your Xbox 360 console.
3. Plug the wireless USB receiver into an available USB port on your Xbox 360 console. The receiver light will illuminate.
4. Press and hold the HOME button on the controller for approximately 3 seconds.
5. The indicator light on the upper left corner of the controller's HOME button will turn solid green, indicating a successful pairing.

4.3. Connecting to PC (Windows 11/10/8/7)

1. Ensure the 2 AA batteries are correctly installed in the controller.
2. Turn on your PC.
3. Insert the wireless USB receiver into an available USB port on your PC. The necessary drivers should install automatically.
4. Press and hold the HOME button on the controller for approximately 3 seconds to initiate pairing.
5. The controller will connect automatically. You may need to configure controller settings within your game or operating system.

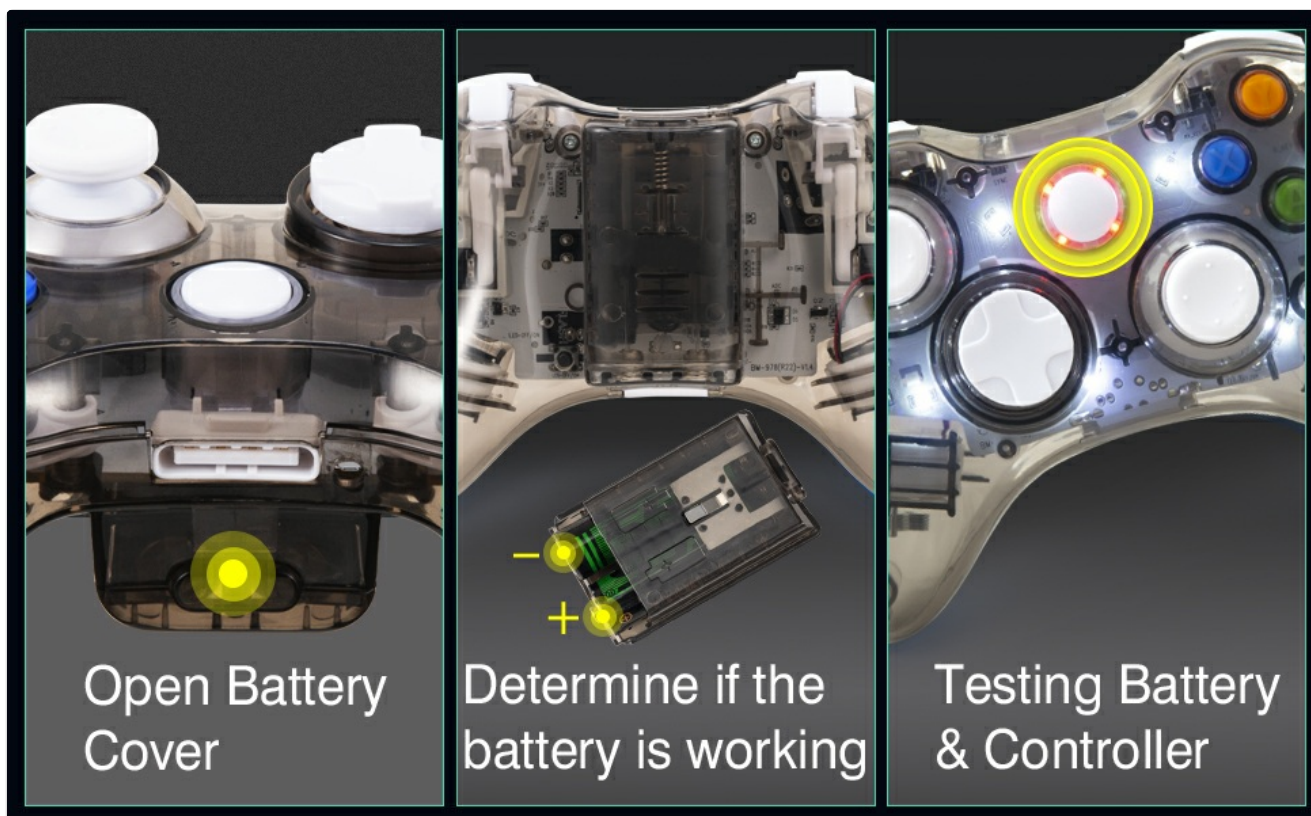


Image 4.2: Syncing instructions for Xbox 360 and PC.

4.4. Multiplayer Setup

The PAWHITS Wireless Xbox 360 Controller supports connecting up to four (4) controllers simultaneously to a single console or PC. Each controller requires its own USB receiver.

How to Sync to X-box360 Console?

1. Install the 2AA batteries in the direction marked on the battery case.
2. Turn on the console, Plug the wireless receiver in your console and the receiver light on.
3. Press the controller HOME button, when the indicator on the upper left corner of the home button of the controller keeps on, the pairing is successful.



How to Sync to PC?

1. Turn on the PC, install the controller battery correctly according to the logo, and insert the receiver into the PC.
2. After completing

Image 4.3: Information regarding multiple controller connections.

Note: If connecting two or more controllers, a USB Hub may be required if your console or PC does not have enough available USB ports.

5. OPERATING INSTRUCTIONS

5.1. Wireless Range

The controller operates wirelessly up to a range of 10 meters (approximately 32.8 feet) from the USB receiver. Ensure there are no significant obstructions between the controller and the receiver for optimal performance.



Image 5.1: Wireless connection range.

5.2. LED Light Modes

The controller features a customizable LED light strip. To cycle through the LED modes (steady, breathing, or off), press the dedicated button located on the rear of the controller.



Image 5.2: Illuminated joystick with LED lighting.

5.3. Dual Vibration Feedback

The controller is equipped with dual vibration motors to provide tactile feedback during gameplay. The intensity of the vibration may vary based on the game and in-game events.

BUILT-IN **DUAL VIBRATION MOTORS**



Image 5.3: Dual vibration motors.

5.4. 3.5mm Headset Jack

A 3.5mm headset jack is integrated into the controller for connecting compatible audio devices, such as headsets for in-game chat or audio output, when used with an Xbox 360 console.

6. MAINTENANCE

6.1. Cleaning

- Wipe the controller with a soft, dry cloth.
- Do not use liquid cleaners or abrasive materials, as these can damage the controller's surface or internal components.

6.2. Battery Replacement

When the controller's performance degrades or the LED indicators suggest low power, replace the AA batteries. Refer to Section 4.1 for battery installation instructions.

- Always use fresh, high-quality AA batteries.
- Remove batteries if the controller will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

7. TROUBLESHOOTING

7.1. Controller Not Connecting/Pairing

- **Check Batteries:** Ensure fresh AA batteries are correctly installed.
- **Receiver Connection:** Verify the USB receiver is securely plugged into an active USB port on your console or PC. The receiver light should be on.
- **Pairing Process:** Re-attempt the pairing process by holding the HOME button for 3 seconds. Ensure the controller is within the 10-meter wireless range.
- **USB Port:** Try plugging the USB receiver into a different USB port on your console or PC.
- **Interference:** Move away from other wireless devices that might cause interference (e.g., Wi-Fi routers, cordless phones).

7.2. Buttons or Joysticks Unresponsive

- **Re-sync Controller:** Disconnect and re-sync the controller as described in Section 4.2 or 4.3.
- **Test on Another Device:** If possible, test the controller on another compatible console or PC to determine if the issue is with the controller or the host device.
- **Clean Controller:** Ensure no debris is obstructing the buttons or joysticks. Refer to Section 6.1 for cleaning instructions.

7.3. No Vibration Feedback

- **Game Support:** Verify that the game you are playing supports vibration feedback.
- **In-Game Settings:** Check the game's settings to ensure vibration is enabled.
- **Driver Issues (PC):** For PC, ensure the correct drivers are installed and updated.

8. SPECIFICATIONS

Model Number	WM86-P
Connectivity	2.4GHz Wireless (with USB Receiver)
Wireless Range	Up to 10 meters (32.8 feet)
Power Source	2 x AA Batteries (not included)
Compatibility	Microsoft Xbox 360, PC (Windows 11/10/8/7)
Audio Port	3.5mm Headset Jack
Weight	Approximately 9.6 ounces (272 grams)
Dimensions	6.42 x 4.49 x 3.5 inches (approximate package dimensions)

9. WARRANTY AND SUPPORT

PAWHITS products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official PAWHITS website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, please contact PAWHITS customer support.

© 2023 PAWHITS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question