

[manuals.plus](#) /› [Dexnor](#) /› [Dexnor Rugged Case for Samsung Galaxy Tab S8/S7 11-inch: Instruction Manual](#)

Dexnor Samsung Galaxy Tab S8/S7 11-inch Case

Dexnor Rugged Case for Samsung Galaxy Tab S8/S7 11-inch: Instruction Manual

Model: Samsung Galaxy Tab S8/S7 11-inch Case

INTRODUCTION

Thank you for choosing the Dexnor Rugged Case for your Samsung Galaxy Tab S8 or S7 11-inch tablet. This case is engineered to provide comprehensive protection against drops, impacts, and scratches, ensuring the longevity of your device. It integrates a built-in screen protector, a versatile kickstand, and a dedicated S Pen holder for enhanced functionality and convenience.

COMPATIBILITY

This Dexnor Rugged Case is exclusively designed for the following models:

- Samsung Galaxy Tab S8 (2022) 11-inch
- Samsung Galaxy Tab S7 (2020) 11-inch

Please verify your tablet model before installation to ensure a proper fit.

Compatible With

Samsung Galaxy Tab S7/S8



Samsung Tab S7/S8
(2020 / 2022)
(Model:SM-X700/X706/T870/T875tab)



Samsung Tab S7+/S8+
(2020 / 2022)
(Model:SM-T970/T976/X800/X806tab)



Samsung Tab S7 FE
(2021)
(Model: SM-T730 /T736B)

⚠ ATTENTION

Check Tablet model as Following Steps

① Settings → ② About Tablet

This image displays a compatibility chart, indicating that the Dexnor case is designed for Samsung Tab S7/S8 11-inch models (SM-X700/X706/T870/T875tab) and not for 12.4-inch models.

WHAT'S IN THE BOX

- Dexnor Rugged Case (Front Frame with Built-in Screen Protector, Back Cover with Kickstand and S Pen Holder)
- Installation Tool (for separating case components)

SETUP & INSTALLATION

Follow these steps to properly install your Dexnor Rugged Case:

1. **Separate the Case:** Use the provided installation tool to carefully pry open the four side clips to separate the front frame from the back cover.
2. **Prepare the Front Frame:** From the top of the front case, peel the interior protective film. If your tablet has its own screen protector, you may choose to use the front frame without the built-in screen protector (an alternative front

frame without a built-in screen protector is included in some packages).

3. **Install Tablet into Front Frame:** Carefully place your Samsung Galaxy Tab S8/S7 11-inch tablet into the front frame. Ensure all camera and sensor cutouts align correctly.
4. **Attach Back Cover:** Align the tablet (now in the front frame) with the back cover. Start from one side and work your way around, pressing firmly until all clips snap securely into place.
5. **Final Check:** Ensure all edges are sealed and all ports, cameras, and buttons are correctly aligned and accessible.

For a visual guide on case installation and features, please refer to the video below:

Video: This video demonstrates the installation process of a Dexnor rugged case, showing how to separate the front and back pieces, insert the tablet, and reassemble. It also highlights the S Pen holder and port covers.

KEY FEATURES

- **Dual-layer Hybrid Military Grade Drop Protection:** Constructed with a shock-absorbing TPU inner layer and a hard, drop-resistant Polycarbonate outer layer. The front protective piece features raised edges to keep your screen elevated from surfaces.

Reinforced Corners

Incredibly Protective



BumperShock Cushion



Bumper Shield Protected



360° Protection



This image highlights the reinforced corners of the Dexnor case, emphasizing its military-grade drop protection with bumper shock cushions and 360-degree protection.

- **Built-in Screen Protector:** The integrated screen protector safeguards your tablet screen from scratches without compromising touch sensitivity.
- **Integrated S Pen Holder:** The back cover includes a dedicated slot for convenient storage and easy access to your Stylus Pen.



Kickstand case

This image shows the Dexnor case with its integrated S Pen holder, designed for secure and accessible storage of your stylus.

- **Multi-Angle Kickstand/Handle:** The specially designed kickstand can be adjusted to multiple viewing angles for watching videos or typing. It also functions as a handle for easy carrying.

Foldable Kickstand

Durable and Stable



Horizontal View



Vertical View



This image demonstrates the foldable kickstand feature, allowing for stable horizontal and vertical viewing angles, suitable for various activities.

- **Comfortable Gamepad Design:** The back cover features a joystick-inspired design for an optimal grip and feel during gaming sessions.
- **Precise Cutouts:** Ensures easy access to all buttons, ports, and the camera without removing the case.

Video: This video demonstrates the 360-degree rotating hand strap and kickstand, showcasing typing and viewing modes, and the built-in pencil holder for a tablet case.

OPERATING INSTRUCTIONS

- **Using the Kickstand:** Locate the pop-out kickstand on the back of the case. Gently pull it out until it locks into your desired viewing angle. The kickstand supports both horizontal and vertical orientations. To retract, push the kickstand back into its slot until it lies flush with the case.
- **Using the S Pen Holder:** Insert your S Pen into the designated slot on the side of the case. The holder is designed to keep the S Pen secure while allowing for easy removal when needed.

- **Accessing Ports and Buttons:** The precise cutouts ensure that all ports (charging, audio) and buttons (power, volume) are fully accessible without needing to remove the case.

MAINTENANCE

- **Cleaning:** To clean the case, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these may damage the case's finish or screen protector.
- **Screen Protector Care:** Regularly clean the built-in screen protector to maintain clarity and touch sensitivity. If an external screen protector is used, ensure it does not interfere with the built-in protector.
- **Inspection:** Periodically inspect the case for any signs of wear or damage. If significant damage is observed, consider replacing the case to ensure continued optimal protection for your tablet.

TROUBLESHOOTING

- **Reduced Touch Sensitivity:** If you experience reduced touch sensitivity with the built-in screen protector, ensure there are no air bubbles between the protector and your tablet screen. Re-installation may be necessary. If you have an additional screen protector on your tablet, it may interfere with the built-in protector; consider removing the additional protector.
- **Case Not Closing Properly:** Ensure the tablet is correctly seated within the front frame and that all clips on the back cover are aligned and snapped into place. Check for any debris obstructing the edges.
- **S Pen Not Charging/Connecting:** Ensure the S Pen is correctly placed in its designated holder. The holder is designed for storage, not charging. For charging, place the S Pen on the tablet's magnetic charging strip.

SPECIFICATIONS

Feature	Detail
Material	Polycarbonate, Thermoplastic Polyurethane (TPU)
Compatible Devices	Samsung Galaxy Tab S8 (2022) 11-inch, Samsung Galaxy Tab S7 (2020) 11-inch
Item Weight	13.1 ounces
Package Dimensions	10.55 x 8.31 x 0.75 inches
Special Features	Heavy Duty Protection, Built-in Screen Protector, Kickstand, S Pen Holder
Manufacturer	Dexnor

WARRANTY & SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Dexnor customer service directly. Keep your purchase receipt for any warranty claims.