

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KOMERY](#) /

› [KOMERY X9 4K 48MP Digital Camera User Manual](#)

KOMERY X9

KOMERY X9 4K 48MP Digital Camera User Manual

Model: X9

INTRODUCTION

Thank you for choosing the KOMERY X9 4K 48MP Digital Camera. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance and longevity. Please read this manual thoroughly before using the device.

1. SETUP

1.1 Battery and Memory Card Installation

To begin using your camera, install the battery and memory card as follows:

1. Open the battery compartment cover located at the bottom of the camera.
2. Insert the provided lithium-ion battery (NP-120, 1800mAh, 3.7V) into the compartment, ensuring correct polarity.
3. Insert the Micro SDHC memory card (up to 32GB included, supports up to 128GB) into the designated slot until it clicks into place.
4. Close the battery compartment cover securely.



Image: Proper installation of the battery and memory card. The battery should be inserted as shown, and the memory card is already installed in its slot.

1.2 Formatting the Memory Card

It is recommended to format the memory card before first use and periodically to ensure optimal performance and prevent data corruption.

1. Turn on the camera.
2. Press the 'MODE' button to navigate to the settings menu.
3. Use the arrow keys to select 'Format Memory Card' and press 'OK'.
4. Select 'Yes' to confirm formatting.



Video: Demonstrates the steps to format the memory card within the camera's menu system.

1.3 Setting Date and Time

Ensure the correct date and time are set for accurate photo and video timestamps.

1. Turn on the camera.
2. Press the 'MODE' button to navigate to the settings menu.
3. Use the arrow keys to select 'Date/Time' and press 'OK'.

4. Select 'Date Setup' and adjust the date and time using the arrow keys and 'OK' button.



Video: Illustrates how to access and set the date and time on the camera.

2. OPERATING THE CAMERA

2.1 Power On/Off and Mode Selection

Press the power button to turn the camera on or off. Use the 'MODE' button to switch between photo, video, and playback modes.

2.2 Zoom Function

The camera features an 18X digital zoom. Use the T/W (Telephoto/Wide-angle) rocker switch on the top of the camera to zoom in or out.

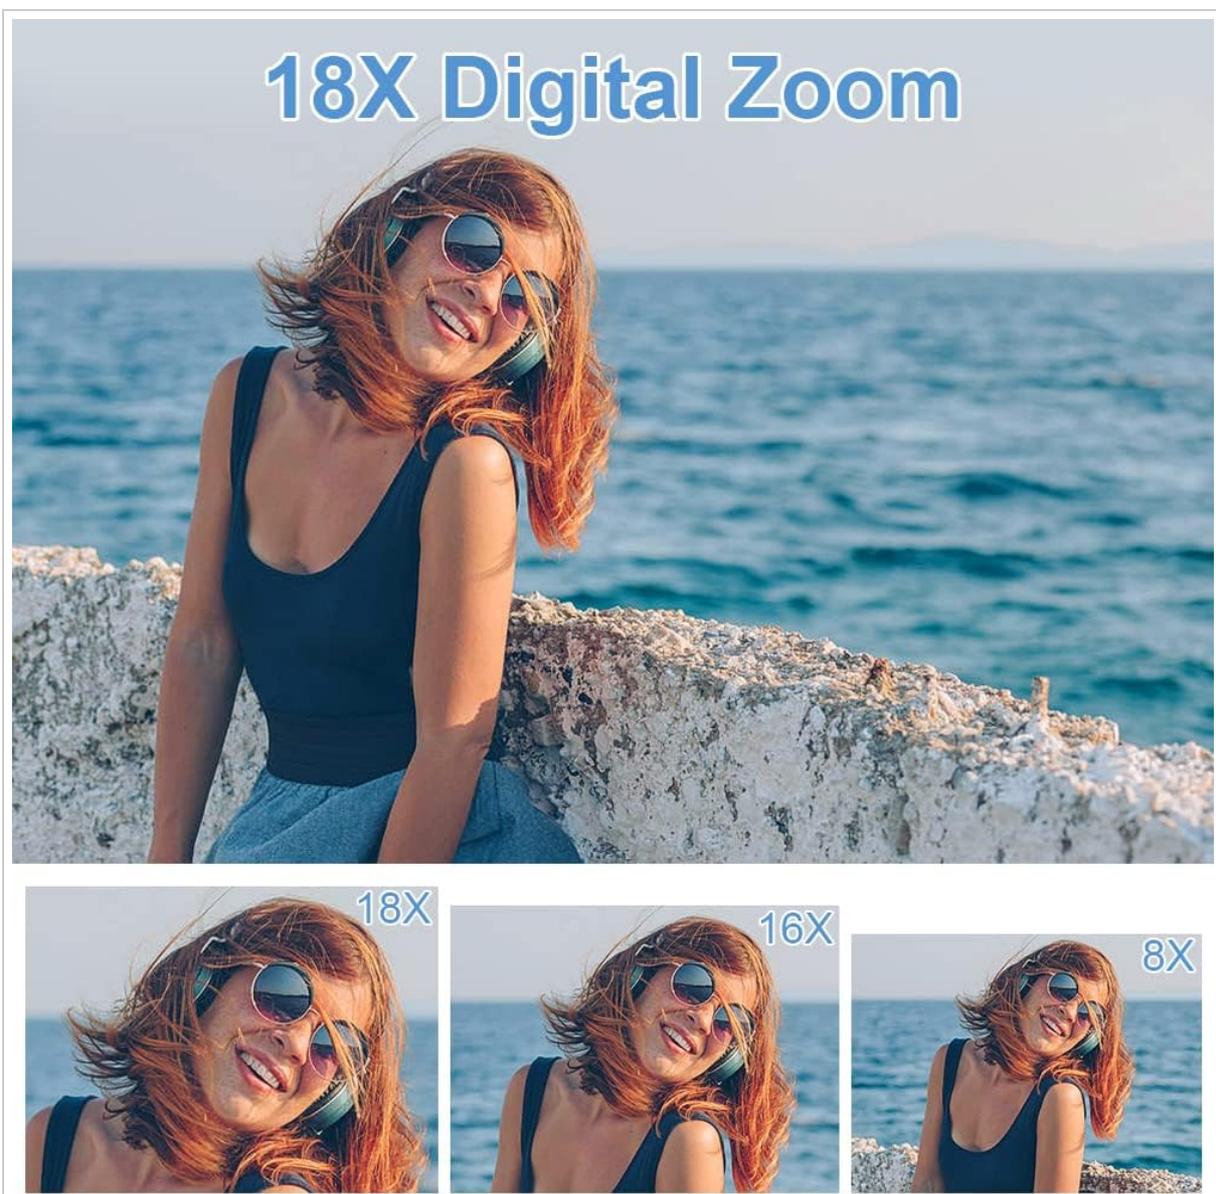


Image: Demonstrates the 18X digital zoom capability, showing varying levels of magnification from 8X to 18X.

2.3 Autofocus

The camera is equipped with an autofocus system to ensure clear and sharp images. Point the camera at your subject and half-press the shutter button to engage autofocus before fully pressing to capture.

Dual cameras, the newest and unique design



Image: A visual comparison showing the clarity of an image captured with autofocus (left) versus without autofocus (right).

2.4 Camera Settings and Filters

Access various settings and creative filters through the menu. Use the top dial to quickly switch between different filters like Standard, Nostalgic, Monochrome, Vivid, Negative, Lomo, Binary, and Dog Eye.



Image: Displays the camera's filter turntable and examples of eight different camera filters available.

Video: Shows how to navigate through the camera's menu to change settings such as image resolution, quality, self-timer, anti-shake, face detection, multi-snapshots, white balance, image sharpness, light exposure, ISO, metering, flash, language, and date/time.

2.5 Wi-Fi Connectivity

Connect your camera to a smartphone via Wi-Fi for remote control and easy transfer of photos and videos. Download the free 'XDV PRO' app from your device's app store.



Wi-Fi Connectivity

Download free "XDV PRO" app to create a Wi-Fi connection to the camera

[!\[\]\(3d496ca5740a387f002644c845f4275b_img.jpg\)](#) [!\[\]\(78a029b04ee0ee05998c29299c47b06c_img.jpg\)](#) [!\[\]\(268d17a79f5913c36d8998dd535a8ce6_img.jpg\)](#) [!\[\]\(6fd8ee56d0ba251d09562574b5120fba_img.jpg\)](#) [!\[\]\(e0ab9361813163532c7fa95515d4d1b8_img.jpg\)](#) [!\[\]\(ed9e877d645e2d53347566bd07fad403_img.jpg\)](#)

Image: Illustrates the camera's Wi-Fi connectivity feature, showing how it can be controlled and media transferred to a smartphone via the 'XDV PRO' app.

3. MAINTENANCE

3.1 Battery Charging

The camera uses a rechargeable lithium-ion battery (NP-120). Charge the battery using the provided USB cable and charging block. The camera supports recording while charging.

Lithium-ion Battery Working Time 150 Minutes



Image: Details the NP-120 lithium-ion battery specifications and indicates a working time of 150 minutes. It also shows the battery being inserted into the camera.

3.2 Cleaning

Use a soft, lint-free cloth to clean the camera body and screen. For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals or abrasive materials.

4. TROUBLESHOOTING

4.1 Auto Power Off

The camera has an auto power-off feature to conserve battery. You can adjust this setting or disable it if needed.

1. Turn on the camera.
2. Press the 'MODE' button to navigate to the settings menu.
3. Use the arrow keys to select 'Auto Power Off' and press 'OK'.
4. Choose your desired time (1, 3, 5 minutes) or 'Disable' to keep the camera on until manually turned off.

Video: Demonstrates how to access and modify the 'Auto Power Off' setting in the camera's menu.

4.2 'No File Exist' Message

If you encounter a 'No File Exist' message during playback, ensure that the memory card is properly inserted and contains recorded media. If the card is new or recently formatted, it will not contain files.

5. SPECIFICATIONS

Feature	Description
Brand	KOMERY
Model Name	X9

Maximum Webcam Image Resolution	48 MP
Optical Zoom	18.0
Image Stabilization	Yes
Photo Sensor Technology	CMOS
Supported File Format	JPEG, MP4
Screen Size	3 Inches
Flash Memory Type	Micro SDHC
Memory Storage Capacity	32 GB (expandable up to 128GB)
Recording Capacity	150 Minutes
Video Resolution	2160p (4K)
Connectivity Technology	Wi-Fi, USB
Battery Cell Type	Lithium Ion (NP-120)
Color	White

6. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official KOMERY website. Keep your proof of purchase for warranty claims.