

Cecotec 02721

Cecotec Bolero DressCode 10300 Washing Machine User Manual

Model: 02721

1. INTRODUCTION

This user manual provides comprehensive instructions for the installation, operation, and maintenance of your new Cecotec Bolero DressCode 10300 Front Load Washing Machine. Please read this manual carefully before using the appliance to ensure safe and efficient operation. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the washing machine is properly grounded.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Always unplug the machine before cleaning or performing maintenance.
- Do not open the detergent dispenser or door during a wash cycle, especially when the water level is high or temperature is hot.
- Ensure all transport bolts are removed before first use to prevent damage.

3. PRODUCT OVERVIEW

The Cecotec Bolero DressCode 10300 is a high-performance front-load washing machine designed for efficiency and convenience. It features a robust Inverter Plus motor, offering quiet operation and significant energy savings.



Figure 3.1: Front view of the Cecotec Bolero DressCode 10300 washing machine, showing the control panel, drum door, and 10kg capacity label.

Key Features:

- **Capacity:** 10 kg, suitable for large loads.
- **Spin Speed:** Maximum 1400 rpm, adjustable for various fabric types.
- **Programs:** 15 pre-set washing programs for diverse laundry needs.
- **Motor:** Inverter Plus motor for efficient, quiet, and durable performance.
- **SteamMax Function:** Utilizes steam for enhanced cleaning and wrinkle reduction.
- **DrumClean:** Automatic drum cleaning function for optimal hygiene.
- **DelayStart:** Allows setting a delayed start time (0-24 hours).
- **KidLock:** Child lock feature for safety.
- **Extra Rinse:** Provides an additional rinse cycle for thorough detergent removal.

- **Energy Efficiency:** Class A rating for low energy consumption.



Figure 3.2: Detailed view of the control panel, showing the program dial, LED display, and touch controls for various functions.

4. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your washing machine. Please follow these steps carefully.

4.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage during transit. Report any damage to your retailer immediately.

4.2 Removing Transport Bolts

Before operating the washing machine, you must remove the transport bolts located at the rear of the appliance. These bolts secure the drum during transit and must be removed to prevent severe damage to the machine.

1. Locate the transport bolts on the back panel.
2. Use a wrench to loosen and remove all bolts.
3. Insert the plastic caps provided into the holes.
4. Keep the transport bolts for future transportation of the machine.

4.3 Leveling the Appliance

The washing machine must be perfectly level to prevent excessive vibration and noise during operation. Adjust the adjustable feet at the bottom of the machine until it is stable and level on all four corners.



Figure 4.1: Side view of the washing machine, illustrating its dimensions (85 cm height, 59 cm width, 60 cm depth).

4.4 Water Supply Connection

Connect the supplied water inlet hose to the cold water tap and the corresponding inlet valve on the back of the washing machine. Ensure all connections are tight to prevent leaks.

4.5 Drain Hose Connection

Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fastened to prevent displacement during draining.

4.6 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating label of the appliance.

5. OPERATING INSTRUCTIONS

Follow these steps to operate your Cecotec washing machine.

5.1 Preparing Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Check garment care labels for washing instructions.
- Empty pockets and close zippers and buttons.



Figure 5.1: A user loading a large item, such as a duvet, into the spacious drum of the washing machine.

5.2 Loading Laundry

Open the door and load the laundry into the drum. Do not overload the machine; leave enough space for the clothes to tumble freely.

5.3 Adding Detergent and Additives

Pull out the detergent dispenser drawer and add the appropriate amount of detergent and fabric softener to the designated compartments. Refer to your detergent packaging for dosage recommendations.

5.4 Selecting a Program

Turn the program dial to select one of the 15 available washing programs. The LED display will show the default settings

for the selected program.



Figure 5.2: A user's hand interacting with the rotary dial to select a wash program, with various program options visible around the dial.

5.5 Adjusting Settings

You can customize the wash cycle using the touch buttons on the control panel:

- **Temperature:** Adjust the water temperature (e.g., 20°C, 40°C, 60°C, 90°C).
- **Spin Speed:** Modify the spin speed up to 1400 rpm.
- **DelayStart:** Press to set a delay for the start of the wash cycle (0-24 hours).
- **Extra Rinse:** Activate for an additional rinse cycle.
- **SteamMax:** Select this option for steam treatment during the cycle.

5.6 Starting the Wash Cycle

Press the Start/Pause button to begin the selected program. The machine will automatically proceed through the wash, rinse, and spin cycles.

5.7 KidLock Function

To activate the child lock, press and hold the designated KidLock button (or combination of buttons as indicated on the panel) for a few seconds until the lock indicator appears. This prevents accidental changes to settings during operation.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

6.1 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent residue buildup. Rinse it under running water and dry thoroughly before reinserting.

6.2 DrumClean Function

Utilize the automatic DrumClean function regularly to clean the inside of the drum and prevent odors and bacteria buildup. Refer to the control panel for initiating this cycle.

6.3 Cleaning the Drain Filter

The drain filter should be cleaned periodically to remove lint and small objects. Locate the filter at the bottom front of the machine, place a shallow container underneath to catch water, and carefully unscrew the filter to clean it.

6.4 External Cleaning

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a program and press Start.
Excessive vibration/noise	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust leveling feet; Redistribute laundry inside drum.
Water not draining	Drain hose kinked or blocked; Drain filter clogged.	Check and straighten drain hose; Clean the drain filter.
Detergent residue in dispenser	Insufficient water pressure; Detergent clumping; Dispenser dirty.	Check water supply; Use less detergent or dissolve it; Clean dispenser.

8. SPECIFICATIONS

Detailed technical specifications for the Cecotec Bolero DressCode 10300 Washing Machine.

Model Number: 02721

Capacity: 10 Kilograms

Maximum Spin Speed: 1400 RPM

Energy Efficiency Class: A

Power Consumption (Eco 40-60): 49 kWh / 100 cycles

Water Consumption (Eco 40-60): 50 Liters / cycle

Noise Level (Spin): 76 dB

Dimensions (W x D x H): 60 x 54 x 85 cm

Product Weight: 61 Kilograms

Voltage: 230 Volts (AC)

Wattage: 2000W

Drum Material: Stainless Steel

Control Type: Touch / Rotary Dial

Included Components: 1 x Washing machine; 1 x Water supply hose; 1 x User manual; Transport feet.

cecotec

Ficha de información del producto			
REGlamento DELEGADO (UE) 2019/2024 DE LA COMISIÓN en relación con el etiquetado energético de lavadoras y lavadoras secadoras domésticas.			
Nombre del proveedor o marca comercial: Cecotec Innovaciones, S.L.			
Dirección del proveedor: Av. Reyes Católicos, 50, 46100, Alfafar (Valencia) SPAIN			
Identificador del modelo: 02721, Bolero DressCode 10300 Inverter A			
Parámetros generales del producto:			
Parámetro	Valor	Parámetro	Valor
Capacidad (c) (kg)	10,0	Dimensiones en cm (a) (c)	Altura 85 Ancho 59 Profundidad 60
Índice de Eficiencia Energética (EEA) (lit)	51,9	Clase de eficiencia energética (lit)	A (c)
Índice de eficiencia de lavado (lit)	1,021	Efectividad del enjuague (lit)	5,0
Consumo de energía en kWh por ciclo, basado en el programa eco 40-60. El consumo real de energía depende de las condiciones de utilización del aparato	0,513	Consumo de agua en litros por ciclo, basado en el programa eco 40-60. El consumo real de agua depende de las condiciones de utilización del aparato y de la dureza del agua	52
Temperatura máxima de los tejidos tratados (°C)	Capacidad 35 Media 32 Un cuarto 23	Humedad residual (N) (B)	Capacidad 53,9 Media 53,9 Un cuarto 53,9
Velocidad de centrifugado (rpm) (B)	Capacidad 1.350 Media 1.350 Un cuarto 1.350	Clase de eficiencia de centrifugado y secado (B)	B (d)
Duración del programa (h:min) (B)	Capacidad 3:59 Media 3:00 Un cuarto 3:00	Tipo	De libre instalación
Ruido aéreo emitido expresado durante la fase de centrifugado (dB(A) re 1 pW) (B)	76	Ruido aéreo emitido expresado (fase de centrifugado) (B)	B (d)
Apagado (W)	0,50	Modo preparado (W)	1,00
Inicio diferido (W) (si procede)	4,00	Modo preparado en red (W) (si procede)	N/A
Duración mínima de la garantía ofrecida por el proveedor (a) (c): 3 años			
Este producto ha sido diseñado para liberar iones de plata durante el ciclo de lavado: NO			
Información adicional:			
Enlace al sitio web del proveedor, en el que se encuentra la información contemplada en el punto 9 del anexo II del Reglamento (UE) 2019/2023 de la Comisión: www.cecotec.es			
(a) Este elemento no se considerará pertinente a efectos del artículo 2, apartado 6, del Reglamento (UE) 2017/1369.			
(b) Para el programa ECO 40-60.			
(c) Los símbolos en este punto no se considerarán relevantes a efectos del apartado 4 del artículo 4 del Reglamento (UE) 2017/1369.			
(d) Si la base de datos de producto genera automáticamente el contenido definitivo de esta tabla, el proveedor no deberá adjuntar estos datos.			

C/ de la Privada s/n 46100 Quart de Poblet, Valencia (Spain) [info@cecotec.es / cecotec.es](https://www.cecotec.es)

Figure 8.1: European Energy Label for the Cecotec Bolero DressCode 10300, indicating its Class A energy efficiency, 49 kWh/100 cycles, 50 L/cycle water consumption, and 76 dB spin noise level. For more details, visit the official EPREL database: <https://eprel.ec.europa.eu/qr/1588755>

9. WARRANTY AND SUPPORT

Your Cecotec Bolero DressCode 10300 Washing Machine comes with a minimum warranty period of 3 years from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical assistance, spare parts, or warranty service, please contact Cecotec customer support through their official website or the contact information provided in your purchase documentation. Ensure you have your model number (02721) and serial number ready when contacting support.



[\[pdf\]](#) User Manual Instructions

Descargar o manual do utilizadorBolero Dresscode 8300 Inverter A Máquinas de lavar com carregamento frontal Cecotecbolero dresscode inverter a user escdn cecotec cloud media files bolero es utilizadorDescargar usuarioBolero CecotecBolero DressCode 9300 Lavadoras carga esbolero ||| ||| DRESSCODE 7300 Inverter A DRESSCODE 8300 Inverter A DRESSCODE 9300 Inverter A DRESSCODE 10300 Inverter A Lavadora/ Washing machine Manual de instrucciones Instruction manual Manuel d instructions Bedienungsanleitung Manuale di istruzioni Ma DRESSCODE 7300 Inverter A DRESSCODE 8300 Inverter A DRESSCODE 9300 Inverter A DRESSCODE 10300 Invert ... UE 2019/2023, UE 2021/340, UE 2021/341. BOLERO DRESSCODE 7300/8300/9300/10300 61 ESPAOL **02721**_Bolero DressCode 10300 Inverter A Ciclo Capacidad normal kg Temperatura seleccionada Dur...

lang:it **score:37** filesize: 4.15 M page_count: 298 document date: 2023-08-01



[\[pdf\]](#) User Manual Instructions

Descargar manual Bolero DressCode 10300 Inverter A Lavadora de 10 kg Cecotec bolero dresscode inverter a user es cdn cecotec cloud media files ||| DRESSCODE 7300 Inverter A DRESSCODE 8300 Inverter A DRESSCODE 9300 Inverter A DRESSCODE 10300 Invert ... UE 2019/2023, UE 2021/340, UE 2021/341. BOLERO DRESSCODE 7300/8300/9300/10300 61 ESPAOL **02721**_Bolero DressCode 10300 Inverter A Ciclo Capacidad normal kg Temperatura seleccionada Dur...

lang:it **score:27** filesize: 3.57 M page_count: 298 document date: 2023-09-07



[\[pdf\]](#) User Manual Instructions

Descargar manual Bolero DressCode 7300 Inverter A Lavadoras de carga frontal Cecotec bolero dresscode inverter a user es cdn cecotec cloud media files ||| DRESSCODE 7300 Inverter A DRESSCODE 8300 Inverter A DRESSCODE 9300 Inverter A DRESSCODE 10300 Invert ... UE 2019/2023, UE 2021/340, UE 2021/341. BOLERO DRESSCODE 7300/8300/9300/10300 61 ESPAOL **02721**_Bolero DressCode 10300 Inverter A Ciclo Capacidad normal kg Temperatura seleccionada Dur...

lang:it **score:27** filesize: 4.15 M page_count: 298 document date: 2023-08-01



[\[pdf\]](#) User Manual Instructions

DRESSCODE 7300 Inverter A Lea las siguientes instrucciones atentamente antes de usar el producto

Guarde este manual para referencias futuras o nuevos usuariosv1sgfm elcorteingles es SGFM dctm

MEDIA03 202404 09 00104710396179 2 |||


DRESSCODE 7300 Inverter A DRESSCODE 8300 Inverter A DRESSCODE 9300
Inverter A DRESSCODE 10300 Invert ... UE 2019/2023, UE 2021/340, UE 2021/341.

BOLERO DRESSCODE 7300/8300/9300/10300 61 ESPAOL **02721**_Bolero

DressCode 10300 Inverter A Ciclo Capacidad normal kg Temperatura seleccionada

Dur...

lang:it score:20 filesize: 3.57 M page_count: 298 document date: 2023-09-07

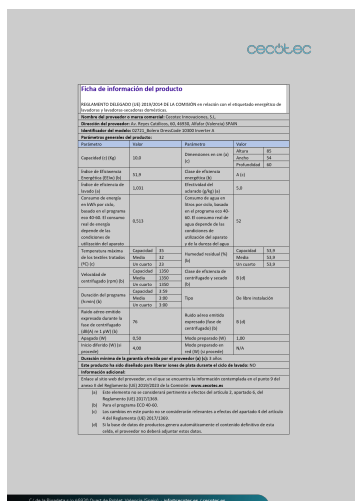

[\[pdf\]](#)

FICHA TÉCNICA 02721 Roberto Cortina Ficha de producto Bolero DressCode 10300 Inverter A

Lavadora 10 kg Cecotec bolero dresscode inverter a productenergyinformation 0 spec url es cdn cecotec cloud media files |||

Ficha de informacin del producto REGLAMENTO DELEGADO UE 2019/2014 DE LA COMISIN en relacin con el ... n del proveedor: Av. Reyes Catlicos, 60, 46930, Alfajar Valencia SPAIN Identificador del modelo: **02721**_Bolero DressCode 10300 Inverter A Parmetros generales del producto: Parmetro Valor Parmetr...

lang:es score:18 filesize: 210.79 K page_count: 1 document date: 2023-10-13