



[Manuals.plus](#) /

› [WIN STELLAR](#) /

› WIN STELLAR Bifold Pantry/Closet Door Instruction Manual (24" x 80")

WIN STELLAR 24" x 80-80.75" Opening

WIN STELLAR Bifold Pantry/Closet Door Instruction Manual

Model: 24" x 80-80.75" Opening

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your WIN STELLAR Bifold Pantry/Closet Door. Please read all instructions carefully before beginning installation to ensure proper function and longevity of your product. Keep this manual for future reference.



Image: The WIN STELLAR bifold door installed in a kitchen, demonstrating its space-saving design.

PRODUCT OVERVIEW

The WIN STELLAR Bifold Door is designed for interior use, offering a space-saving solution for closets, pantries, and other areas where traditional swinging doors are impractical. It features solid core panels for durability and smooth operation.

- **Material:** Engineered Wood with a durable, paintable, and water-resistant surface.
- **Construction:** Solid core panels for enhanced stability and sound dampening.
- **Finish:** Pre-finished surface, ready for use or custom painting.
- **Environmental Certification:** CARB P2 Certified, ensuring low formaldehyde emissions.
- **Durability:** Scratch-resistant surface.

Choose Your Design



Four panels in total each with tape on the back.

Remove the tape cover and adhere the panels to the door to create the desired design.

Image: Details of the durable MDF surface, emphasizing its pre-finished, sturdy, scratch-resistant, and water-resistant qualities.



Image: CARB P2 certification details, confirming the use of safe and environmentally friendly materials.

PACKAGE CONTENTS

Your WIN STELLAR Bifold Door package includes all necessary components for installation. No additional parts are required.

- 2 Door Panels (pre-assembled)
- Knob(s)
- Track and Hardware Kit (including pivots, guides, hinges, and fasteners)
- Fascia (to conceal hardware)
- Instruction Manual (this document)

Choose Your Design



Four panels in total each with tape on the back.

Remove the tape cover and adhere the panels to the door to create the desired design.



Image: All hardware components included in the package for bifold door installation.

SETUP AND INSTALLATION

The door panels arrive pre-assembled with knobs included, simplifying the installation process. Installation typically takes approximately 30 minutes. Follow these general steps:

1. **Measure Opening:** Ensure your door opening matches the product dimensions (24" x 80-80.75"). Refer to the size guide for precise measurements.
2. **Install Track:** Secure the top track within the door frame according to the provided hardware instructions.
3. **Attach Pivots and Guides:** Install the pivot brackets and guide wheels to the top and bottom of the door panels as directed.
4. **Hang Doors:** Insert the door pivots into the track and bottom bracket.
5. **Adjust Height:** For openings up to 80.5 inches, adjust the roller mechanism on the door to increase height as needed.
6. **Install Fascia:** Attach the fascia to conceal the top track hardware.
7. **Custom Design (Optional):** If desired, use the included decorative panels. Remove the tape cover from the back of the panels and adhere them to the door surface to create your preferred design.

  Durable MDF Surface

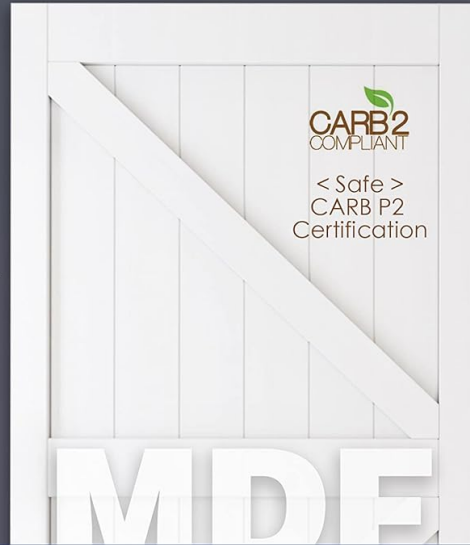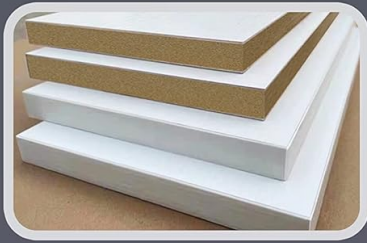

< Ready-to-use >
Pre-finished
Surface



< Sturdy >
Harder than
Natural Wood



Scratch Resistant



Water Resistant

Image: Bifold Door Size Guide illustrating available widths and standard height for proper fitment.

Find Order and Open

Scenario 1

Need help with your item?
Get product support
Return or replace items
Eligible through January 31, 2025

1.1 Returns or Exchanges Within Validity Period

Why are you returning this? (required)
Selecting the most accurate reason for your return helps us gather essential feedback, that helps us improve our services and product quality. [Learn more](#)

 
1.2 Please Select the Reason for the Return

No longer needed
 Product and shipping box both damaged

Tell us more about why are you returning.
For example: Item not as described, Does not match dimensions, Difficult to install, Does not match dimensions
500 characters remaining.

1.3 Provide Detailed Information for a Quick Response

Continue

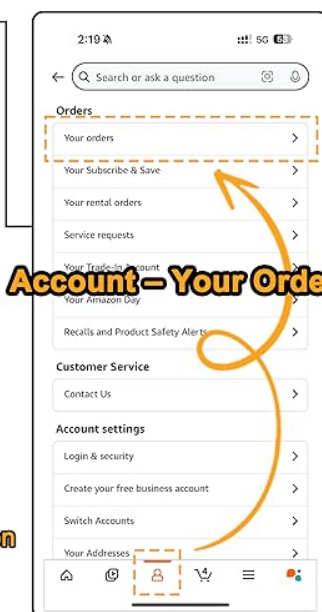

Account - Your Orders

Scenario 2

2.1 Pre-Sale or Expired Order Inquiry - Visit Product Page to Contact Seller

48 x 80 inch Mirrored Sliding...
Share this item

Add to Cart
Buy Now

Ships from Amazon
Sold by WIN STELLAR
Returns 30-day refund, replacement
Payment Secure transaction

About Seller
WIN STELLAR is committed to providing each customer with the highest standard of customer service.

Have a question for WIN STELLAR?
Ask a question

Image: Detailed diagram outlining the installation process for the bifold door.



Image: Examples of custom-painted bifold doors, showcasing the product's paintable surface.

OPERATION

The bifold door operates by folding inward or outward along its track, allowing for maximum space utilization. The solid core panels and sturdy hardware ensure smooth and quiet gliding without rattling.

- To open, gently pull the knob to fold the panels.
- To close, push the panels together until they meet.
- The door can fold up to 90%, providing a wide opening.



Image: Illustration of the bifold door in both closed and folded states, highlighting its space-saving capability.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your bifold door.

- **Cleaning:** Wipe the door panels with a soft, damp cloth. Avoid abrasive cleaners. The water-resistant surface allows for easy cleaning.

- **Hardware:** Periodically check all screws and hardware for tightness. Lubricate the track and pivots with a silicone-based lubricant if the door does not glide smoothly.
- **Surface Care:** The scratch-resistant surface helps prevent minor damage. For deeper scratches or to change the aesthetic, the door is paintable.



Image: Visual representation of the door's scratch-resistant properties.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Door does not glide smoothly.	Track or pivots are dirty, misaligned, or lack lubrication.	Clean the track and pivots. Apply a silicone-based lubricant to the track and moving parts. Check for proper alignment of the track and door panels.
Door rattles.	Loose hardware or improper installation.	Ensure all screws and hardware components are securely tightened. Verify that the door is properly seated in the track and bottom bracket.
Door height is incorrect.	Roller adjustment needed.	Adjust the roller mechanism on the door panels to achieve the correct height for your opening (especially for 80.5" openings).

SPECIFICATIONS

Feature	Detail
Model	24" x 80-80.75" Opening
Product Dimensions	0.83 x 24 x 80 inches (Door Panel)
Material	Engineered Wood
Item Weight	29.7 Pounds
Assembly Required	No (Door panels are pre-assembled)
Color	White (Paintable)

WARRANTY AND SUPPORT

WIN STELLAR is committed to providing quality products and customer satisfaction. If you encounter any issues, such as damage or missing parts, please contact our customer service for assistance. We will be happy to provide replacements or support as needed.

How to Contact Support:

For prompt assistance, please follow these steps:

1. Log in to your Amazon account.
2. Navigate to "Your Orders".
3. Locate your WIN STELLAR Bifold Door purchase.
4. Click on "Ask a question" or "Contact Seller" to reach WIN STELLAR customer service directly.
5. Provide detailed information regarding your issue for a quick response.

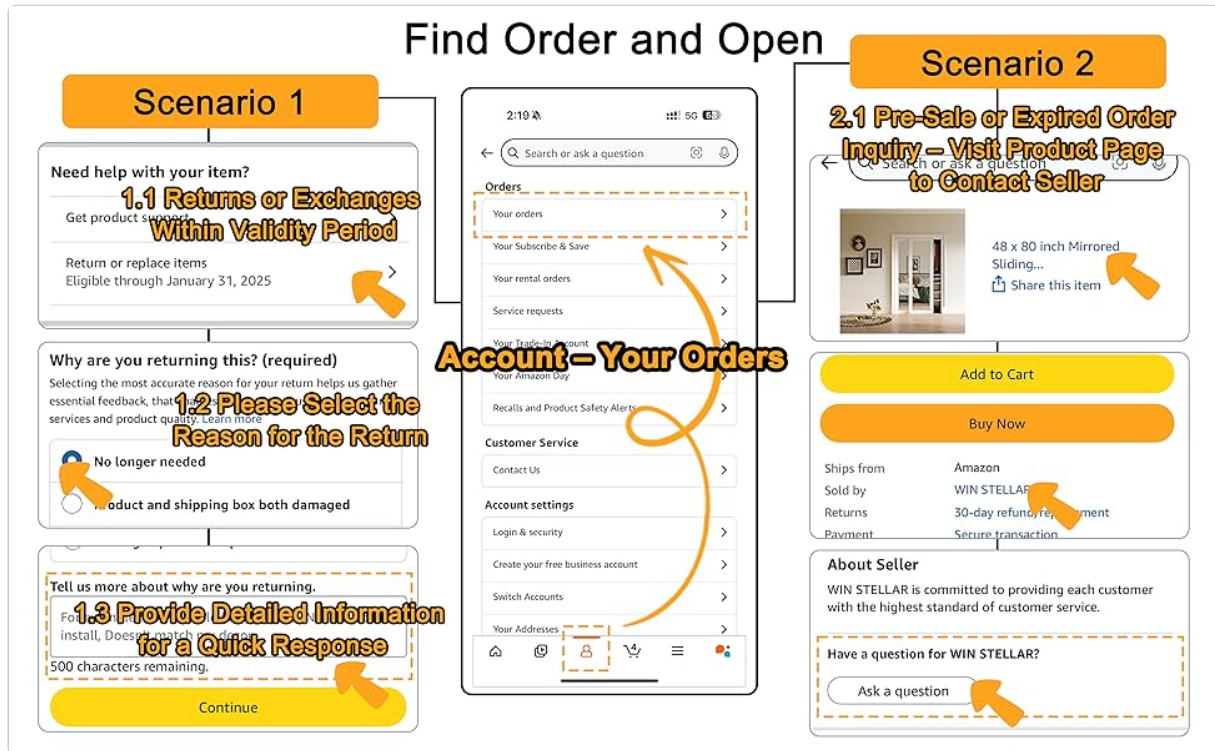 


Image: Guide on accessing customer support via your Amazon order history.