

## BOJUE HH60SHDG1615

# BOJUE 60 Inch Ceiling Fan without Lights Instruction Manual

Model: HH60SHDG1615

## 1. INTRODUCTION

---

Thank you for purchasing the BOJUE 60 Inch Ceiling Fan without Lights. This manual provides detailed instructions for the safe installation, operation, and maintenance of your new ceiling fan. Please read this manual thoroughly before installation and keep it for future reference.

## 2. SAFETY INFORMATION

---

- **Electrical Safety:** Always disconnect power at the main circuit breaker before installation or servicing. Ensure all wiring is in accordance with national and local electrical codes.
- **Mounting:** The ceiling fan must be mounted to a ceiling joist or a securely anchored outlet box capable of supporting at least 35 lbs (15.9 kg).
- **Blade Clearance:** Ensure fan blades are at least 7 feet (2.1 meters) from the floor and 30 inches (76 cm) from any wall or obstruction.
- **Downrod Selection:** Use the appropriate downrod length for your ceiling height. Recommended minimum height: 8 feet.
- **Professional Installation:** If you are unfamiliar with electrical wiring, consult a qualified electrician.
- **Remote Control:** Keep the remote control away from children.

## 3. PACKAGE CONTENTS

---

Verify that all components are present before beginning installation:

- Fan Motor Assembly
- Fan Blades (3 Solid Wood Blades)
- Mounting Bracket
- Downrods (5" x1, 10" x1)

- Canopy
- Canopy Cover
- Yoke Cover
- Suspension Ball
- Remote Control
- Receiver
- Hardware Pack (screws, pins, etc.)



Image: All components of the BOJUE 60 Inch Ceiling Fan, including the three solid wood blades, motor, mounting hardware, and remote control, laid out for inspection.

## 4. INSTALLATION

Follow these steps carefully for proper installation. Refer to the provided video for visual guidance.

Your browser does not support the video tag.

Video: Official installation instructions for the BOJUE wood ceiling fan, demonstrating each step of the assembly and mounting process.

### 4.1 Mounting Bracket Installation

1. Ensure power is disconnected at the circuit breaker.
2. Mark the positions for the explosion screws (95-105mm apart) on the ceiling.
3. Drill pilot holes and insert the explosion screws.
4. Secure the mounting bracket to the ceiling using the explosion screws. Ensure it is firmly attached.



Image: Diagram showing the installation of the mounting bracket to the ceiling, including the placement of explosion screws and electrical wires.

#### 4.2 Downrod and Suspension Ball Assembly

1. Select the appropriate downrod (5" for low ceilings, 10" for medium to high ceilings).
2. Insert the downrod into the suspension ball.
3. Align the holes and insert the pin through the downrod and suspension ball.
4. Secure the pin with the provided screw.



Image: Close-up view of the downrod and suspension ball assembly, showing the pin and screw for secure attachment.

#### 4.3 Fan Blade Attachment

1. Attach each of the three solid wood fan blades to the motor assembly using the blade screws (X6).

2. Ensure all screws are tightened securely.



Image: Illustration demonstrating how to attach the fan blades to the motor assembly using screws.

#### 4.4 Wiring the Receiver

1. Connect the motor cord (pink, gray, red wires) to the receiver.
2. Connect the power cord (black, white, green wires) from the ceiling to the receiver.
3. Ensure all connections are secure and insulated.



Image: DC Wiring diagram showing connections between the motor, receiver, and power supply from the ceiling.

#### 4.5 Final Assembly

1. Carefully lift the fan assembly and hang the suspension ball into the mounting bracket.
2. Slide the yoke cover and canopy cover up the downrod.
3. Secure the canopy to the mounting bracket with screws.
4. Restore power at the circuit breaker.

### 5. OPERATION

---

Your BOJUE ceiling fan is operated using the included remote control. Ensure the wall switch (if present) is in the "ON" position for remote functionality.

- **Power On/Off:** Press the power button ( ) to turn the fan on or off.
- **Speed Control:** The fan has 6 adjustable speeds. Use buttons 1-6 to select your desired speed. (1-2

for sleep, 2-4 for general use, 5-6 for maximum airflow).

- **Timer Function:** Set the fan to turn off automatically after 1, 4, or 8 hours using the respective buttons.
- **Forward/Reverse Function (F/R):** Press the F/R button to change the direction of the fan blades.
  - **Downward Airflow (Summer Mode):** Blades rotate counter-clockwise, creating a cooling breeze.
  - **Upward Airflow (Winter Mode):** Blades rotate clockwise, circulating warm air trapped near the ceiling.
- **Quiet Operation:** The DC motor ensures stable, energy-efficient, and noiseless operation.



Image: The remote control for the BOJUE ceiling fan, highlighting buttons for power, speed settings (1-6), timer (1H, 4H, 8H), and forward/reverse function.

# DISEÑO EN SENTIDO DIRECTO E INVERSO

Verano Adelante, Invierno Atrás



Image: Illustration demonstrating the two modes of airflow: downward for cooling (summer) and upward for circulating warm air (winter).

## 6. MAINTENANCE

- **Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Blade Care:** The solid wood blades are durable. Avoid harsh chemicals that could damage the wood finish.
- **Annual Check:** Periodically check all connections and screws for tightness. Ensure the mounting hardware remains secure.
- **No Lubrication Needed:** The motor is permanently lubricated and does not require oiling.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low.	Check circuit breaker and wall switch. Ensure all wiring connections are secure. Replace remote control batteries.

Problem	Possible Cause	Solution
Fan makes noise	Loose screws on fan blades or mounting bracket; Fan not properly balanced.	Tighten all screws. Ensure blades are securely attached. Check for proper fan balance.
Remote control not working	Battery low or incorrectly inserted; Receiver not properly connected.	Replace batteries, ensuring correct polarity. Check receiver wiring connections.

## 8. SPECIFICATIONS

Feature	Detail
Brand	BOJUE
Model Number	HH60SHDG1615
Size	60 inch
Color	Black
Number of Blades	3
Blade Material	Wood
Motor Type	DC Motor (40W pure copper)
Number of Speeds	6
Control Method	Remote Control
Special Features	Reversible, Timer (1-2-4-8 hours)
Noise Level	20 Decibels
Air Flow Capacity	4632 Cubic Feet Per Minute
Voltage	110 Volts
Indoor/Outdoor Usage	Indoor, Outdoor
Product Dimensions	59.84"D x 59.84"W x 14.96"H
Item Weight	12 Pounds

## 9. WARRANTY AND SUPPORT

BOJUE is committed to user satisfaction and provides comprehensive after-sales service.

- **Motor Warranty:** The motor is guaranteed for 10 years.
- **Whole Fan Warranty:** The entire fan is covered by a 2-year warranty.
- **Remote Replacement:** If your remote control is lost or damaged, a free replacement service is provided within three years of purchase.
- **Contact Support:** For any questions or assistance, please contact BOJUE customer service.

