



Manuals.plus /

- › RESUXI /
- › RESUXI Professional Hair Clippers User Manual

RESUXI 730

RESUXI Professional Hair Clippers, Trimmer & Shaver Set

Model: 730 | Brand: RESUXI

INTRODUCTION

Thank you for choosing the RESUXI Professional 3-in-1 Men's Grooming Set. This versatile kit combines a powerful hair clipper, a precise T-blade trimmer, and an efficient electric shaver, designed to meet all your hair cutting and grooming needs. With high-performance motors and long-lasting batteries, this set provides a professional-grade experience for home use or travel.



Image: The complete RESUXI Professional 3-in-1 Hair Grooming Set, featuring the hair clipper, T-blade trimmer, and electric shaver, along with various accessories.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Cordless Hair Clipper
- 1 x T-Blade Hair Trimmer
- 1 x Electric Hair Shaver
- 1 x Barber Apron
- 1 x USB Charging Cord (for clipper)
- 1 x USB Charging Cord (for trimmer)
- 1 x USB Charging Cord (for shaver)
- 1 x Cleaning Brush
- 1 x Oil Bottle

- 8 x Premium Clipper Guard Combs (various sizes)
- 4 x Trimmer Guard Combs (various sizes)

IN THE PACKAGE



Image: A detailed view of all items included in the RESUXI grooming kit, neatly arranged, showing the three main devices, charging cables, cleaning tools, and various guide combs.

IMPORTANT SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please read and adhere to the following safety guidelines:

- Always **unplug the device before cleaning** or performing any maintenance.
- Keep blades clean and **oiled regularly** to ensure optimal performance and longevity.
- **Do not use near water** or immerse any part of the device in water.
- **Supervise children** when using the kit to prevent accidents.
- Use only the provided charging cords.
- Do not disassemble the device. Contact customer support for repairs.

SETUP

1. Initial Charging

Before first use, fully charge each device. The ultra-clear LED display will show the remaining charge. A full charge takes approximately 2.5 hours for the clipper, 2.0 hours for the trimmer, and 1.5 hours for the shaver.



HAIR CLIPPER

6500 PRM
POWERFUL POWER

1800mAh

Lithium battery

2.5 hrs Charging time	2.5 hrs Using time
------------------------------------	---------------------------------

MINIMUM CLEARANCE 0.5MM

MAXIMUM CLEARANCE 3.5MM

100
POWER LEFT

Image: The hair clipper displaying '100' on its LCD screen, indicating a full charge, with details on battery capacity and charging time.

HAIR TRIMMER

6500 PRM
POWERFUL POWER

Lithium battery

1500mAh

2.0


hrs

Charging time

2.0

hrs

Using time

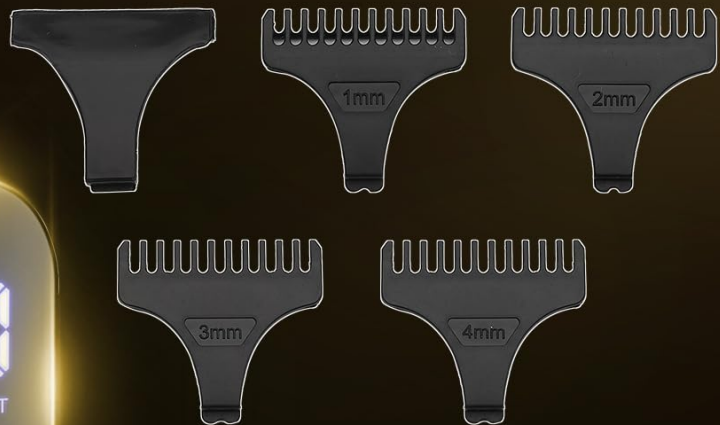

4 TYPES OF LIMIT COMBS



Image: The T-blade hair trimmer displaying '100' on its LCD screen, indicating a full charge, with details on battery capacity and charging time.

HAIR SHAVER

8800 PRM
POWERFUL POWER

Lithium battery

600mAh

1.5
hrs
Charging time

1.0
hrs
Using time



Image: The electric shaver displaying '100' on its LCD screen, indicating a full charge, with details on battery capacity and charging time.

2. Initial Oiling

Before the very first use, apply a few drops of the included oil to the blades of the hair clipper and T-blade trimmer. Turn the device on for a few seconds to allow the oil to distribute evenly. This ensures smooth operation and extends blade life.

OPERATING INSTRUCTIONS

This 3-in-1 grooming set offers versatile functionality for various hair cutting and shaving needs.

PROFESSIONAL HAIR CLIPPER & HAIR TRIMMER & HAIR SHAVER ALL IN 1

HAIR
HAIR CLIPPER

HAIR ENDS
HAIR SHAVER



SIDEBURNS
HAIR TRIMMER

Image: Visual representation of the 3-in-1 functionality, showing the hair clipper for general hair cutting, the T-blade trimmer for sideburns and detailing, and the electric shaver for hair ends and smooth finishes.

1. Using the Hair Clipper

The hair clipper is designed for efficient cutting of all hair types and lengths. It features a 5-gear adjustable blade (0.5mm to 3.5mm) for precise length control.

- **Attach a Guide Comb:** Select the desired length from the 8 included premium guard combs and securely attach it to the clipper head.
- **Adjust Blade Length:** Use the fine adjustment lever on the side of the clipper to set the blade to your preferred cutting length (0.5mm, 1.2mm, 2.0mm, 2.8mm, 3.5mm).
- **Start Clipping:** Turn on the clipper and move it against the direction of hair growth for an even cut.

Fixed blade 5-speed fine adjustment

Single finger free control



1st
gear

0.5mm

2nd
gear

1.2mm

3rd
gear

2.0mm

4th
gear

2.8mm

5th
gear

3.5mm



5-section millimeter level
short hair finishing

Image: Close-up of the hair clipper demonstrating its 5-speed fixed blade fine adjustment lever, showing settings from 0.5mm to 3.5mm.

2. Using the T-Blade Trimmer

The T-blade trimmer is ideal for precise trimming, grooming, detailing sideburns, necklines, and beard lines. It comes with 4 trimmer guard combs for various styles.

- **Select Comb (Optional):** For longer trim lengths, attach one of the 4 trimmer guard combs (1mm, 2mm, 3mm, 4mm). For zero-gap trimming, use without a comb.
- **Precise Trimming:** Turn on the trimmer and carefully outline or trim areas requiring precision, such as beard edges or necklines.

3. Using the Electric Shaver

The electric shaver is designed for a close, smooth shave, working effectively on dense, short, and thick hair.

- **Prepare Area:** For best results, use the shaver on clean, dry skin. For longer hair, it is recommended to cut short with the clipper or trimmer first.

- **Shave Smoothly:** Turn on the shaver and gently glide it across the skin in short, circular, or linear motions, ensuring the ultra-thin blade mesh makes contact for a close shave.

MAINTENANCE

1. Cleaning

Regular cleaning ensures optimal performance and hygiene.

- **After Each Use:** Turn off and unplug the device. Use the included cleaning brush to remove hair clippings from the blades and cutting head.
- **Deep Cleaning:** Periodically, remove the blade assembly (refer to user manual for specific instructions for each device) and thoroughly clean all hair and debris.

2. Oiling Blades

To maintain blade sharpness and smooth operation, oil the blades regularly.

- Apply 1-2 drops of the included oil to the top of the blades after every few uses or when the device feels sluggish.
- Turn on the device for a few seconds to distribute the oil.

3. Storage

Store the grooming set in a cool, dry place, away from direct sunlight and moisture. Keep all components, especially the guide combs and charging cords, organized to prevent damage.

TROUBLESHOOTING

If you encounter any issues, please refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Device not turning on	Low battery; Device not charged	Charge the device fully using the provided USB cord.
Blades pulling hair	Blades are dull or not oiled; Hair buildup	Clean and oil the blades. If problem persists, blades may need replacement.
Reduced cutting performance	Hair buildup in blades; Insufficient oiling	Clean the blades thoroughly and apply oil.
Device making unusual noise	Lack of lubrication; Internal issue	Apply oil to blades. If noise continues, discontinue use and contact support.
LCD display not working	Device malfunction	Ensure device is charged. If issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	RESUXI
Model Name	RESUXI
Item Model Number	730
Battery Type	Lithium-Ion
Clipper Battery Capacity	1800mAh
Trimmer Battery Capacity	1500mAh
Shaver Battery Capacity	600mAh
Clipper Charging Time	2.5 Hours
Trimmer Charging Time	2.0 Hours
Shaver Charging Time	1.5 Hours
Clipper Cordless Use Time	150 minutes
Trimmer Cordless Use Time	120 minutes
Shaver Cordless Use Time	60 minutes
Clipper Motor Speed	6500 RPM
Trimmer Motor Speed	6500 RPM
Shaver Motor Speed	8800 RPM
Blade Material	Carbon Steel
Clipper Adjustment Lever	0.5mm - 3.5mm
Included Components	Hair Clipper, Hair Trimmer, Hair Shaver, Barber Apron, USB Cords, Cleaning Brush, Oil Bottle, Guide Combs
Manufacturer	RESUXI
Country of Origin	China

WARRANTY AND SUPPORT

Your RESUXI Professional Hair Clippers, Trimmer & Shaver Set is covered by a manufacturer's warranty. For detailed warranty information, product support, or to inquire about replacement parts, please contact RESUXI customer service through the retailer where you purchased the product or visit the official RESUXI website. Always refer to the official RESUXI website or contact customer support for the most up-to-date information regarding product care, troubleshooting, and warranty claims.