

IsEasy TF2375A1

IsEasy 30-Inch Under Cabinet Range Hood

MODEL: TF2375A1 USER MANUAL

1. Introduction

Thank you for choosing the IsEasy 30-Inch Under Cabinet Range Hood. This manual provides essential information for the safe installation, operation, and maintenance of your new appliance. Please read these instructions thoroughly before use and retain them for future reference.

2. Safety Information

To reduce the risk of fire, electric shock, or injury, observe the following:

- Install this range hood in accordance with all specified instructions.
- Ensure the electrical supply matches the rating label on the appliance.
- Always disconnect power before servicing or cleaning the unit.
- Do not operate the range hood if the power cord is damaged.
- Clean grease filters regularly to prevent grease accumulation and fire hazards.
- Never leave cooking food unattended.
- This appliance is for household use only.

3. Package Contents

Verify that all components are present in the package:

- IsEasy 30-Inch Range Hood Unit
- Aluminium Ventilation Hose
- 2 x Charcoal Filters (for ductless operation)
- Mounting Screws
- User Manual/Installation Paper
- Vent Cover

- Damper



Image: Packing list showing the range hood, user manual, screws, exhaust pipe, vent cover, damper, and charcoal filters.

4. Specifications

Feature	Specification
Model	TF2375A1
Air Flow Capacity	200-250 Cubic Feet Per Minute (CFM)
Material	Stainless Steel
Mounting Type	Under Cabinet Mount
Controls Type	Push Button
Number of Speeds	3
Item Weight	15.4 Pounds
Light Source Type	LED (1x 2W)
Filter Type	3-Layer Aluminum Mesh, Activated Carbon Cotton Composite
Ventilation Type	Ducted / Ductless Convertible
Product Dimensions (L x W x H)	29.5" x 18.9" x 3.9"
Special Features	430 Stainless Steel, LED Lighting, Mechanical Push Button Control



Image: Diagram illustrating the dimensions of the IsEasy 30-inch range hood: 29.5 inches long, 18.9 inches wide, and 3.9 inches high.

5. Setup and Installation

The IsEasy range hood can be installed in either ducted (external venting) or ductless (recirculation) mode. Choose the appropriate method for your kitchen setup.

5.1 Ducted Operation (Extraction Mode)

This mode vents cooking fumes and odors outside your home through a duct system.

1. **Prepare the Vent:** Ensure a suitable duct opening is available in your cabinet or wall.
2. **Mount the Hood:** Secure the range hood under the cabinet using the provided mounting screws.
3. **Connect Air Outlet:** Turn the adjuster on the vent cover to the Extraction Mode. Connect the air outlet to the top vent of the hood.
4. **Attach Duct Hose:** Fix the aluminum ventilation hose to the air outlet, ensuring a secure and airtight connection.
5. **Electrical Connection:** Connect the range hood to a grounded electrical outlet.



Image: Three-step visual guide for ducted operation: 1. Turn adjuster to Extraction Mode. 2. Connect air outlet to top vent. 3. Fix exhaust pipe to air outlet.

5.2 Ductless Operation (Recirculation Mode)

This mode filters cooking fumes through charcoal filters and recirculates purified air back into the kitchen.

1. **Mount the Hood:** Secure the range hood under the cabinet using the provided mounting screws.
2. **Install Charcoal Filters:** Turn the adjuster on the vent cover to the Recirculation Mode. Fix the charcoal filters into the unit. Ensure they are properly seated.
3. **Install Vent Cap:** Plug the vent on the top of the hood with the vent cap.
4. **Electrical Connection:** Connect the range hood to a grounded electrical outlet.



Image: Three-step visual guide for ductless operation: 1. Turn adjuster to Recirculation Mode. 2. Fix the charcoal filter into the unit. 3. Plug the top vent with the vent cap.



Image: Comparison of Recirculation Mode (ductless, with carbon filter) and Extraction Mode (ducted, with duct hose) for the range hood.

6. Operating Instructions

The IsEasy range hood features intuitive push-button controls for fan speed and lighting.

6.1 Control Panel



Image: A hand pressing one of the push buttons on the range hood control panel, which features buttons for power, three fan speeds (Low, Medium, High), and LED light.

- **Power Button (U):** Press to turn the range hood on or off.
- **Fan Speed Buttons (1, 2, 3):** Select desired fan speed: 1 (Low), 2 (Medium), or 3 (High). Adjust based on cooking intensity.
- **Light Button (O):** Press to turn the LED cooking light on or off.

6.2 LED Lighting

The integrated LED light provides illumination for your cooking area, enhancing visibility.



Image: The IsEasy range hood with its LED light illuminated, providing bright light over a stovetop in a kitchen setting.

7. Maintenance

Regular maintenance ensures optimal performance and longevity of your range hood.

7.1 Cleaning Aluminum Mesh Filters

The 3-layer aluminum mesh filters trap grease and should be cleaned regularly (monthly or more frequently depending on cooking habits).

1. **Remove Filters:** Locate the quick-release switches on the filters and gently pull them down to remove.
2. **Clean Filters:** The filters are dishwasher safe. Alternatively, wash them by hand in warm water with a

mild detergent. Rinse thoroughly.

3. **Dry and Reinstall:** Allow filters to dry completely before reinstalling them into the range hood.



Image: A visual guide showing how to clean the removable 3-layer aluminum filter, highlighting easy cleaning, rust resistance, and dishwasher-safe features.

7.2 Replacing Charcoal Filters (Ductless Mode Only)

Charcoal filters are not washable and must be replaced every 3-6 months, depending on usage.

1. **Remove Old Filters:** Disconnect power. Remove the aluminum mesh filters. Gently twist and remove the old charcoal filters.
2. **Install New Filters:** Align the new charcoal filters with the motor housing and twist to lock them into place.
3. **Reinstall Mesh Filters:** Reinstall the aluminum mesh filters.



Image: A detailed view of a circular charcoal filter, illustrating its function in trapping odors and impurities from the air.

7.3 Cleaning Exterior Surfaces

Wipe the stainless steel exterior with a soft cloth and a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive pads.

8. Troubleshooting

Refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Range hood does not operate	No power supply	Check power cord connection and circuit breaker.
Weak suction	Clogged grease filters	Clean or replace grease filters.
Weak suction	Improper ducting (ducted mode)	Ensure ducting is correctly installed and free of obstructions.
Weak suction	Worn out charcoal filters (ductless mode)	Replace charcoal filters.
Lights not working	Faulty LED bulb	Contact customer support for replacement.
Excessive noise	Loose parts or motor issue	Ensure all mounting screws are tight. If noise persists, contact customer support.

9. Warranty and Support

IsEasy is committed to providing quality products and excellent service.

9.1 Warranty Information

This IsEasy range hood comes with a **2-year limited warranty** against any defects in materials and workmanship. Please retain your proof of purchase for warranty claims.



Image: Icons representing ETL certification, 1-year warranty (note: product description states 2-year warranty), US warehouse location, and 100% customer satisfaction.

9.2 Customer Support

If you have any questions, require assistance, or need to make a warranty claim, please contact our professional support service team. We are ready to help and will respond within 24 hours.

Email: service@iseasy.com



Image: A group of professionals in a meeting, symbolizing the IsEasy professional support service team available to assist customers.