

[Manuals.plus](#) /

› [VASAGLE](#) /

› VASAGLE Electric Height Adjustable Desk User Manual

VASAGLE LSD174X01

VASAGLE Electric Height Adjustable Desk

Model: LSD174X01 | Brand: VASAGLE

INTRODUCTION

Thank you for choosing the VASAGLE Electric Height Adjustable Desk. This manual provides essential information for the safe assembly, operation, and maintenance of your new desk. Designed for versatility and comfort, this desk features stepless height adjustment, a memory function for preferred heights, and a robust construction to support your workspace needs. Please read this manual thoroughly before use and retain it for future reference.



Image: The VASAGLE Electric Height Adjustable Desk, showcasing its spacious tabletop, sturdy legs, and integrated storage solutions, set up with a laptop, dual monitors, and various office accessories.

IMPORTANT SAFETY INFORMATION


To ensure safe operation and prevent damage, please adhere to the following safety guidelines:

- Do not place the table directly against a wall when lifting or lowering to prevent scratches or damage to the wall or desk.
- This desk is intended for indoor use only. Avoid exposure to moisture or extreme temperatures.
- Keep all electrical components, including the adapter and controller, away from liquids to prevent electric shock or malfunction.
- If the desk is operated continuously for 2 minutes (lifting or lowering), the overheating protection will automatically activate. You must wait 18 minutes before resuming height adjustment.

- To protect the worktop from bumps and scratches, adjust the built-in anti-collision sensor to a higher sensitivity setting to better detect solid objects during height adjustment.
- Do not disassemble any parts of this table without expert advice or referring to the detailed assembly instructions.
- Do not place heavy objects exceeding the maximum load capacity of 80 kg (176 lbs) on the desk. Overloading can cause damage or instability.
- Do not use sockets or adapters with excessively high voltage, as this can damage the electrical components.
- Ensure all cables are properly routed and secured to prevent tripping hazards or damage during height adjustment.

Diseño personalizado

El mecanismo de ajuste de altura se detiene y se retrae ligeramente cuando encuentra un obstáculo duro

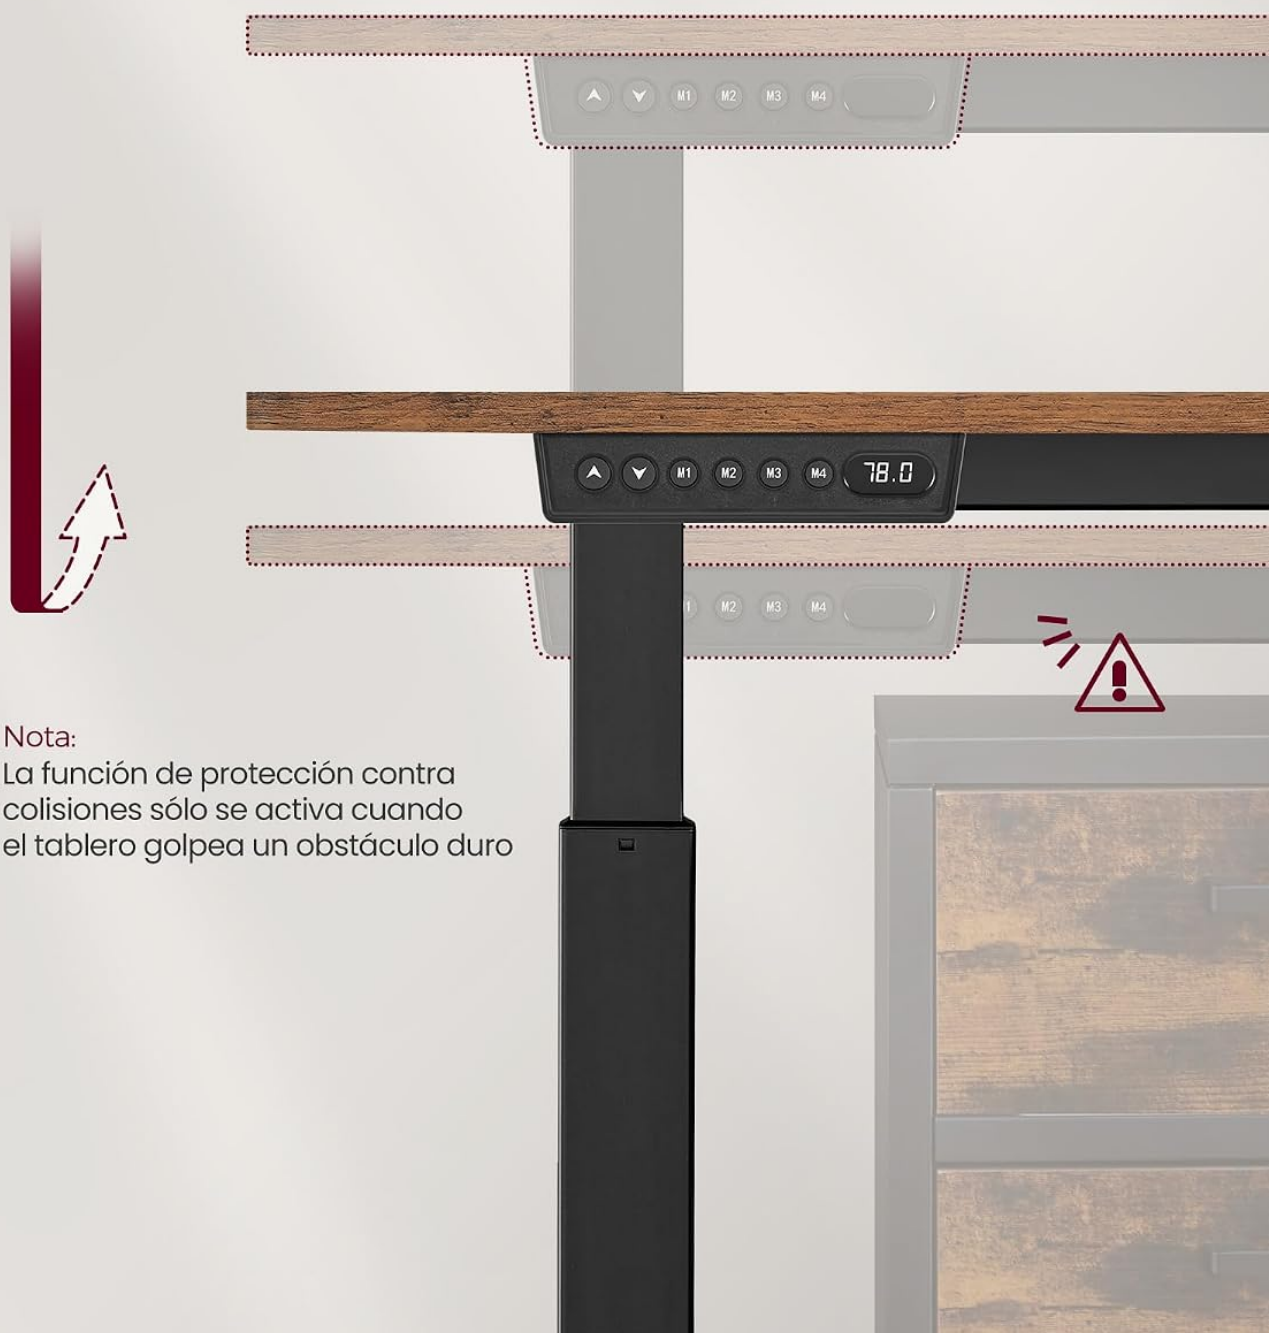

Nota:

La función de protección contra colisiones sólo se activa cuando el tablero golpea un obstáculo duro

Image: Illustration of the desk's anti-collision mechanism, showing how the desk stops and retracts slightly when encountering an obstacle during height adjustment.

PACKAGE CONTENTS

Please check the package contents carefully against the list below. If any items are missing or damaged, please contact customer support immediately.

- 1 x Electric Desk Frame and Tabletop
- 1 x Power Adapter
- 1 x Multifunction Controller
- 1 x Fabric Organizer (reversible)
- 1 x Double Hook
- 1 x Accessory Package (screws, tools, etc.)
- 1 x User Manual (this document)

SETUP AND ASSEMBLY

Assembly of the VASAGLE Electric Height Adjustable Desk requires careful attention to detail. Please follow the step-by-step instructions provided in the included accessory package manual. Ensure all components are correctly aligned and securely fastened before connecting to power.

Key Assembly Steps:

1. Unpack all components and verify against the package contents list.
2. Assemble the desk frame according to the diagrams, ensuring the two support posts are securely attached.
3. Attach the tabletop to the assembled frame.
4. Install the multifunction controller and route all cables neatly.
5. Choose between installing the adjustable feet or the universal wheels based on your preference.
6. Attach the fabric organizer and double hook to the desired side of the desk.

Construcción robusta

Capacidad de carga de hasta **80 kg**



360°



Opción A: Colocar ruedas universales



Opción B: Colocar Pies ajustables

Image: Detailed view of the desk's robust construction, highlighting the two support posts and the options for installing either adjustable feet or universal wheels for mobility.

OPERATING INSTRUCTIONS

Your VASAGLE Electric Height Adjustable Desk offers intuitive controls for seamless height adjustments and convenient features.

Multifunction Controller:



Image: Close-up of the desk's multifunction controller, showing the USB charging port, height adjustment buttons (up/down), four memory preset buttons (M1-M4), and the LED display for current height.

- **Height Adjustment:** Use the **Up** (▲) and **Down** (▼) buttons to smoothly adjust the desk height between 72 cm and

120 cm. The current height is displayed on the LED screen.

- **Memory Function:** The controller allows you to save up to 4 preferred height settings.
 - a. Adjust the desk to your desired height.
 - b. Press the "**M**" button, then press one of the memory preset buttons **M1, M2, M3, or M4** within 3 seconds. The height is now saved to that preset.
 - c. To recall a saved height, simply press the corresponding memory preset button **M1, M2, M3, or M4**. The desk will automatically move to the saved position.
- **USB Charging Port:** A convenient USB port is integrated into the controller for charging your mobile phone or other small electronic devices.
- **Anti-Collision Feature:** For safety, the height adjustment mechanism will stop and slightly retract if it encounters a hard obstacle during movement. This helps prevent damage to the desk or objects.

Integrated Organizer and Hooks:

Organizador de tela flexible

Intercambiable a izquierda o derecha



Cuadernos



Bolígrafos



Prácticos ganchos

Espacio adicional para colgar diversos objetos



Auriculares



Bolsos



Cable de carga



*Image: The flexible fabric organizer, which can be attached to either the left or right side of the desk, shown holding notebooks and pens.
Below, the practical double hook is displayed, suitable for hanging headphones, bags, or charging cables.*

- **Fabric Organizer:** The reversible fabric organizer can be attached to either the left or right side of the desk, providing convenient storage for books, stationery, and other small items, helping to keep your workspace tidy.
- **Double Hook:** Use the included double hook to hang headphones, bags, or charging cables, keeping them easily accessible and off your desk surface.

MAINTENANCE

Regular maintenance will help prolong the life and performance of your VASAGLE Electric Height Adjustable Desk.

- **Cleaning:** Wipe the desk surface and frame with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners that could damage the finish. Ensure no liquids enter the electrical components.
- **Electrical Components:** Periodically check the power cord and adapter for any signs of damage. If damage is found, discontinue use and contact customer support. Keep all electrical parts dry and free from dust.
- **Moving Parts:** The lifting mechanism is designed for smooth operation. Avoid placing excessive lateral force on the desk while it is moving. No lubrication is typically required for the lifting columns.
- **Fasteners:** Occasionally check all screws and fasteners to ensure they remain tight. Retighten if necessary.

TROUBLESHOOTING

If you encounter issues with your desk, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Desk does not move or respond to controls.	Power connection issue; Overheating protection activated; Cable disconnected.	Ensure the power adapter is securely plugged into both the desk and a working wall outlet. If the desk was operated for more than 2 minutes continuously, wait 18 minutes for the overheating protection to reset. Check all cables connecting the controller to the desk frame for secure connections.
Desk stops unexpectedly during adjustment.	Anti-collision sensor triggered; Obstruction in path.	Remove any objects obstructing the desk's path. If the sensor is too sensitive, refer to the detailed manual for instructions on adjusting its sensitivity.
Desk height display shows an error code (if applicable).	System malfunction; Sensor error.	Unplug the desk from power for 10-15 minutes, then plug it back in to reset the system. If the error persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	LSD174X01

Feature	Detail
Brand	VASAGLE
Dimensions (D x W x H)	60 x 140 x (72-120) cm (23.6" x 55.1" x 28.3"-47.2")
Height Adjustment Range	72 cm - 120 cm (28.3" - 47.2")
Max. Static Load Capacity	80 kg (176 lbs)
Materials	Wood Particle Board, Steel, Oxford Fabric
Color	Vintage Brown
Noise Level (during adjustment)	< 50 dB
Adjustment Speed	35 mm/s
Special Features	Electric Height Adjustment, 4-Height Memory Presets, USB Charging Port, Anti-Collision System, Reversible Fabric Organizer, Double Hook



2 postes de soporte

Robusto y estable

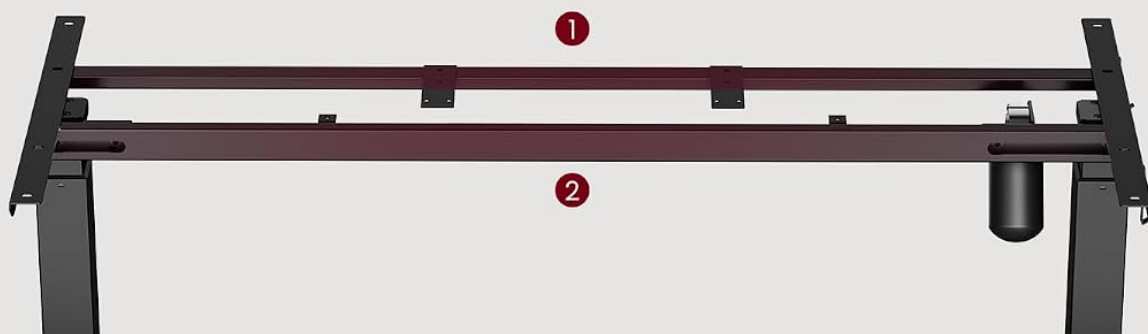


Image: Technical diagram illustrating the key dimensions of the desk, including tabletop length (140 cm), width (60 cm), and adjustable height range (72-120 cm).

Gran ajuste de altura

Alterna entre estar de pie y sentado para una postura saludable

Mín. **72 cm**

Máx. **120 cm**



Nivel de ruido
< 50 dB



Velocidad de ajuste
35 mm/s



Motor de alta calidad

Image: Visual representation of the desk's height adjustment capabilities (Min. 72 cm, Max. 120 cm), along with icons indicating a noise level below 50 dB, an adjustment speed of 35 mm/s, and a high-quality motor.

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included in your accessory package or visit the official VASAGLE website. If you require technical support, have questions about assembly, or need to report a missing/damaged part, please contact VASAGLE customer service through their official channels. Please have your model number (LSD174X01) and purchase details ready when contacting support.

You can often find support contact information on the brand's official website: [VASAGLE Official Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What should I do if the control panel on my VASAGLE Electric Standing Desk (LSD174X01) is unresponsive despite being plugged in?

If your VASAGLE Electric Standing Desk control panel is unresponsive after you have confirmed the power socket and cables are secure, please try the following steps based on the manual's troubleshooting guide: Check for Overheating:...

[Read full answer](#)